

MOOKA I3

MOOKA I3 Robot Vacuum Cleaner User Manual

Model: I3
Brand: MOOKA

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using this product and keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for indoor use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Supervise children and pets when the vacuum is operating.
- Do not use the vacuum cleaner to pick up large objects, sharp objects, or liquids.
- Ensure the charging base is placed against a wall in an open area, free from obstacles.
- Do not handle the charging base or vacuum cleaner with wet hands.
- Turn off the power switch and unplug the charging base before cleaning or performing maintenance.
- Use only the original power adapter and charging base provided by MOOKA.
- If the power cord is damaged, it must be replaced by the manufacturer or a qualified service agent to avoid hazards.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your MOOKA I3 Robot Vacuum Cleaner.

2.1 Robot Vacuum Cleaner



The main unit of the MOOKA I3 Robot Vacuum Cleaner features a sleek, low-profile design allowing it to clean under furniture. It is equipped with various sensors for navigation and cleaning.

ENJOY SMART CLEANING

This robot can think like humans to clean the whole house automatically.



EYES
Laser Distance
Sensors



SENSORS
Countless Sensors
Around it



BRAIN
The Most Ad-
vanced Processor



THINKING
Precise SLAM
algorithm



The robot utilizes laser distance sensors, numerous other sensors, and an advanced processor for intelligent navigation and cleaning. It employs a precise SLAM algorithm for efficient path planning.

SUPER CLEANING ABILITY

Bring you a clean and warm house, won't feel dusty when your bare feet are on the floor.



3-Point Cleaning System



80% Higher Suction



Floating Main Brush



The underside reveals a 3-point cleaning system, including dual side brushes, a floating main brush, and powerful suction for effective debris collection from various surfaces.

2.2 Remote Control

WORRY FREE CLEANING

Automatically return to charge when in low battery status, and then back to work from the breakpoint again.



Work Again from
the breakpoint



Self Recharging



The remote control allows you to operate the vacuum cleaner from a distance, select cleaning modes, set schedules, and direct the robot manually. It requires 2 AAA batteries (not included).

2.3 Charging Base

The charging base serves as the robot's home station, where it automatically returns to recharge when its battery is low or after completing a cleaning cycle. It connects to an AC power adapter.

2.4 Included Accessories




Charging Dock
DC adapter included



2600mAh Li-ion
Recharging & Recycle battery



Filter
With a filter replacement

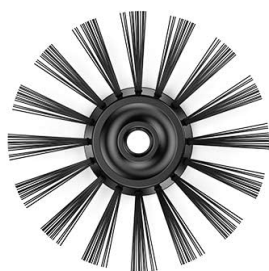

Side Brushes*2
Replace the side brushes when in bad



Remote Controller
2×AAA batteries needed
not included



Extra Cleaning Tools
1 × Cleaning Brush
1 × Screwdriver

The package includes the following items:

- MOOKA I3 Robot Vacuum Cleaner
- Remote Control (2 AAA batteries not included)
- Charging Base
- AC Power Adapter
- HEPA-style Filter (1 pre-installed, 1 replacement)
- Side Brushes (2 pairs)
- Cleaning Brush
- Screwdriver
- Instruction Manual

3. GETTING STARTED

3.1 Unboxing

Carefully remove all components from the packaging. Retain the packaging for future transport or storage.

3.2 Charging Base Placement

Place the charging base against a wall in an open, uncluttered area. Ensure there is at least 1 meter (3

feet) of clear space to the front and 0.5 meters (1.5 feet) to each side of the charging base. Plug the AC power adapter into the charging base and then into a wall outlet. The indicator light on the charging base will illuminate.

3.3 Initial Charging

THE MOST ADVANCED CLEANING ROBOT

This multifunction robot brings you a perfect intelligent cleaning experience.



Auto Cleaning



Anti-Drop Sensors



Smart Anti-Collision



Time Setting



Before first use, fully charge the robot vacuum cleaner. Place the robot onto the charging base, ensuring the charging contacts align. The robot will emit a sound and the indicator light will show charging status. A full charge typically takes 3 to 5 hours. The robot features a 2600mAh Lithium-ion battery, providing approximately 100-120 minutes of cleaning time on a full charge.

HIGH CAPACITY LI-ION BATTERY - 2600mAh

Recharging & Recycle 2600mAh Li-ion battery, work up to 120 minutes continuously.



The robot is designed to automatically return to its charging base when the battery is low, ensuring it is always ready for the next cleaning cycle.

3.4 Installing Side Brushes

Attach the side brushes by pressing them onto the posts on the underside of the robot until they click into place. Ensure they are securely fastened.

4. OPERATING THE ROBOT VACUUM

4.1 Powering On/Off

- **To Power On:** Press the power button on the robot or the remote control. The indicator light will illuminate.
- **To Power Off:** Press and hold the power button on the robot until the indicator light turns off, or use the power button on the remote control.

4.2 Cleaning Modes

The MOOKA I3 offers multiple cleaning modes to suit different needs:

- **Auto Cleaning:** The robot automatically navigates and cleans the entire floor area. This is the default mode.

- **Spot Cleaning:** The robot cleans a concentrated area in a spiral pattern, ideal for small spills or heavily soiled spots.
- **Edge Cleaning:** The robot cleans along walls and furniture edges to ensure thorough coverage.
- **Single Room Cleaning:** The robot cleans a specific room and then returns to its charging base.

4.3 Scheduling Cleaning

You can program the robot to clean automatically at a specific time each day (Daily Cycle Cleaning). Refer to the remote control section for detailed instructions on setting the time and schedule.

4.4 Using the Remote Control

The remote control provides convenient access to all functions. Insert 2 AAA batteries into the remote control before use. The remote control distance is approximately 7 meters.

- **Power Button:** Turns the robot on or off.
- **Directional Buttons:** Manually steer the robot.
- **Home Button:** Sends the robot back to the charging base.
- **Mode Selection Buttons:** Select Auto, Spot, Edge, or Single Room cleaning modes.
- **Schedule Button:** Set or cancel daily cleaning schedules.
- **Time Setting:** Adjust the current time on the robot.

5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your MOOKA I3 Robot Vacuum Cleaner.

5.1 Emptying the Dust Bin

The dust bin should be emptied after each cleaning cycle or when the 'full' indicator (if available) illuminates. Press the dust bin release button, remove the bin, and empty its contents into a trash receptacle.

5.2 Cleaning the HEPA Filter

Remove the HEPA filter from the dust bin. Tap it gently over a trash can to remove loose debris. The filter can be rinsed with water; ensure it is completely dry before reinserting. Replace the HEPA filter every 3-6 months, or as needed, to maintain suction performance.

5.3 Cleaning the Side Brushes and Main Brush

Periodically check the side brushes and main brush for tangled hair or debris. Use the provided cleaning tool or a pair of scissors to cut and remove any tangled hair. The side brushes can be pulled off for easier cleaning and replaced if worn.

5.4 Cleaning Sensors

Wipe the anti-drop sensors, anti-collision sensors, and charging contacts on the robot and charging base with a clean, dry cloth. Keep these sensors clear of dust and debris for proper operation.

6. TROUBLESHOOTING

If you encounter issues with your MOOKA I3, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery; Power switch off.	Charge the robot; Turn on the main power switch.
Robot does not charge.	Charging contacts dirty; Charging base not powered; Robot not aligned.	Clean charging contacts; Ensure charging base is plugged in; Realign robot on base.
Robot gets stuck frequently.	Obstacles (cables, rugs); Sensors dirty.	Clear obstacles; Clean sensors.
Poor cleaning performance.	Dust bin full; Filter clogged; Brushes tangled/worn.	Empty dust bin; Clean/replace filter; Clean/replace brushes.
Robot does not return to charging base.	Charging base obstructed; Robot too far from base.	Ensure clear path to base; Manually place robot closer to base.

7. TECHNICAL SPECIFICATIONS

Below are the technical specifications for the MOOKA I3 Robot Vacuum Cleaner:

Feature	Specification
Model	I3
Color	Black
Suction Option	Direct Suction (Brushless Suction)
Cleaning Modes	Auto, Edge, Spot, Single Room
Filter Type	High-efficiency HEPA filter
Side Brushes	Dual
Working Voltage	DC 14.8V
Rated Power	24W
Battery Type	Lithium-ion
Battery Capacity	2600mAh
Auto Charging	Yes
Time Scheduling	Daily Cycle Cleaning
Charging Time	Approx. 3-5 hours
Dust Bin Capacity	500mL

Feature	Specification
Working Time	100-120 minutes
Item Weight	6.1 Pounds
Surface Recommendation	Carpet, Wood, Tile
Special Features	Remote Control, HEPA Filtration, Rechargeable Battery, Anti-Drop Sensors, Smart Anti-Collision




8. WARRANTY AND CUSTOMER SUPPORT




MOOKA provides a **1-YEAR warranty** for the I3 Robot Vacuum Cleaner from the date of purchase. Additionally, a **30-day money-back guarantee** is offered. This warranty covers manufacturing defects and issues arising from normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact MOOKA customer support. Please have your purchase receipt and product model number ready when contacting support.

Contact information for MOOKA customer support can typically be found on the product packaging, the official MOOKA website, or through your retailer.

Related Documents - I3

<p>AIR PURIFIER USER MANUAL</p>  <p>High Clean Air Delivery Rate HEPA Filtration System Low Noise Level Child Lock</p>	<p>Mooka Air Purifier User Manual - AP-S0610L</p> <p>User manual for the Mooka AP-S0610L Air Purifier, detailing product overview, operating instructions, filter replacement, cleaning, maintenance, and troubleshooting.</p>
<p>AIR PURIFIER USER MANUAL</p>  <p>High Clean Air Delivery Rate HEPA Filtration System Low Noise Level Child Lock</p>	<p>Mooka Air Purifier User Manual - AP-S0610L</p> <p>Comprehensive user manual for the Mooka AP-S0610L Air Purifier, covering setup, operation, filter replacement, maintenance, and troubleshooting. Learn how to maximize clean air delivery and enjoy a healthier environment.</p>
<p>AIR PURIFIER USER MANUAL</p>  <p>Real-time Air Quality Monitor Timer Function Auto Sleep / Child Lock Function</p>	<p>Mooka EP1188 Air Purifier User Manual: Setup, Operation, and Troubleshooting</p> <p>Comprehensive user manual for the Mooka EP1188 air purifier. Learn about safe operation, major components, product specifications, getting started, panel icons, and troubleshooting common issues.</p>

	<p>Mooka M03 Air Purifier User Manual: Operation, Features, and Safety</p> <p>User manual for the Mooka M03 Air Purifier. Covers important safeguards, technical features, operation instructions, filter replacement, cleaning, troubleshooting, and specifications.</p>
	<p>Mooka M200L Air Purifier User Manual</p> <p>User manual for the Mooka M200L Air Purifier, detailing its features, operating instructions, troubleshooting, and technical specifications.</p>
	<p>Mooka Air Purifier User Manual - Model M01</p> <p>Comprehensive user manual for the Mooka Air Purifier, Model M01. Learn about its 3-stage filtration system, operation, safety precautions, and maintenance for optimal performance.</p>