

Easytry123 Easytry1636

Easytry123 Replacement Remote Control Instruction Manual

FOR MITSUBISHI MSZ-GA50VA, MSZ-GA60VA, MSZ-GA71VA, MSZ-GE35VA-A1, MSZ-GE18VA-P1, MSZ-GE50VA-A1, MSZ-GE22VA-A1, MSZ-CGE25VA-E1, MSZ-GE25VA-A1, MSZ-CGE35VA-E1 AIR CONDITIONERS

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, model Easytry1636, designed for use with various Mitsubishi MSZ series air conditioners. This remote offers essential functions for operating your air conditioning unit. Please note that as a replacement unit, it may not support all advanced functions present on your original air conditioner remote control.

2. PRODUCT OVERVIEW

The Easytry123 replacement remote control is a compact, ergonomic device designed for straightforward operation of compatible Mitsubishi air conditioners. It features clearly labeled buttons for common functions such as power, mode selection, fan speed, and temperature adjustment.



Image 1: Front view of the Easytry123 replacement remote control. This image displays the layout of the buttons, including the ON/OFF button, mode selection, fan speed, temperature controls, and other function buttons.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Ensure batteries are inserted with correct polarity to prevent damage to the remote control.



Image 2: Rear view of the Easytry123 replacement remote control with the battery compartment cover removed. This image illustrates where the two AAA batteries should be placed.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.

- **ON/OFF Button:** Press to turn the air conditioner on or off.
- **MODE Button:** Press repeatedly to cycle through operating modes (e.g., Cool, Heat, Fan, Dry, Auto). The current mode will be displayed on the remote's screen.
- **FAN Button:** Adjusts the fan speed. Press to cycle through available fan speed settings (e.g., Low, Medium, High, Auto).
- **Temperature Adjustment Buttons (▲ / ▼):** Use these buttons to increase or decrease the desired temperature setting.
- **VANE Button:** Controls the direction of the air flow (swing function). Press to adjust the louvers.
- **ECONO COOL Button:** Activates or deactivates the Econo Cool function, which provides energy-saving cooling.
- **SLEEP Button:** Activates or deactivates the Sleep mode, which adjusts temperature settings for comfortable sleep and energy efficiency.
- **TIME (HR./MIN.) Buttons:** Used to set the timer functions (e.g., On Timer, Off Timer). Refer to your air conditioner's main manual for specific timer programming details.
- **RESET CLOCK Button:** Used to reset the internal clock of the remote control, often requiring a pointed object like a pen tip.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's surface or internal components.

5.2 Battery Replacement

Replace the batteries when the remote control's display becomes dim or if the air conditioner does not respond to commands. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

- **Remote control not working:**
 - Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Verify that you are within the effective operating range of the air conditioner.
- **Air conditioner not responding to commands:**
 - Confirm the air conditioner unit is powered on and functioning correctly.
 - Ensure the remote control is pointed directly at the air conditioner's infrared receiver.
- **Some functions do not work:**
 - As a replacement remote, it may not support all specialized functions of your original air conditioner remote. Refer to the original air conditioner manual for specific features.

7. SPECIFICATIONS

- **Model Number:** Easytry1636
- **Brand:** Easytry123
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Color:** Grey

8. WARRANTY AND SUPPORT

This product is a replacement remote control. For any issues or support inquiries regarding this Easytry123 remote control, please contact the seller directly through your purchase platform. Specific warranty details may vary by seller and purchase terms.