



Manuals.plus /

› Toyota /

› 2018 Toyota C-HR Owner's Manual

Toyota C-HR

2018 Toyota C-HR Owner's Manual

Comprehensive Guide for Your Vehicle


INTRODUCTION

This owner's manual is designed to help you understand the features, operation, and maintenance of your 2018 Toyota C-HR. Reading this manual thoroughly will ensure safe and enjoyable use of your vehicle and help you maintain its optimal performance and longevity. Please keep this manual in your vehicle for future reference.

For specific details regarding your vehicle's warranty, please refer to the separate Warranty and Service Guide provided with your vehicle.

VEHICLE OVERVIEW

The Toyota C-HR is a compact crossover SUV known for its distinctive styling and agile handling. This section provides a general overview of the vehicle's exterior and interior components.

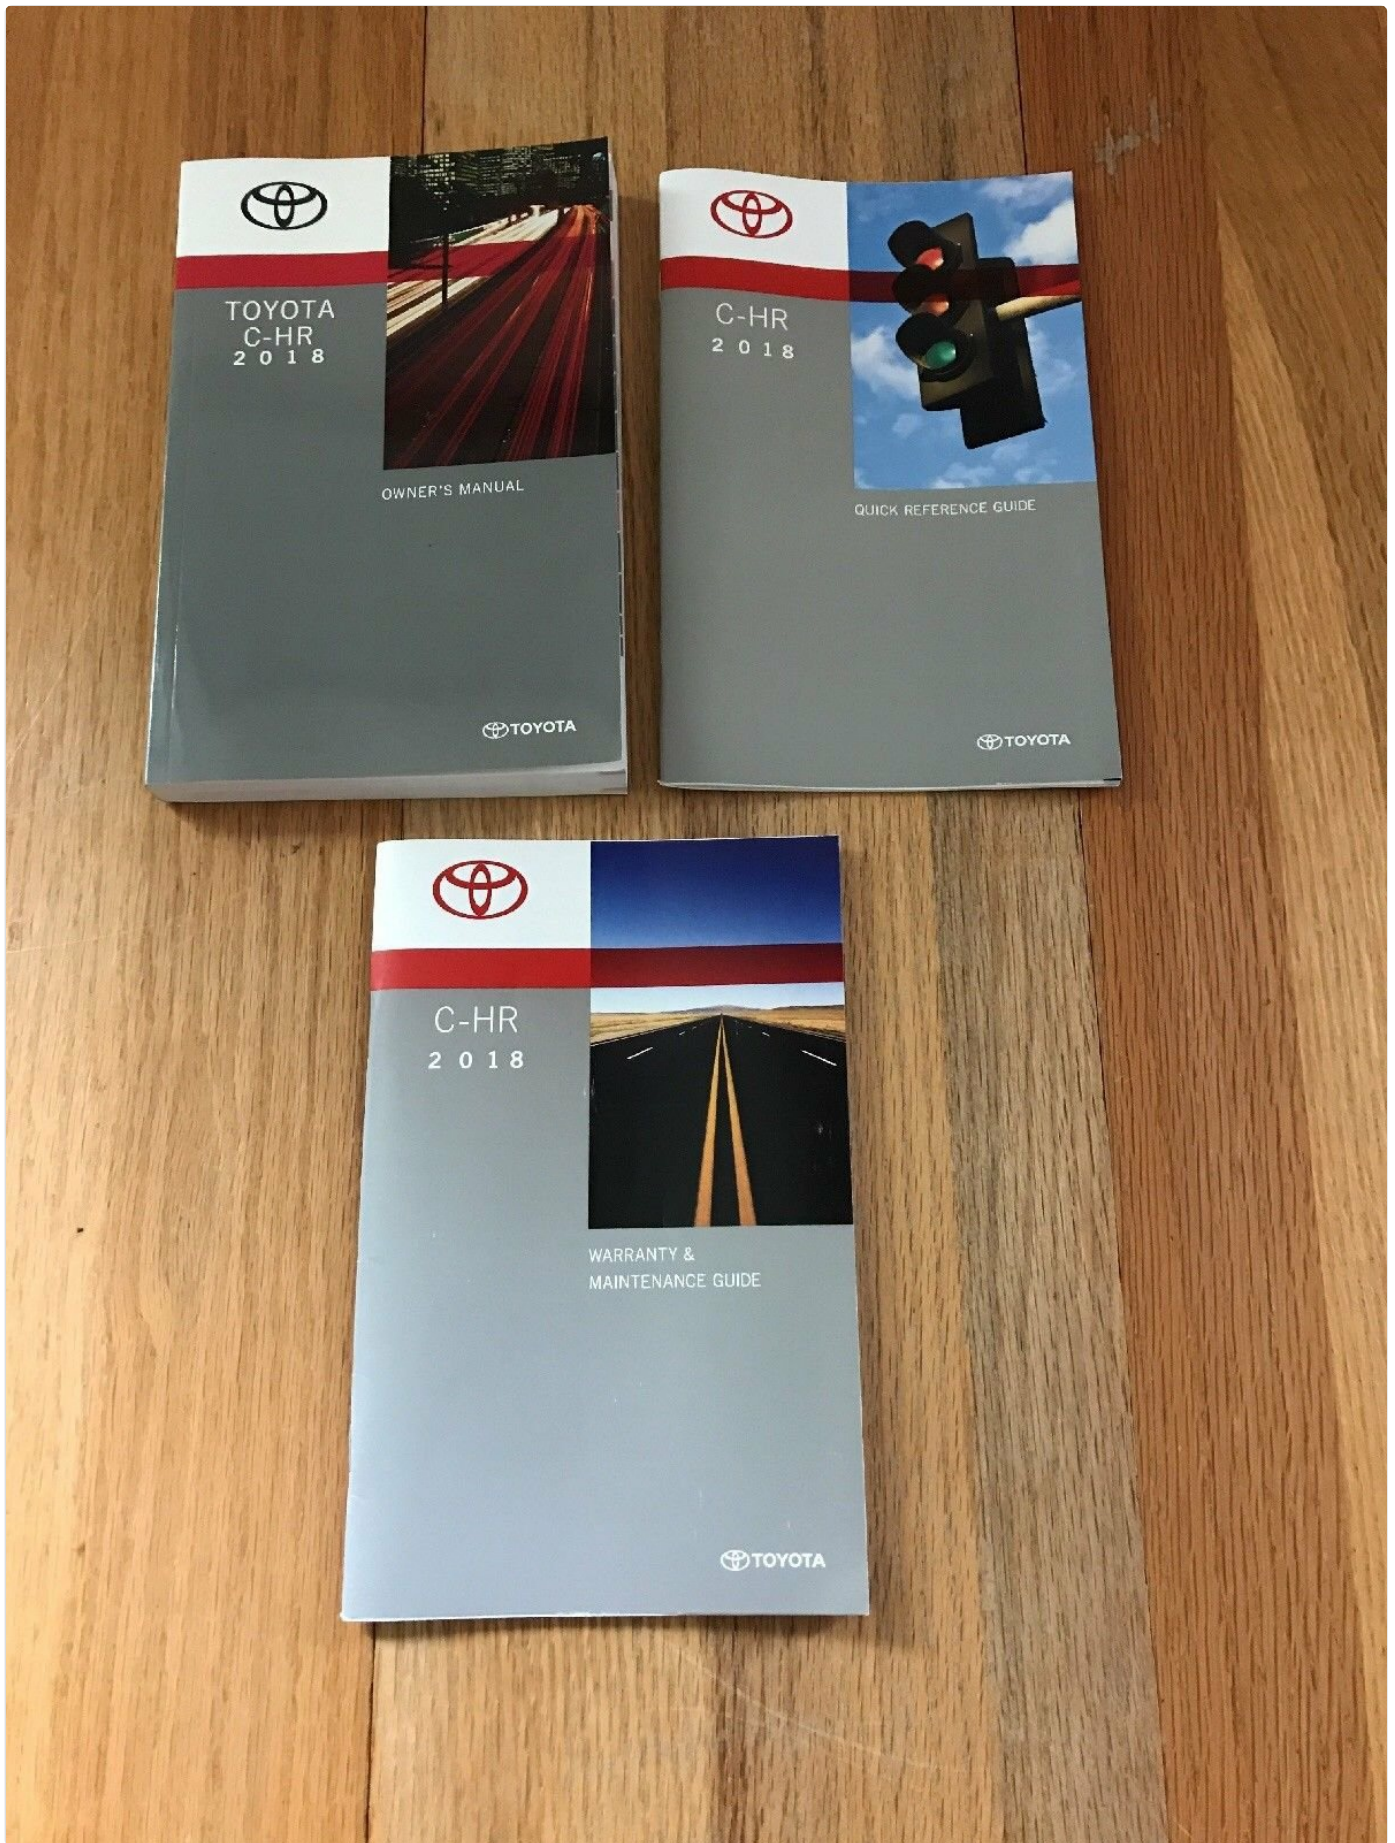

This image displays the front cover of the official owner's manual for the 2018 Toyota C-HR, typically featuring the vehicle's logo and model name. It serves as a visual representation of the document you are consulting.

SETUP AND INITIAL CHECKS

Before operating your 2018 Toyota C-HR, it is important to perform several initial setup procedures and checks to ensure safety and proper function.

- **Adjusting Seating Position:** Ensure the driver's seat, steering wheel, and mirrors are adjusted for optimal visibility and comfort. Refer to the seat adjustment controls located on the side of the seat.
- **Seatbelt Usage:** Always wear your seatbelt and ensure all passengers are properly restrained. Check that seatbelts are not twisted and click securely into place.
- **Dashboard Indicators:** Familiarize yourself with the warning lights and indicators on the instrument panel. Consult the "Warning Lights and Indicators" section for detailed explanations.
- **Tire Pressure:** Verify that tire pressures are at the recommended levels, typically found on a sticker inside the driver's side door jamb.
- **Fluid Levels:** Check engine oil, coolant, brake fluid, and windshield washer fluid levels regularly.

OPERATING YOUR VEHICLE

This section covers the essential aspects of driving and utilizing the various systems within your Toyota C-HR.

Starting and Stopping the Engine

1. **Starting:** With the brake pedal pressed, press the ENGINE START/STOP button. For models with a key, insert the key and turn it to the START position.
2. **Stopping:** Shift the transmission to Park (P), apply the parking brake, and then press the ENGINE START/STOP button or turn the key to the OFF position.

Driving Controls

- **Transmission:** Understand the functions of Park (P), Reverse (R), Neutral (N), Drive (D), and Low (L) or Sport (S) modes.
- **Braking System:** Familiarize yourself with the foot brake and parking brake. The Anti-lock Braking System (ABS) assists in maintaining steering control during hard braking.
- **Steering:** The C-HR features electric power steering for responsive handling.

Infotainment System

Your C-HR is equipped with a multimedia system. Refer to the separate multimedia system manual for detailed instructions on navigation, audio, and connectivity features.

Climate Control

Use the climate control panel to adjust temperature, fan speed, and air distribution. The system can operate in automatic or manual modes.

MAINTENANCE AND CARE

Regular maintenance is crucial for the performance, safety, and longevity of your 2018 Toyota C-HR. Adhere to the recommended service schedule.

Scheduled Maintenance

- **Oil and Filter Change:** Typically recommended every 5,000 to 10,000 miles or every 6 to 12 months, depending on driving conditions and oil type.
- **Tire Rotation:** Rotate tires every 5,000 to 7,500 miles to ensure even wear.

- **Brake Inspection:** Check brake pads, rotors, and fluid levels at regular intervals.
- **Fluid Checks:** Regularly inspect coolant, power steering fluid (if applicable), and transmission fluid levels.

Exterior and Interior Care

- **Washing:** Wash your vehicle regularly to protect the paint finish. Use appropriate car wash soap and avoid abrasive materials.
- **Interior Cleaning:** Vacuum carpets and upholstery, and wipe down surfaces with suitable automotive cleaners.

TROUBLESHOOTING COMMON ISSUES

This section addresses common issues you might encounter with your 2018 Toyota C-HR and provides basic troubleshooting steps.

- **Engine Will Not Start:**
 - Check if the battery is discharged. Look for dim lights or no cranking sound.
 - Ensure the transmission is in Park (P) or Neutral (N).
 - Verify that the fuel tank is not empty.
- **Warning Light Illuminated:**
 - Identify the specific warning light. Consult the "Warning Lights and Indicators" section of this manual for its meaning and recommended action.
 - Some lights may indicate a minor issue, while others require immediate attention from a qualified technician.
- **Flat Tire:**
 - Safely pull over to a level area away from traffic.
 - Refer to the "Tire Changing" section for instructions on using the spare tire and jack.

For complex issues or if troubleshooting steps do not resolve the problem, contact an authorized Toyota service center.

SPECIFICATIONS

Key technical specifications for the 2018 Toyota C-HR.

Feature	Detail
Model Year	2018
Manufacturer	Toyota
ASIN (Manual)	B07FF27CMS
Item Weight (Manual)	1.44 pounds
Publication Date (Manual)	January 1, 2018
Publisher (Manual)	Unbranded

Note: Vehicle specifications such as engine type, dimensions, and fuel economy vary by trim level and region. Refer to your vehicle's specific documentation for precise details.

WARRANTY INFORMATION

Your 2018 Toyota C-HR is covered by a comprehensive warranty. This typically includes a Basic New Vehicle Limited Warranty, Powertrain Limited Warranty, and Corrosion Perforation Limited Warranty.

- **Basic New Vehicle Limited Warranty:** Covers most components for a specified period or mileage, whichever comes first.
- **Powertrain Limited Warranty:** Covers engine, transmission, and drive system components.
- **Corrosion Perforation Limited Warranty:** Covers perforation from corrosion of sheet metal.

For complete details on coverage, limitations, and exclusions, please consult the separate Warranty and Service Guide provided with your vehicle at the time of purchase. Warranty terms may vary by region and specific vehicle configuration.

CUSTOMER SUPPORT

Should you require assistance or have questions regarding your 2018 Toyota C-HR, please utilize the following resources:

- **Authorized Toyota Dealership:** Your local Toyota dealership is equipped to provide service, parts, and expert advice. You can find your nearest dealer through the official Toyota website.
- **Toyota Customer Experience Center:** For general inquiries, product information, or assistance, you can contact Toyota's customer support. Visit the official Toyota website for contact numbers and online support options.
- **Official Toyota Website:** www.toyota.com (Please note: This link is for informational purposes and may not be directly related to the manual's publisher.)

When contacting support, please have your Vehicle Identification Number (VIN) readily available.