



[Manuals.plus](#) /

> [Noble](#) /

> Noble Twin XL Air Mattress Instruction Manual Model 92181

## Noble 92181

# Noble Twin XL Air Mattress Instruction Manual

Model: 92181

## INTRODUCTION

Thank you for choosing the Noble Twin XL Air Mattress. This manual provides essential information for the safe and efficient use, setup, operation, and maintenance of your air mattress. Please read these instructions thoroughly before initial use and retain them for future reference.

## IMPORTANT SAFETY INFORMATION

- Do not use this product with children or pets unsupervised.
- Always ensure the product is fully deflated before storing.
- Do not exceed the maximum weight limit of **350 pounds**.
- Always follow the instructions for proper inflation and deflation to avoid damage or injury.
- Do not operate the built-in pump while both inflation and deflation valves are closed.
- This air mattress is designed for in-home and outdoor use.

## PACKAGE CONTENTS

Verify that all components are present:

- Noble Twin XL Air Mattress with Built-in Pump
- Carry Bag



Image: The grey Noble branded carry bag for storing the air mattress.

## SETUP

1. **Unpack:** Remove the air mattress and carry bag from its packaging.
2. **Placement:** Lay the air mattress on a clean, level surface free from sharp objects. Ensure there is sufficient space around the mattress for inflation.
3. **Power Connection:** Locate the built-in pump on the side of the mattress. Uncoil the power cord from its storage compartment and plug it into a standard 120V AC electrical outlet.



Image: A person sleeping comfortably on the inflated Noble Twin XL air mattress, demonstrating its elevated height.

## OPERATING THE BUILT-IN PUMP



Image: Detailed view of the built-in pump panel, showing the 'Inflation Valve', 'Deflation Valve', 'Power' switch, and the power cord compartment.

### Inflation

1. **Open Inflation Valve:** Turn the 'Inflation Valve' knob counter-clockwise to the "OPEN" position.
2. **Power On:** Flip the 'Power' switch to the "ON" position. The pump will begin to inflate the mattress.
3. **Monitor Inflation:** The mattress will reach full inflation in under 3 minutes. The pump's sound may change pitch as it approaches full inflation.
4. **Adjust Firmness:** Once fully inflated, you can adjust the firmness by briefly turning the 'Deflation Valve' knob to "OPEN" to release a small amount of air, then quickly closing it.
5. **Close Inflation Valve:** Once desired firmness is achieved, flip the 'Power' switch to "OFF" and turn the 'Inflation Valve' knob clockwise to the "CLOSE" position.

### Deflation

1. **Open Deflation Valve:** Turn the 'Deflation Valve' knob counter-clockwise to the "OPEN" position.

2. **Power On:** Flip the 'Power' switch to the "ON" position. The pump will begin to deflate the mattress.
3. **Monitor Deflation:** The mattress will deflate in approximately 2 minutes.
4. **Power Off and Close Valve:** Once fully deflated, flip the 'Power' switch to "OFF" and turn the 'Deflation Valve' knob clockwise to the "CLOSE" position.
5. **Store Power Cord:** Carefully coil the power cord and place it back into its storage compartment.

*Note:* For the first few uses, the mattress material may stretch, requiring additional air to maintain desired firmness. This is normal and not an indication of a leak.

## MAINTENANCE

- **Cleaning:** To clean the air mattress, wipe the surface with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the mattress is completely dry before storing.
- **Storage:** After deflation, fold the mattress neatly and place it into the provided carry bag. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Puncture Prevention:** Avoid placing the mattress on rough or sharp surfaces. Keep pets away from the mattress to prevent punctures.



Image: An overhead view of the Noble Twin XL air mattress, highlighting its comfortable quilt top surface.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Mattress loses air quickly.	<ul style="list-style-type: none"> <li>Initial material stretching (normal for new air mattresses).</li> <li>Inflation/Deflation valve not fully closed.</li> <li>Small puncture or leak.</li> </ul>	<ul style="list-style-type: none"> <li>Add air daily for the first week until material stabilizes.</li> <li>Ensure both valves are securely closed after inflation.</li> <li>Inspect mattress for punctures. Use a patch kit if necessary (not included).</li> </ul>
Pump does not turn on.	<ul style="list-style-type: none"> <li>Power cord not securely plugged in.</li> <li>Power switch is off.</li> <li>No power from outlet.</li> </ul>	<ul style="list-style-type: none"> <li>Check power cord connection.</li> <li>Ensure power switch is in the "ON" position.</li> <li>Test outlet with another appliance or try a different outlet.</li> </ul>
Mattress is not firm enough.	<ul style="list-style-type: none"> <li>Insufficient inflation.</li> <li>Material stretching.</li> </ul>	<ul style="list-style-type: none"> <li>Inflate for a longer period or add more air.</li> <li>Top up air as needed, especially during initial uses.</li> </ul>



Image: A cutaway illustration of the Noble Twin XL air mattress, revealing the internal coil beam construction designed for support and stability.

## SPECIFICATIONS

<b>Model Number</b>	92181
<b>Size</b>	Twin XL
<b>Dimensions (L x W x H)</b>	80" x 40" x 18"

<b>Material</b>	PVC with Top Flocking
<b>Weight Capacity</b>	350 lbs
<b>Built-in Pump</b>	120V AC
<b>Water Resistance</b>	Waterproof
<b>Color</b>	White & Grey
<b>UPC</b>	843593190020

## WARRANTY AND SUPPORT

---

The Noble Twin XL Air Mattress comes with a **1-Year Guarantee**. This warranty covers manufacturing defects under normal use. For warranty claims or technical support, please contact Noble customer service. Contact details are typically provided with your purchase documentation or on the official Noble website.

