



[Manuals.plus](#) /

› [Goodmans](#) /

› Goodmans Activecam Full HD Action Camera User Manual

Goodmans Goodmans Activecam

Goodmans Activecam Full HD Action Camera User Manual

Model: Goodmans Activecam

INTRODUCTION

Thank you for choosing the Goodmans Activecam Full HD Action Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance. Please read this manual thoroughly before using the device.

PACKAGE CONTENTS

Please check the box for the following items:

- Goodmans Activecam Full HD Action Camera
- Built-in 900mAh battery (changeable)
- USB charging cable
- Waterproof housing
- Camera protection cover
- Helmet holder with straps
- Adhesive pad holder
- Retaining buckle
- Quick start guide
- Instruction manual

PRODUCT OVERVIEW

The Goodmans Activecam is a compact and versatile action camera designed for capturing your adventures in Full HD. It features a 90° wide-angle lens and a 2-inch LCD screen for easy framing and playback.



Figure 1: Goodmans Activecam with Waterproof Housing and Mount. This image shows the Goodmans Activecam securely enclosed within its transparent waterproof housing, ready for attachment to various surfaces using the included mounting bracket.



Figure 2: Goodmans Activecam without Housing. This view highlights the camera's main components: the power/mode button on the front, the wide-angle lens, and the Micro SD card slot on the side for memory expansion.



Figure 3: Goodmans Activecam LCD Screen. The rear of the camera features a 2-inch LCD screen, which allows for real-time viewing of recordings and playback of captured footage, as demonstrated by the action scene displayed.

SETUP GUIDE

1. Charging the Battery

Before first use, fully charge the camera's built-in 900mAh battery. Connect the camera to a USB power source (e.g., computer USB port or USB wall adapter) using the provided USB charging cable. The charging indicator light will illuminate during charging and turn off when fully charged.

2. Inserting a Micro SD Card

The camera supports Micro SD memory cards up to 32GB (not included). A minimum of Class 10 speed rating is required for optimal performance.

1. Open the Micro SD card slot cover on the side of the camera (refer to Figure 2).
2. Insert the Micro SD card with the gold contacts facing the back of the camera until it clicks into place.
3. To remove, gently push the card in until it clicks, then release, and it will spring out.

3. Attaching Mounts

The Goodmans Activecam comes with various accessories for mounting. For waterproof use, ensure the camera is securely placed inside the waterproof housing. Use the helmet holder with straps or the adhesive pad holder with the retaining buckle to attach the camera to helmets, bikes, or other surfaces.

OPERATING INSTRUCTIONS

1. Powering On/Off

- **To Power On:** Press and hold the Power/Mode button (refer to Figure 2) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power/Mode button again for a few seconds until the screen turns off.

2. Mode Selection

After powering on, short press the Power/Mode button to cycle through different modes: Video Recording, Photo Capture, and Playback.

3. Video Recording

1. Select Video Recording mode.
2. Press the Shutter/OK button (usually on top of the camera) to start recording. A red dot or recording icon will appear on the screen.
3. Press the Shutter/OK button again to stop recording.

4. Photo Capture

1. Select Photo Capture mode.
2. Press the Shutter/OK button to take a photo.

5. Playback

1. Select Playback mode.
2. Use the navigation buttons (if available, or Shutter/Mode buttons) to browse through your videos and photos.

3. Press the Shutter/OK button to play a video or view a photo.

6. Connecting to a Computer

To transfer files, connect the camera to your computer using the USB cable. The camera will appear as a removable disk, allowing you to access your recorded videos and photos.

MAINTENANCE AND CARE

- **Cleaning the Lens and Screen:** Use a soft, lint-free cloth to clean the camera lens and LCD screen. For stubborn smudges, a small amount of lens cleaning solution can be applied to the cloth (not directly to the lens/screen).
- **Waterproof Housing Care:** After using the waterproof housing in saltwater, rinse it thoroughly with fresh water and allow it to air dry. Ensure the rubber seal is clean and free of debris to maintain its waterproof integrity.
- **Battery Care:** Store the camera with a partially charged battery if not used for extended periods. Avoid exposing the battery to extreme temperatures.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and excessive humidity.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not turn on.	Battery is depleted. Charge the battery fully. Battery is not inserted correctly. Reinsert the battery.
Cannot record video or take photos.	Micro SD card is full. Delete some files or insert a new card. Micro SD card is not inserted or formatted incorrectly. Insert/reformat the card. Micro SD card is not Class 10. Use a Class 10 or higher speed card.
Poor image/video quality.	Lens is dirty. Clean the lens with a soft cloth. Insufficient lighting. Ensure adequate lighting for recording. Camera settings are incorrect. Reset camera settings to default.
Camera freezes or becomes unresponsive.	Remove and reinsert the battery to perform a hard reset.

TECHNICAL SPECIFICATIONS

Feature	Detail
Video Resolution	1080p Full HD (1920 x 1080)
Image Resolution	Up to 12 Megapixels (4000 x 3000)
Lens	90° Wide Angle Lens
Display	2-inch LCD Screen
Water Resistance	Up to 30m (with waterproof housing)
Battery	900mAh (built-in, changeable)

Feature	Detail
Storage	Supports Micro SD cards up to 32GB (Class 10 minimum)
Microphone	Built-in
Connectivity	USB
Dimensions (Package)	24.6 x 10.8 x 10.6 cm
Weight (Package)	0.49 Kilograms

WARRANTY AND SUPPORT

Goodmans products are designed and manufactured to the highest standards. For any issues or support inquiries regarding your Goodmans Activecam, please refer to the contact information provided with your purchase or visit the official Goodmans website for customer service details.

Please retain your proof of purchase for warranty claims.