

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Women's Stretch Bangle Crisscross 25mm Watch Two-Tone Instruction Manual](#)

**Timex TW2R9860009J**

# Timex Women's Stretch Bangle Crisscross 25mm Watch Instruction Manual

Model: TW2R9860009J

[Introduction](#) [Components](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)  
[Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Timex Women's Stretch Bangle Crisscross 25mm Watch. Please read this manual thoroughly to ensure proper use and care of your timepiece.





**Figure 1:** Front view of the Timex Women's Stretch Bangle Crisscross 25mm Watch, showcasing the two-tone design and silver-tone dial with gold-tone markers.

## 2. WATCH COMPONENTS

---

Familiarize yourself with the main parts of your watch:

- **Case:** The main body of the watch, housing the movement and dial. This model features a silver-tone 25mm brass case.
- **Dial:** The watch face, displaying the time. It has a silver-tone dial with gold-tone markers and a sunray finish.
- **Hands:** Hour, minute, and second hands indicate the time.
- **Crown:** A small knob on the side of the case used for setting the time.
- **Band:** The strap that secures the watch to your wrist. This watch features a two-tone 12mm stainless steel expansion (stretch bangle) band.

- **Mineral Glass Crystal:** The transparent cover protecting the dial.





**Figure 2:** Side view illustrating the watch case profile and the crown for time adjustment.

## 3. SETUP

---

### 3.1. Setting the Time

1. Locate the crown on the right side of the watch case.
2. Gently pull the crown outwards until you feel a click. The watch hands will stop moving.
3. Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
4. Once the time is set, push the crown back into its original position. The watch hands will resume movement.

### 3.2. Band Adjustment

This watch features a stretch bangle expansion band designed to fit wrists up to 7.5 inches in circumference. No manual link removal or addition is typically required for this type of band. If the fit is not satisfactory, professional jeweler assistance may be needed for specialized adjustments, though this is uncommon for expansion bands.



**Figure 3:** The watch worn on a wrist, demonstrating the fit of the stretch bangle band.

## 4. OPERATION

---

### 4.1. Timekeeping

Your Timex watch is designed for accurate timekeeping. Once the time is set, the watch will continuously display the current time.

### 4.2. Water Resistance

This watch is water resistant to 30 meters (100 feet). This rating means the watch can withstand splashes or brief immersion in water. It is **not** suitable for swimming, bathing, or diving. Avoid operating the crown while the watch is wet to prevent water intrusion.

## 5. MAINTENANCE

## 5.1. Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth.
- For the metal band, a slightly damp cloth can be used, followed by a dry cloth. Avoid harsh chemicals or abrasive materials.
- Ensure the crown is pushed in before cleaning to maintain water resistance.

## 5.2. Battery Replacement

The watch is powered by one AA battery (included). When the watch stops running, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

## 5.3. Storage

When not in use, store your watch in a dry, cool place, away from direct sunlight and strong magnetic fields. The original packaging can be used for storage.



Figure 4: The watch packaging box, suitable for storage when the watch is not being worn.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Crown is pulled out; battery is depleted.	Push the crown back in. If it still doesn't run, the battery may need replacement by a professional.
Time is inaccurate	Low battery; exposure to strong magnetic fields.	Replace the battery. Keep the watch away from strong magnets.
Condensation under crystal	Water intrusion due to improper sealing or exceeding water resistance limits.	Seek immediate professional service to prevent damage to the movement.

## 7. SPECIFICATIONS

- **Model Number:** TW2R9860009J
- **Case Width:** 25 mm
- **Case Height:** 8 mm
- **Strap and Lug Width:** 12 mm
- **Band Type:** Two-tone stainless steel expansion bangle
- **Case Material:** Brass
- **Crystal Material:** Mineral Glass
- **Water Resistance:** 30m (100ft) - suitable for splashes, not swimming or bathing.
- **Battery:** 1 AA battery (included)
- **Product Dimensions:** 5 x 5 x 0.7 inches
- **Item Weight:** 1.12 ounces

## 8. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Timex website or the warranty card included with your purchase. Keep your proof of purchase for any warranty claims.

You can typically find support resources, FAQs, and contact information on the manufacturer's official website: [www.timex.com](http://www.timex.com)