

Oster GCSTBS5907-017

Oster Anti-Adhesive Steam Iron User Manual

Model: GCSTBS5907-017

Brand: Oster

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Oster Anti-Adhesive Steam Iron, model GCSTBS5907-017. Please read all instructions carefully before first use and retain for future reference. The Oster Anti-Adhesive Steam Iron is designed to make ironing easier and more effective, featuring an advanced nano-orifice anti-adhesive soleplate for superior glide and a powerful steam system for wrinkle removal.

IMPORTANT SAFETY PRECAUTIONS

- Always unplug the iron from the electrical outlet when filling with water, emptying, or when not in use.
- Do not leave the iron unattended while it is connected to the power supply or on an ironing board.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron, cord, or plug in water or other liquids.
- Use the iron only for its intended household use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Ensure the voltage indicated on the iron matches your local power supply (110V).



Image: Inmetro Safety Certification Logo. This logo indicates that the product complies with Brazilian safety standards, ensuring safe operation when used as directed.

PRODUCT OVERVIEW

Your Oster Anti-Adhesive Steam Iron is equipped with several features designed for optimal ironing performance:

- **Anti-Adhesive Soleplate:** Features advanced nano-orifice technology for 40% better gliding.
- **Anti-Calc System:** Preserves the iron's base and improves performance by reducing mineral buildup.
- **Spray Button:** For targeted moisture application.
- **Extra Multi-Purpose Steam Jet:** Functions as a vertical steamer for hanging garments.
- **Water Reservoir:** Capacity of up to 240ml.
- **360° Swivel Cord:** Provides flexibility and ease of movement.
- **Indicator Lights:** Ready and power indicator lights for easy monitoring.
- **Button-Saving Edge:** Designed to navigate around buttons and zippers easily.
- **Automatic Cleaning:** Simplifies maintenance.



Image: The Oster Anti-Adhesive Steam Iron, showcasing its sleek design and steam output. This view highlights the soleplate and water tank.

SETUP AND FIRST USE

Unpacking

Carefully remove the iron from its packaging. Remove any protective films or stickers from the soleplate or body of

the iron. Retain packaging for storage or future transport.

Filling the Water Tank

1. Ensure the iron is unplugged from the electrical outlet.
2. Set the steam control to the "Dry Ironing" or "No Steam" position.
3. Open the water tank filler cap.
4. Using a measuring cup, carefully pour tap water into the water tank up to the "MAX" fill line (240ml capacity). Do not overfill.
5. Close the filler cap securely.

Note: For areas with hard water, it is recommended to use distilled or demineralized water to prevent mineral buildup and prolong the life of your iron.

First Use

During the first use, a slight odor or small flakes may be emitted from the soleplate. This is normal and will disappear after a few uses. It is recommended to iron an old piece of fabric first to ensure no residue is transferred to your garments.

OPERATING INSTRUCTIONS

Temperature Control

1. Plug the iron into a 110V electrical outlet. The power indicator light will illuminate.
2. Turn the temperature dial to the desired setting based on the fabric type. Refer to the fabric care labels on your garments.
3. Allow the iron to heat up. The ready indicator light will turn off when the selected temperature is reached.

Steam Ironing

Steam ironing is suitable for most fabrics except delicate ones like silk or synthetic materials that require low temperatures.

1. Ensure the water tank is filled.
2. Set the temperature dial to a steam-appropriate setting (usually between wool and linen).
3. Once the iron reaches the desired temperature, adjust the steam control to the desired steam level.
4. Begin ironing. The anti-drip feature prevents water spots at lower temperatures.

Steam Shot and Vertical Steaming

- **Steam Shot:** For stubborn wrinkles, press the steam shot button. A powerful burst of steam will be released. Wait a few seconds between shots to allow the iron to reheat.
- **Vertical Steaming:** Hold the iron vertically, about 15-30 cm away from hanging garments (curtains, suits, dresses). Press the steam shot button to release steam and remove wrinkles.

Spray Function

Press the spray button to release a fine mist of water onto the fabric. This is useful for dampening dry wrinkles before ironing.



Image: The Oster Steam Iron being used on a piece of fabric, demonstrating its ease of use and effective wrinkle removal.

MAINTENANCE AND CLEANING

After Each Use

1. Unplug the iron and allow it to cool completely.
2. Empty any remaining water from the tank to prevent mineral buildup and leakage.
3. Wipe the soleplate with a damp cloth to remove any fabric residue. Do not use abrasive cleaners or metallic scouring pads.
4. Wipe the exterior of the iron with a soft, damp cloth.

Anti-Calc System and Self-Cleaning

The iron features an integrated anti-calc system to reduce limescale buildup. For optimal performance, perform the self-cleaning function periodically, especially if you use tap water frequently.

1. Fill the water tank to the MAX line.
2. Plug in the iron and set the temperature to maximum.
3. Once the iron reaches maximum temperature (indicator light turns off), unplug it.
4. Hold the iron horizontally over a sink.
5. Press and hold the self-clean button (if available, otherwise use steam shot button repeatedly) until all water and steam have been expelled, along with any impurities.
6. Plug the iron back in and let it heat up to dry the soleplate. Unplug and store once cool.

Storage

Store the iron upright on its heel rest in a cool, dry place. Ensure the cord is neatly wrapped and not tightly coiled around the soleplate.



Image: The Oster Steam Iron positioned upright on its heel rest, demonstrating the recommended storage position.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; temperature dial set to minimum.	Ensure iron is securely plugged in. Check power outlet with another appliance. Turn temperature dial to a higher setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to "dry"; mineral buildup.	Fill water tank. Set temperature to steam-appropriate level. Adjust steam control. Perform self-cleaning.
Water leaking from soleplate.	Temperature too low for steam; water tank overfilled; anti-drip system overwhelmed.	Increase temperature. Do not overfill water tank. Allow iron to heat fully before using steam.
Soleplate sticking or not gliding smoothly.	Residue on soleplate; ironing at incorrect temperature for fabric.	Clean soleplate with a damp cloth (when cool). Ensure correct temperature setting for fabric type.

SPECIFICATIONS

Feature	Detail
Model	GCSTBS5907-017
Brand	Oster
Voltage	110 Volts
Power	1200 Watts
Water Tank Capacity	Up to 240ml
Product Dimensions (L x W x H)	29 x 12.5 x 0.1 cm (approximate, as per product data)
Product Weight	980 g
Soleplate Material	Anti-adhesive with nano-orifices
Special Features	Anti-drip, Anti-calc, Spray, Vertical Steam, Self-cleaning
Inmetro Registration	NCC 18.05163



Image: The soleplate of the Oster Steam Iron, highlighting the nano-orifice design for enhanced glide and steam distribution.

WARRANTY AND SUPPORT

Oster products are manufactured to high-quality standards. For information regarding the standard product warranty, please refer to the warranty card included with your purchase or visit the official Oster website.




For technical support, service, or to purchase replacement parts, please contact Oster customer service or visit their official website. Keep your proof of purchase for warranty claims.

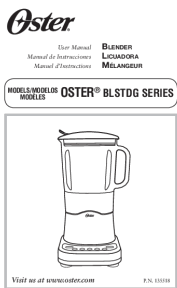
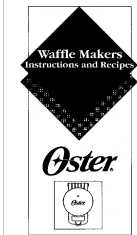

You can find more information about Oster products and support at the official [Oster Store on Amazon](#).

© 2025 Oster. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.

Related Documents - GCSTBS5907-017

	<p>Oster GCSTCC5000 Cordless Steam Iron: Instruction Manual & Features</p> <p>Comprehensive instruction manual for the Oster GCSTCC5000 Cordless Steam Iron. Learn about its features, operation, maintenance, safety precautions, and troubleshooting. Includes details on corded and cordless use, steam functions, and care.</p>
	<p>Oster Steam Generator Press X Press GCSTSG1200 User Manual & Instructions</p> <p>Comprehensive user manual and instructions for the Oster Steam Generator Press X Press GCSTSG1200, covering safety, operation, cleaning, and troubleshooting.</p>
	<p>Oster Steam Iron Instruction Manual - GCSTBS5001 Series</p> <p>Comprehensive instruction manual for Oster Steam Irons, models GCSTBS5001, GCSTBS5002, GCSTBS5003, GCSTBS5004, GCSTBS5051, GCSTBS5052, and GCSTBS5053. Covers important safeguards, operation instructions, temperature settings, maintenance, and storage.</p>

	<p>Oster BLSTDG Series Blender User Manual and Recipes</p> <p>Comprehensive user manual for the Oster BLSTDG Series Blender, covering important safeguards, features, operating instructions, cleaning, storage, recipes, and warranty information.</p>
	<p>Oster Waffle Makers: Instructions and Recipes</p> <p>A comprehensive guide to using Oster waffle makers, including important safety information, operating instructions, care and cleaning tips, and a variety of delicious waffle recipes and toppings.</p>
	<p>Manual de Instrucciones Oster XL Express Multi-Cooker CKSTPCEC8801</p> <p>Guía completa de instrucciones para el Oster XL Express Multi-Cooker (Modelo CKSTPCEC8801), cubriendo seguridad, uso, mantenimiento y solución de problemas.</p>