

[Manuals.plus /](#)

› [PURE PLANT HOME /](#)

› Philips Smart TV Remote Control NH503UP Replacement User Manual

## PURE PLANT HOME NH503UP

# PURE PLANT HOME Replacement Remote Control NH503UP User Manual

For Philips Smart TV Models

## INTRODUCTION

This manual provides instructions for the PURE PLANT HOME replacement remote control, model NH503UP, designed for use with various Philips Smart TV models. This remote offers direct functionality without requiring complex programming.







Image: The PURE PLANT HOME Replacement Remote Control NH503UP, a black remote with various buttons.

## COMPATIBILITY

---

This replacement remote control is compatible with the following Philips Smart TV models:

- 43PFL5603/F7, 43PFL5703/F7
- 50PFL5703/F7, 50PFL5903/F7
- 55PFL5603/F7, 55PFL5703/F7, 55PFL5903/F7
- 65PFL5603/F7, 65PFL5703/F7, 65PFL5903/F7
- 75PFL5603/F7
- Also compatible with models: 43PFL5603F7, 43PFL5703F7, 50PFL5703F7, 50PFL5903F7, 55PFL5603F7, 55PFL5703F7, 55PFL5903F7, 65PFL5603F7, 65PFL5703F7, 65PFL5903F7, 75PFL5603F7

Please verify your TV model number to ensure compatibility.

## SETUP

---

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide or press the latch to open it.
2. **Insert Batteries:** Insert two AAA batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

3. **Close the Battery Compartment:** Replace the battery compartment cover, ensuring it clicks securely into place.
4. **Ready for Use:** The remote control is pre-programmed and should work immediately with compatible Philips Smart TVs. No additional pairing or setup is typically required.

## OPERATING INSTRUCTIONS

This remote control functions identically to the original Philips Smart TV remote. Point the remote directly at your television's infrared receiver.

- **Power Button:** Press to turn the TV on or off.
- **Number Buttons (0-9):** Use to directly select channels.
- **Channel Up/Down:** Navigate through channels.
- **Volume Up/Down:** Adjust the audio volume.
- **Mute Button:** Mute or unmute the TV audio.
- **Navigation Pad (Arrow Buttons & OK):** Use to navigate menus and confirm selections.
- **Back/Exit:** Return to the previous screen or exit a menu.
- **Smart TV/Home Button:** Access the Smart TV interface or home screen.
- **Input/Source Button:** Select different input sources (HDMI, AV, etc.).
- *Other buttons function according to your specific Philips Smart TV model's capabilities.*

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

## TROUBLESHOOTING

Problem	Solution
Remote not responding.	<p>Check if batteries are inserted correctly with correct polarity.</p> <p>Replace old batteries with new ones.</p> <p>Ensure there are no obstructions between the remote and the TV's infrared sensor.</p> <p>Confirm the remote is pointed directly at the TV.</p>
Some buttons not working.	<p>Ensure the remote is compatible with your specific TV model (refer to the Compatibility section).</p> <p>Clean the remote's surface and buttons to remove any debris.</p> <p>Some advanced functions may require specific TV settings or applications.</p>

Problem	Solution
Remote works intermittently.	Batteries may be low; replace them. Ensure consistent line of sight to the TV. Avoid strong light sources (e.g., direct sunlight) that might interfere with the infrared signal.

## SPECIFICATIONS

---

- **Model:** NH503UP
- **Brand:** PURE PLANT HOME
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Philips Smart Televisions
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** Approximately 8.19 x 1.97 x 0.75 inches (20.8 x 5.0 x 1.9 cm)
- **Weight:** Approximately 2.36 ounces (67 grams) (without batteries)
- **Special Feature:** Ergonomic design

## WARRANTY AND SUPPORT

---

This product is designed to be a direct replacement and is typically covered by standard retail return policies. For any issues or questions regarding your PURE PLANT HOME replacement remote control, please contact your retailer or the manufacturer directly through their official support channels. Keep your purchase receipt for warranty claims, if applicable.

For further assistance, you may visit the [PURE PLANT HOME Store on Amazon](#).