

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY MKJ36998105 Replacement Remote Control User Manual for LG LCD TVs

ECONTROLLY MKJ36998105

ECONTROLLY MKJ36998105 Replacement Remote Control User Manual

FOR LG LCD TVs

1. Introduction

This manual provides instructions for the ECONTROLLY MKJ36998105 replacement remote control, designed for use with various LG LCD TV models. This remote control offers direct functionality without the need for complex programming.

Please read this manual thoroughly before using the remote control to ensure proper operation and to familiarize yourself with its features.

2. Setup

The ECONTROLLY MKJ36998105 remote control requires two AAA batteries for operation. No programming or setup is required; simply insert the batteries, and the remote will be ready to use with compatible LG LCD TV models.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

Once batteries are installed, the remote control is ready for immediate use with your compatible LG LCD TV.

3. Operating Instructions

This remote control provides standard functions for navigating and controlling your LG LCD TV. Ensure there is a clear line of sight between the remote control and the TV's infrared receiver.





Image: Front view of the remote control, displaying all functional buttons.

Key Functions:

- **POWER:** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (e.g., HDMI, AV, Component).
- **TV:** Switches to TV mode.
- **PICTURE:** Accesses picture settings.
- **SOUND:** Accesses sound settings.
- **SAP:** Secondary Audio Program.
- **RATIO:** Adjusts screen aspect ratio.
- **Number Buttons (0-9):** Direct channel selection.
- **FLASHBK:** Recalls the previous channel.
- **VOL (+/-):** Adjusts volume level.
- **CH (+/-):** Changes channels.
- **FAV:** Accesses favorite channels.
- **CC:** Activates/deactivates Closed Captions.
- **MUTE:** Mutes or unmutes the TV sound.
- **Q.MENU:** Accesses the Quick Menu.
- **MENU:** Opens the main TV menu.
- **RETURN:** Returns to the previous screen or menu.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.

4. Maintenance

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote control.

Storage:

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the device.

5. Troubleshooting

Remote Control Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** If the batteries are old or depleted, replace them with two new AAA batteries.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the TV's infrared sensor. Point the remote directly at the TV.
- **TV Compatibility:** Verify that your LG LCD TV model is listed as compatible with the MKJ36998105 remote control.

Specific Buttons Not Working:

- **Clean Buttons:** Ensure no dirt or debris is lodged around the buttons.
- **Battery Check:** Even if some buttons work, low battery power can affect others. Replace batteries.

If issues persist after following these steps, please refer to the support section.

6. Specifications

- **Model:** MKJ36998105
- **Brand:** ECONTROLLY
- **Compatible Devices:** LG LCD Televisions (various models including 19LF10-UA, 19LG30, 22LF10, 26LF10, 32LD400, 42LD400, 47LD500, M1962D, etc.)
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Product Dimensions:** Approximately 7 x 2 x 0.65 inches
- **Item Weight:** Approximately 2 ounces

7. Warranty Information

This product is covered by the standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims, please refer to the documentation provided at the time of purchase or contact your retailer.

8. Support

If you encounter any issues not covered in this manual or require further assistance, please contact the seller or the manufacturer directly. Provide your product model number (MKJ36998105) and a detailed description of the problem for efficient support.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07FFMP85W>

More documents and user manuals: <https://manuals.plus/>