

## Timex TW7C264009J

# Timex TIME Machines 35mm Camo Fast Wrap Kids Digital Watch User Manual

Model: TW7C264009J | Brand: Timex

## INTRODUCTION

This manual provides instructions for the Timex TIME Machines 35mm Camo Fast Wrap Kids Digital Watch. Please read this manual carefully to understand the functions and proper use of your watch. This digital watch is designed for durability and ease of use for children, featuring a digital display, chronograph, alarm, day-date calendar, and Indiglo backlight.

## KEY FEATURES

- **Adjustable Fast Wrap Strap:** Black/gray striped 18mm double-layered nylon strap designed for a comfortable and secure fit, accommodating wrist circumferences up to 6 inches.
- **Digital Display:** Easy-to-read gray digital display.
- **Indiglo Light-Up Dial:** Provides illumination for visibility in low-light conditions.
- **Chronograph:** Stopwatch function for timing activities.
- **Alarm:** Programmable alarm function.
- **Day-Date Calendar:** Displays the current day and date.
- **Water Resistance:** Rated for 50 meters (165 feet), suitable for short periods of recreational swimming.
- **Durable Construction:** Features a black 35mm resin case with an acrylic lens.





Image: Front view of the Timex TIME Machines Digital Watch, showing the digital display and button layout.

## SETUP INSTRUCTIONS

Your watch has four buttons: **SET** (top left), **MODE** (bottom left), **START/STOP** (top right), and **INDIGLO** (bottom right).

## 1. Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Press the **SET** button to select the digit you wish to adjust (e.g., hours, minutes, year, month, day). The selected digit will flash.
3. Use the **START/STOP** button to increase the value of the flashing digit. Hold the button to advance rapidly.
4. Repeat steps 2 and 3 until all desired time and date settings are correct.
5. Press the **MODE** button to exit the setting mode and return to the normal time display.

## 2. Setting the Alarm

1. Press the **MODE** button until the alarm time is displayed (often indicated by "AL" or a bell icon).
2. Press the **SET** button to select the hour or minute digits for the alarm. The selected digit will flash.
3. Use the **START/STOP** button to adjust the alarm hour or minute.
4. Press the **SET** button again to toggle the alarm ON/OFF. An alarm icon will appear when the alarm is active.
5. Press the **MODE** button to exit the alarm setting mode.





**Image:** Side view of the watch, highlighting the control buttons for setting functions.

## OPERATING YOUR WATCH

### 1. Using Indiglo Night-Light

To illuminate the watch display in the dark, press the **INDIGLO** button (bottom right). The light will stay on as long as the button is held down.

### 2. Using the Chronograph (Stopwatch)

1. Press the **MODE** button until the chronograph mode is displayed (often indicated by "CHRO" or "STP").
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. To resume, press **START/STOP** again.
5. To reset the stopwatch to zero, press the **SET** button while the stopwatch is paused.
6. Press the **MODE** button to exit chronograph mode.

### 3. Alarm Function

When the alarm is set and the alarm time is reached, the watch will beep. To silence the alarm, press any button. If no button is pressed, the alarm will typically sound for a short duration and then stop automatically.

## CARE AND MAINTENANCE

### 1. Water Resistance

This watch is water resistant to 50 meters (165 feet). This means it is suitable for short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or high-impact water sports. Do not press any buttons while the watch is submerged in water, as this can compromise the water resistance.

## 2. Battery Replacement

The watch uses 1 Lithium Metal battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

## 3. Cleaning Your Watch

To clean your watch, wipe it with a soft, damp cloth. For the nylon strap, a mild soap solution can be used, followed by rinsing with clean water and air drying. Avoid using harsh chemicals or abrasive materials, as these can damage the watch case or strap.







**Image:** Back view of the watch, showing the adjustable Fast Wrap nylon strap.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or dead battery.	Replace the battery.
Time is incorrect.	Time needs to be reset.	Follow the "Setting Time and Date" instructions.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try removing and reinserting the battery (if comfortable) or allow the battery to be replaced. If the issue persists, contact customer support.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a qualified watch technician for inspection and repair. Do not attempt to dry it yourself.

SPECIFICATIONS

- Model Number:** TW7C264009J
- Case Diameter:** 35mm
- Case Material:** Resin
- Lens Material:** Acrylic
- Strap Material:** Nylon (Fast Wrap)
- Strap Width:** 18mm
- Water Resistance:** 50 meters (165 feet)
- Battery Type:** 1 Lithium Metal battery (included)

**Functions:** Digital Time, Chronograph, Alarm, Day-Date Calendar, Indiglo Night-Light




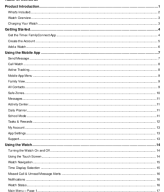

**Country of Origin:** Philippines


## WARRANTY AND SUPPORT

Timex offers a Kids Loss Protection Plan. For specific warranty details, claims, or technical support, please refer to the official Timex website or contact Timex customer service directly. Keep your purchase receipt as proof of purchase for warranty purposes.

**Online Support:** Visit the official [Timex website](#) for FAQs and support resources.

## Related Documents - TW7C264009J

	<p><a href="#">Timex Watch User Manual and International Warranty</a></p> <p>Comprehensive guide to Timex watches, including operating instructions, water resistance details, battery replacement, and international warranty information. Features INDIGLO night-light and strap adjustment for Timex Kids and Timex Jr. models.</p>
	<p><a href="#">Timex Watch User Manual: Features, Operation, and Care</a></p> <p>Comprehensive user manual for Timex watches, detailing features like chronograph, alarm, timer, time zones, INDIGLO night-light, and water resistance. Includes setup instructions and safety information.</p>
	<p><a href="#">Timex Kids Digital Watch User Guide</a></p> <p>Comprehensive user guide for the Timex Kids Digital Watch (W33 791095007), covering operations, features, water resistance, and maintenance in multiple languages.</p>
	<p><a href="#">Timex FamilyConnect Watch User Manual</a></p> <p>A comprehensive guide to using the Timex FamilyConnect cellular-connected watch for kids, covering setup, app usage, watch features, and safety information.</p>
	<p><a href="#">Timex Kids Digital Watch User Guide - Operation and Features</a></p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>

	<p><a href="#">Timex Expedition 4-Pusher Digital Watch User Manual and Guide</a></p> <p>Comprehensive user manual for the Timex Expedition 4-Pusher Digital watch, covering features, operation, time and date setting, chronograph, alarm, countdown timer, water resistance, strap and bracelet adjustment, battery replacement, and warranty information.</p>
---	--