

- Manuals.plus /
- › ECONTROLLY /
- › ECONTROLLY MKJ40653802 Remote Control User Manual for LG LCD TVs

ECONTROLLY MKJ40653802

ECONTROLLY MKJ40653802 Remote Control User Manual for LG LCD TVs

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY MKJ40653802 remote control. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance with your compatible LG LCD TV.

PRODUCT OVERVIEW

The ECONTROLLY MKJ40653802 is a replacement remote control designed for various LG LCD TV models. It offers direct functionality without the need for programming, simply requiring battery installation.





Image 1: Front view of the ECONTROLLY MKJ40653802 remote control. This image displays the full layout of buttons, including power, input, channel, volume, navigation, and numeric keys.

Compatible LG LCD TV Models include:

- 32LG30DAA, 32LG50FD, 32LG50FD-AD
- 26LG30D, 26LG30D-AA
- 32LG30D, 32LG30D-AA, 32LG50FDAD
- 32LG60FD, 32LG60FD-AC
- 42LG50FD-AA, 42LG50FDAA, 42LG50FD-AD

- And many other LG LCD TV models as listed in the product description.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. No programming is necessary; simply install the batteries to begin use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into position until it clicks securely.

Note: Always use new alkaline batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible LG LCD TV. Point the remote directly at the TV's infrared sensor for best results.

Key Functions:

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects the input source (e.g., HDMI, AV, Component).
- **TV/RAD:** Switches between TV and Radio modes (if supported by your TV).
- **Q.MENU:** Accesses the Quick Menu for common settings.
- **MENU:** Opens the main TV menu.
- **GUIDE:** Displays the electronic program guide (EPG).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **RETURN/EXIT:** Returns to the previous screen or exits the current menu.
- **INFO:** Displays information about the current program or input.
- **AV MODE:** Selects audio/video modes.
- **Volume (+/-):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **Channel (P[^]/P^v):** Changes channels up or down.
- **Numeric Keypad (0-9):** Directly enters channel numbers.
- **LIST:** Displays a list of channels.
- **Q.VIEW:** Switches between previously viewed channels.
- **Color Buttons (Red, Green, Yellow, Blue):** Used for specific functions within menus or interactive services.
- **TEXT/T.OPT/SUBTITLE:** Accesses Teletext, Teletext options, and subtitle settings.



Image 2: Angled view of the remote control, highlighting the ergonomic design and button placement for easy access to common functions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote control in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	• Dead or incorrectly installed batteries. • Obstruction between remote and TV. • Remote control sensor on TV is blocked. • Remote control is faulty.	• Replace batteries with new AAA batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the TV. • Ensure the TV's infrared sensor is clean and unobstructed. • If issues persist after trying the above, the remote may be faulty and require replacement.
Remote control works intermittently.	• Low battery power. • Weak signal due to distance or angle.	• Replace batteries. • Ensure you are within a reasonable range and pointing the remote directly at the TV.

SPECIFICATIONS

- **Model:** MKJ40653802 (RCEC-MKJ40653802)
- **Brand:** ECONTROLLY
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** LG LCD Televisions
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 5 x 1 x 0.25 inches
- **Item Weight:** 2 ounces
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided by your retailer or contact the ECONTROLLY manufacturer directly. This product is typically covered by a standard manufacturer's warranty against defects in materials and workmanship.

Please note that this package includes the remote control only. Instructions and batteries are not included in the product packaging, but this manual serves as a comprehensive guide.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FFPN7F3>

More documents and user manuals: **<https://manuals.plus/>**