

Amica 1103102

Amica AMGF23E1GB Microwave Oven User Manual

Model: AMGF23E1GB (1103102)

1. INTRODUCTION

Thank you for choosing the Amica AMGF23E1GB Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before using the microwave oven and keep it for future reference.

The Amica AMGF23E1GB is a versatile 23-liter microwave oven with a 900W microwave power output and a 1000W quartz grill. It features electronic control, an electronic display, and 8 automatic programs, designed for convenient and effective cooking.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- **Read all instructions** before using the appliance.
- **Do not operate** the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- **Do not heat liquids or other foods** in sealed containers since they are liable to explode.
- **Do not use corrosive chemicals or vapors** in this appliance.
- **Supervise children** when they are using the microwave oven.
- **Only use utensils** that are suitable for use in microwave ovens.
- **Clean the oven regularly** and remove any food deposits.
- **Do not attempt to service** this appliance yourself. Contact qualified service personnel.
- **Ensure proper ventilation** around the appliance.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Amica microwave oven.



Figure 3.1: Front View of the Microwave Oven (Door Closed)

This image displays the sleek black design of the Amica AMGF23E1GB microwave oven. The electronic display is visible on the left side of the control panel, with various function icons on the right. The door features a black mirror finish, and the Amica logo is centered at the bottom.



Figure 3.2: Front View of the Microwave Oven (Door Open)

This image shows the Amica AMGF23E1GB microwave oven with its door open, providing a clear view of the interior cooking cavity and

the glass turntable. The control panel on the right side is fully visible, highlighting the electronic display and the rotary knob for settings adjustment.

Control Panel Features:

- **Electronic Display:** Shows time, power level, cooking status, and program indicators.
- **Electronic Control:** Buttons and a rotary knob for setting time, power, and selecting programs.
- **Door Release Button:** Located on the control panel for opening the oven door.

4. SETUP

1. **Unpacking:** Carefully remove the microwave oven and all packing materials. Check for any damage. Do not operate if damaged.
2. **Placement:** Place the oven on a flat, stable surface. Ensure there is adequate ventilation space (at least 10 cm at the back, 20 cm at the top, and 5 cm on each side) for proper airflow. Do not block ventilation openings.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the rating label on the oven.
4. **Turntable Assembly:** Place the turntable ring inside the oven cavity, then place the glass turntable plate on top of the ring, ensuring it sits securely on the center hub.
5. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.

5. OPERATING INSTRUCTIONS

Your Amica microwave oven offers various cooking functions. Below are instructions for common operations.

5.1 Setting the Clock

1. Press the "Clock" button (if available, or refer to specific button on your model).
2. Use the rotary knob or number pads to set the current time.
3. Press the "Clock" button again to confirm.

5.2 Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Press the "Microwave" button or select the desired power level (6 levels available).
4. Use the rotary knob to set the cooking time (up to 95 minutes).
5. Press "Start" to begin cooking.

5.3 Grill Cooking

The 1000W quartz grill is ideal for browning and crisping food.

1. Place food on the grill rack (if provided) or a heat-resistant dish.
2. Press the "Grill" button.
3. Set the desired grilling time using the rotary knob.
4. Press "Start".

5.4 Combi Grill (Microwave + Grill)

This function combines microwave cooking with grilling for faster and more even results.

1. Place food in a suitable container.
2. Press the "Combi" button (or corresponding button for combination cooking).
3. Select the desired combination mode (e.g., C-1, C-2, if applicable).
4. Set the cooking time.
5. Press "Start".

5.5 Automatic Programs (8 Programs)

The oven comes with 8 pre-set automatic programs for various food types.

1. Press the "Auto Menu" or "Program" button.
2. Use the rotary knob to select the desired program number (P1-P8).
3. Confirm the food weight if prompted.
4. Press "Start".

5.6 Defrosting

The oven offers defrosting by time and by weight.

Defrost by Time:

1. Press the "Defrost" button.
2. Set the defrosting time using the rotary knob.
3. Press "Start".

Defrost by Weight:

1. Press the "Weight Defrost" button.
2. Use the rotary knob to select the food weight.
3. Press "Start".

5.7 Quick Start

For quick heating at full power.

- Press the "Quick Start" button repeatedly to add cooking time (e.g., 30 seconds per press).
- The oven will start automatically after a few seconds.

5.8 Child Lock

To prevent accidental operation, especially by children.

- To activate: Press and hold the "Stop/Cancel" button for 3 seconds until a lock indicator appears on the display.
- To deactivate: Press and hold the "Stop/Cancel" button again for 3 seconds until the lock indicator disappears.

6. MAINTENANCE

Regular cleaning and proper care will ensure the longevity and optimal performance of your microwave oven.

- **Cleaning the Interior:** After each use, wipe the interior with a damp cloth to remove food splatters. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads.
- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid getting water into the ventilation

openings.

- **Turntable and Ring:** The glass turntable and turntable ring can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with a few slices of lemon or a tablespoon of vinegar in a microwave-safe bowl. Microwave on high for 2-3 minutes, then let it sit for 5 minutes before wiping the interior.
- **Light Bulb Replacement:** If the interior light bulb needs replacement, contact qualified service personnel. Do not attempt to replace it yourself.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker; Deactivate child lock.
Food not cooking evenly	Food not stirred or turned; Incorrect power level/cooking time; Turntable not rotating.	Stir or turn food during cooking; Adjust power/time; Check if turntable and ring are correctly placed and clean.
Excessive steam inside oven	High moisture content in food.	This is normal for high-moisture foods. Wipe interior after use.
Oven light not working	Light bulb burnt out.	Contact qualified service personnel for replacement.
Display shows error code	Internal malfunction.	Unplug the oven for a few minutes, then plug it back in. If the error persists, contact service.

If the problem persists after trying these solutions, please contact Amica customer support.

8. SPECIFICATIONS

Brand	Amica
Model Number	AMGF23E1GB (1103102)
Capacity	23 Liters
Microwave Power Output	900 Watts
Grill Power Output	1000 Watts (Quartz Grill)
Dimensions (L x W x H)	48.3 x 37.2 x 28.1 cm
Weight	18 Kilograms
Color	Black (Black Mirror Front)

Material	Stainless Steel
Control Type	Electronic Control
Turntable Diameter	27 cm
Special Features	8 Automatic Programs, Multiwaves System, Child Lock, Quick Start, Electronic Display, Acoustic Signal, Interior Lighting.

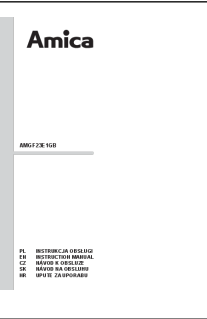 
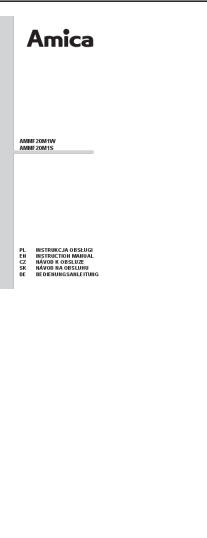 
9. WARRANTY AND SUPPORT

Amica products are manufactured to high-quality standards and are warranted against manufacturing defects. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

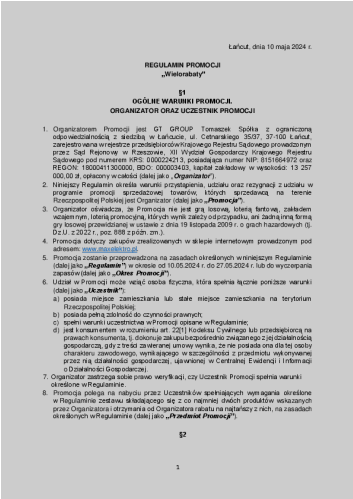 
For technical assistance, service, or to inquire about spare parts, please contact Amica customer support. Have your model number (AMGF23E1GB) and serial number ready when contacting support.

Amica Customer Service:
[Visit Amica's Official Website for Contact Information](#)

Related Documents - 1103102

	Amica AMGF23E1GB - Instrukcja obsługi kuchenki mikrofalowej Kompletna instrukcja obsługi dla kuchenki mikrofalowej Amica AMGF23E1GB. Zawiera informacje o bezpieczeństwie, instalacji, obsłudze, czyszczeniu i rozwiązywaniu problemów.
	Amica AMMF20M1W / AMMF20M1S - Instrukcja Obsługi Szczegółowa instrukcja obsługi dla kuchenek mikrofalowych Amica modeli AMMF20M1W i AMMF20M1S. Zawiera informacje o bezpieczeństwie, instalacji, obsłudze, danych technicznych i konserwacji.

	Amica EGSPV 597 916 Bedienungsanleitung Diese Bedienungsanleitung bietet detaillierte Informationen zur sicheren Installation, Bedienung und Wartung des Amica Geschirrspülers EGSPV 597 916. Erfahren Sie mehr über Programme, Funktionen und Fehlerbehebung.
	Instrukcja Obsługi Amica AMGF20E1S Instrukcja obsługi dla kuchenki mikrofalowej Amica AMGF20E1S, zawierająca informacje o bezpieczeństwie, instalacji, obsłudze, czyszczeniu i rozwiązywaniu problemów.
	Amica AMMF20E1W Instrukcja obsługi Kompleksowa instrukcja obsługi dla kuchenki mikrofalowej Amica AMMF20E1W. Zawiera informacje o bezpieczeństwie, instalacji, użytkowaniu, czyszczeniu i rozwiązywaniu problemów, zapewniając optymalne i bezpieczne korzystanie z urządzenia.
	Instrukcja Obsługi Amica Chłodziarko-Zamrażarka Szczegółowa instrukcja obsługi dla chłodziarko-zamrażarek Amica, zawierająca wskazówki dotyczące bezpieczeństwa, instalacji, użytkowania, konserwacji i rozwiązywania problemów.



[pdf]

Ewelina Michalska AXELO 1 Łańcut dnia 10 maja 2024 r REGULAMIN PROMOCJI 5902429927959

Okap Ciarko Design Mono White CDP6003W 5902429928611 Duo Black 74 CDZ7405C 5902429928581

Uno 74 GT Regalamin Promocji Wielorabaty 20240510 maxelektro pl storage file core files 5 9

74a603b9e1a15c0ec6ad6dfb8aa06d83 |||

Lacut, dnia 10 maja 2024 r. REGULAMIN PROMOCJI „Wielorabaty 1 OGLNE
WARUNKI PROMOCJI. ORGANIZATOR ... 70GSV 1103019 Kuchenka mikrofalowa
Amica AMGF 17MG2W 1193600 Kuchenka mikrofalowa Amica AMGF 23E1GB
1103102 Kuchenka mikrofalowa Amica AMMF 20E1W 1103182 Kuchenka
mikrofalowa Amica AMMF 20M1GI 1103070...

lang:pl score:12 filesize: 809.61 K page_count: 25 document date: 2024-05-09