

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control for Samsung Home Theater Systems (Model Easytry0500)

Easytry123 Easytry0500

Easytry123 Replacement Remote Control Instruction Manual

Model: Easytry0500

INTRODUCTION

This document provides instructions for the Easytry123 replacement remote control, model Easytry0500. This remote is designed to operate various Samsung DVD Home Theater Systems, including models MAX-DA75, DA76, DA75T, DA76T, MAX-DA66, DA69, DA66T, HT-XQ100GT, HT-XQ100GT/XAA, and HT-XQ100GT/XAP.

The remote control utilizes infrared (IR) technology and features a button-controlled interface. Please note that as a replacement unit, some advanced or specific functions of your original device's remote may not be fully supported.



Figure 1: Front view of the Easytry123 Replacement Remote Control.

Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Back view of the remote control, illustrating the battery compartment location.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

To operate your Samsung DVD Home Theater System with this remote control, point the remote directly at the infrared receiver on your device. Ensure there are no obstructions between the remote and the device.

The remote features standard buttons for common functions such as Power, Volume Up/Down, Channel Up/Down, Play, Pause, Stop, Fast Forward, Rewind, and Number buttons. Refer to your Samsung device's original manual for specific functions of each button if you are unsure.

- **Power Button:** Turns the device on or off.
- **Volume Buttons:** Adjusts the audio output level.
- **Navigation Buttons (Arrow keys, Enter):** Used for menu navigation and selection.
- **Playback Controls (Play, Pause, Stop, FF, REW):** Controls media playback.
- **Number Buttons:** For direct input of track numbers or other numerical selections.

Important: This is a replacement remote. While it supports primary functions, some advanced features or specific button mappings might differ from your original remote. Verify functionality with your specific home theater system model.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as

these can damage the remote's surface or internal components.

Battery Replacement

If the remote control's range decreases or it becomes unresponsive, the batteries may need to be replaced. Follow the battery installation steps outlined in the "Setup" section to replace the two AAA batteries.

Dispose of used batteries according to local regulations. Do not dispose of batteries in household waste.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the device's IR receiver.
 - Ensure you are within the effective operating range (typically up to 20 feet) and pointing the remote directly at the device.
- **Some functions do not work:**
 - As a replacement remote, certain advanced or specific functions of your original device may not be supported. This is normal for universal or replacement remotes.
 - Verify that your specific Samsung Home Theater System model is listed as compatible in the "Introduction" section.

SPECIFICATIONS

Brand	Easytry123
Model Number	Easytry0500
Compatible Devices	Samsung MAX-DA75, DA76, DA75T, DA76T, MAX-DA66, DA69, DA66T, HT-XQ100GT, HT-XQ100GT/XAA, HT-XQ100GT/XAP DVD Home Theater Systems
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Batteries Required	2 x AAA (not included)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question