

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LG](#) /

› [LG 43UK6500MLA.AEE 43-inch 4K UHD LED TV User Manual](#)

LG 43UK6500MLA.AEE

LG 43UK6500MLA.AEE 43-inch 4K UHD LED TV User Manual

Model: 43UK6500MLA.AEE

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your LG 43UK6500MLA.AEE 43-inch 4K UHD LED TV. Please read this manual thoroughly before operating your television to ensure safe and correct use. Keep this manual for future reference.

The LG 43UK6500MLA.AEE features a 43-inch 4K Ultra HD LED display, Active HDR for enhanced picture quality, and the intuitive WebOS 4.0 smart TV platform. It includes a QuadCore Processor, TruMotion 100Hz, Wide Color Gamut, and Bluetooth connectivity.

WHAT'S IN THE Box

Carefully unpack the box and ensure all items are present. If any items are missing or damaged, contact your dealer.

- LG 43UK6500MLA.AEE 43-inch 4K UHD LED TV
- Remote Control (Batteries not included)
- Power Cable
- Stand Components (if applicable)
- Documentation (User Manual, Warranty Card)



Image: LG 43UK6500MLA.AEE 43-inch 4K UHD LED TV. This image shows the television unit, typically including the screen, bezel, and a stand. A remote control may also be depicted alongside the TV.

SETUP

1. Unpacking

Remove the TV and all accessories from the packaging. It is recommended to keep the packaging materials for future transport of the TV.

2. Stand Assembly (Table-top Mounting)

If you are placing the TV on a table, you will need to attach the stand. Follow these steps:

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align the stand base with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure all screws are tightened firmly.

Note: The TV supports table mounting. For wall mounting, a separate VESA-compatible wall mount kit (not included) is required. Refer to the wall mount kit's instructions for installation.

3. Connecting Peripherals

- **Power:** Connect the power cable to the TV's power input and then to a wall outlet.
- **HDMI Devices:** Connect external devices like Blu-ray players, game consoles, or set-top boxes to the HDMI ports on the back of the TV using HDMI cables.
- **Antenna/Cable:** Connect an antenna or cable TV feed to the ANTENNA/CABLE input.
- **Network:** For internet access, connect an Ethernet cable to the LAN port or connect wirelessly via Wi-Fi during the initial setup.
- **USB Devices:** Connect USB storage devices to the USB port for media playback.

4. Initial Setup Wizard

After connecting the power and turning on the TV for the first time, an on-screen setup wizard will guide you through essential settings:

1. **Language Selection:** Choose your preferred language.
2. **Country Selection:** Select your country for correct channel tuning.
3. **Network Connection:** Configure your Wi-Fi connection or confirm the wired connection.
4. **Channel Tuning:** Scan for available broadcast channels.
5. **Time and Date:** Set the correct time and date.
6. **Terms and Conditions:** Review and accept the user agreements.

OPERATING INSTRUCTIONS

1. Remote Control Overview

The remote control allows you to access all functions of your TV. Insert two AAA batteries (not included) into the remote control, ensuring correct polarity.

- **Power Button:** Turns the TV on or off.
- **Number Buttons:** Select channels directly.
- **Volume Up/Down:** Adjust the sound level.
- **Channel Up/Down:** Change channels sequentially.
- **Home Button:** Access the WebOS Smart TV launcher.
- **Input Button:** Select input sources (HDMI, USB, TV).
- **Navigation Buttons (Up/Down/Left/Right) and OK:** Navigate menus and confirm selections.
- **Back Button:** Return to the previous screen.
- **Settings Button:** Access picture, sound, and general settings.

2. WebOS 4.0 Smart TV Navigation

Press the **Home** button on your remote to open the WebOS launcher bar at the bottom of the screen. Use the navigation buttons to scroll through apps, input sources, and other features. Select an item by pressing **OK**.

3. Picture and Sound Settings

To adjust picture or sound settings:

1. Press the **Settings** button on the remote control.
2. Navigate to **Picture** or **Sound**.
3. Select desired options such as Picture Mode (Vivid, Standard, Cinema), Brightness, Contrast, or Sound Mode (Standard, Cinema, Music).

4. Bluetooth Connectivity

Your TV supports Bluetooth for connecting compatible audio devices like headphones or soundbars.

1. Go to **Settings > Sound > Sound Out**.
2. Select **LG Sound Sync (Wireless)** or **Bluetooth**.
3. Put your Bluetooth device into pairing mode.
4. Select your device from the list on the TV screen to connect.

MAINTENANCE

1. Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using alcohol, benzene, thinners, or other volatile substances, as they may damage the TV.

2. Software Updates

To ensure optimal performance and access to the latest features, regularly check for software updates:

1. Ensure your TV is connected to the internet.
2. Go to **Settings > General > About This TV > Check for Updates**.
3. Follow the on-screen prompts to download and install any available updates.

TROUBLESHOOTING

Before contacting service, try the following solutions for common issues:

Problem	Possible Cause / Solution
No power / TV does not turn on.	<ul style="list-style-type: none">• Ensure the power cable is securely plugged into the TV and the wall outlet.• Check if the wall outlet is working by plugging in another device.• Press the power button on the TV itself, not just the remote.
No picture or sound from an external device.	<ul style="list-style-type: none">• Verify the external device is powered on.• Check the HDMI or other input cable connections.• Ensure the correct input source is selected on the TV (press the Input button on the remote).
No channels found during tuning.	<ul style="list-style-type: none">• Check the antenna/cable connection.• Ensure your antenna is properly positioned and receiving a signal.• Perform an auto-tuning scan again.
Remote control not working.	<ul style="list-style-type: none">• Replace the batteries with new ones, ensuring correct polarity.• Ensure there are no obstructions between the remote and the TV's remote sensor.
Wi-Fi connection issues.	<ul style="list-style-type: none">• Check if your router is powered on and functioning correctly.• Restart your router and the TV.• Ensure the Wi-Fi password is entered correctly.• Move the TV closer to the router or consider a wired connection.

SPECIFICATIONS

Feature	Detail
Brand	LG Electronics
Model Number	43UK6500MLA.AEE
Model Name	43UK6500MLA
Model Year	2018
Display Technology	LED
Screen Size	43 Inch (109 cm)
Resolution	4K UHD (3840 x 2160)
Aspect Ratio	16:9
Refresh Rate	TruMotion 100Hz
Processor	QuadCore Processor
HDR Support	Active HDR
Color Gamut	Wide Color Gamut
Operating System	WebOS 4.0
Connectivity	Wi-Fi, Bluetooth
Hardware Interface	Bluetooth
USB Ports	1
Audio Output Mode	Stereo
Speaker Configuration	2-channel
Special Features	Electronic Program Guide (EPG)
Mounting Type	Table Mount
Product Dimensions (WxHxD)	105.2 x 66 x 15.2 cm (with stand)
Weight	10.92 kg

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official LG website. For technical support, product registration, or service inquiries, please contact LG Customer Service through their official channels.

You can typically find contact information and support resources on the LG official website:

www.lg.com/support

© 2023 LG Electronics. All rights reserved.