

[Manuals.plus](#) /

› [Bose](#) /

› Bose Smart Soundbar 700 User Manual

Bose Soundbar 700

Bose Smart Soundbar 700 User Manual

Model: Soundbar 700 (795347-1100)

INTRODUCTION

The Bose Smart Soundbar 700 is designed to deliver exceptional sound quality for your home entertainment. It features sophisticated design, built-in voice assistants like Amazon Alexa and Google Assistant, and versatile connectivity options including Wi-Fi and Bluetooth. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your soundbar.



Image: Front view of the Bose Smart Soundbar 700, showcasing its sleek black finish and minimalist design.

WHAT'S IN THE BOX

Carefully unpack your Bose Smart Soundbar 700 and ensure all components are present:

- Bose Smart Soundbar 700
- Universal Remote
- 4 AA Batteries (for remote)
- Cleaning Cloth
- ADAPTiQ Headset
- Optical Cable
- HDMI Cable
- Line Cord (Power Cable)
- Global Safety Sheet
- Quick Start Guide (QSG)



Image: Angled view of the Bose Smart Soundbar 700, highlighting its tempered glass top and wrap-around metal grille.

SETUP

Follow these steps to set up your soundbar for optimal performance.

1. Placement

Place the soundbar on a flat, stable surface directly in front of your television. Ensure there are no obstructions in front of the soundbar that could block the sound or the remote control signal. For wall mounting, use the optional Bose soundbar Wall bracket (sold separately).



Image: Diagram showing the dimensions of the Bose Smart Soundbar 700: 38.5 inches (W) x 2.25 inches (H) x 4.25 inches (D).

2. Connections

Connect the soundbar to your television using either the HDMI cable (recommended for ARC/eARC functionality) or the Optical cable.

- **HDMI Connection (Recommended):** Connect one end of the HDMI cable to the HDMI ARC/eARC port on your TV and the other end to the HDMI OUT (TV ARC) port on the soundbar.
- **Optical Connection:** If your TV does not have an HDMI ARC/eARC port, connect the optical cable from your TV's optical output to the OPTICAL IN port on the soundbar.
- **Power:** Connect the power cord to the soundbar's power input and then to a wall outlet.

Note: The soundbar also features USB input for service only.

3. Initial Setup with Bose Music App

For full functionality and setup, download the Bose Music app on your smartphone or tablet. The app will guide you through connecting the soundbar to your Wi-Fi network, setting up voice assistants (Alexa, Google Assistant), and performing ADAPTiQ audio room calibration.

1. Download the [Bose Music app](#) from your device's app store.
2. Open the app and follow the on-screen instructions to add your Soundbar 700.
3. During setup, the app will prompt you to use the included ADAPTiQ headset to calibrate the soundbar's audio performance to the unique acoustics of your room. This process optimizes sound quality for your listening environment.

OPERATING YOUR SOUNDBAR

Universal Remote Control

The included universal remote allows you to control your soundbar, TV, and other connected devices. The remote is pre-programmed for the soundbar and can be customized via the Bose Music app to control other devices.



Image: Close-up view of the Bose logo on the soundbar's glass top, indicating the brand.

- **Power Button:** Turns the soundbar and connected devices on/off.
- **Volume Controls:** Adjusts the soundbar's volume.
- **Source Buttons:** Selects input sources (e.g., TV, Bluetooth).
- **Voice Assistant Button:** Activates the built-in voice assistant.

Voice Control (Alexa/Google Assistant)

With built-in Amazon Alexa and Google Assistant, you can control your soundbar and smart home devices using voice commands. The soundbar features an eight-microphone array for superior voice pickup, even when music is playing.

- To activate, simply say "Alexa" or "Hey Google" followed by your command.
- Examples: "Alexa, play music," "Hey Google, turn up the volume," "Alexa, what's the weather?"

Connectivity

- **Wi-Fi:** Connects to your home network for streaming services, software updates, and voice assistant functionality.
- **Bluetooth:** Allows wireless streaming from Bluetooth-enabled devices like smartphones and tablets. To pair, press the Bluetooth button on the remote or in the Bose Music app, then select "Bose Soundbar 700" from your device's Bluetooth settings.
- **Apple AirPlay 2:** Stream audio directly from your Apple devices.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your soundbar.

- **Cleaning:** Use the included cleaning cloth or a soft, dry cloth to wipe the soundbar's surfaces. Do not use liquid cleaners or sprays directly on the soundbar.
- **Software Updates:** Ensure your soundbar's software is up to date via the Bose Music app. Updates often include performance improvements and new features.
- **Ventilation:** Ensure the soundbar has adequate ventilation and is not covered, as this can lead to overheating.



Image: Detailed close-up of the soundbar's metal grille, showcasing its fine texture and build quality.

TROUBLESHOOTING

If you encounter issues with your Bose Smart Soundbar 700, refer to the following common solutions:

Problem	Possible Solution
No sound from soundbar.	Ensure the soundbar is powered on. Check all cable connections (HDMI, Optical) are secure. Verify the correct input source is selected on the soundbar and TV. Increase the volume on both the soundbar and TV. If using HDMI ARC, ensure ARC is enabled in your TV's audio settings.
Voice assistant not responding.	Ensure the soundbar is connected to Wi-Fi. Check if the microphone is muted (microphone icon on soundbar). Verify voice assistant setup in the Bose Music app.

Problem	Possible Solution
Bluetooth pairing issues.	Ensure the soundbar is in Bluetooth pairing mode. Disable and re-enable Bluetooth on your device. Move your device closer to the soundbar. Clear the Bluetooth device list on your soundbar via the Bose Music app and try pairing again.
Remote control not working.	Check and replace the batteries (4 AA batteries). Ensure there are no obstructions between the remote and the soundbar. Re-pair the remote with the soundbar if necessary (refer to Bose Music app or online support).

For more detailed troubleshooting, refer to the official Bose support website or the full user manual PDF.

SPECIFICATIONS

Feature	Detail
Model Name	Soundbar 700
Model Number	795347-1100
Dimensions (H x W x D)	2.25" x 38.5" x 4.25" (5.7 cm x 97.8 cm x 10.8 cm)
Weight	10.5 pounds (4.76 kg)
Color	Black
Connectivity	HDMI ARC/eARC, Optical, Wi-Fi, Bluetooth, Apple AirPlay 2
Voice Assistants	Amazon Alexa, Google Assistant (built-in)
Microphone Array	8 custom-designed microphones
Included Components	Soundbar, Universal Remote, 4 AA Batteries, Cleaning Cloth, ADAPTiQ Headset, Optical Cable, HDMI Cable, Line Cord, Global Safety Sheet, QSC
Power Source	Corded Electric
Bluetooth Range	10 Meters
UPC	017817783217

WARRANTY AND SUPPORT

The Bose Smart Soundbar 700 comes with a Limited Warranty. For specific warranty terms and conditions, please refer to the Global Safety Sheet included in your product packaging or visit the official Bose support website. For additional support, product registration, or to download the full user manual PDF, please visit the [Bose Support](#)

[Website](#).

You can also find the User Guide (PDF) [here](#) and the User Manual (PDF) [here](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question