

[Manuals.plus](#) /

> [Aigostar](#) /

> Aigostar 1L Portable Electric Kettle User Manual - Model B07FJ67QP3

## Aigostar B07FJ67QP3

# Aigostar 1L Portable Electric Kettle

INSTRUCTION MANUAL - MODEL B07FJ67QP3

### Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- Ensure the lid is securely closed before operating.
- Do not fill above the 'MAX' line or below the 'MIN' line to prevent boiling over or boil-dry damage.

## Product Overview

The Aigostar 1L Portable Electric Kettle is designed for efficient and safe water boiling. It features a compact design, automatic shut-off, and boil-dry protection.



Image: The Aigostar 1L Portable Electric Kettle in grey, showcasing its compact design and water level indicator.

### Key Components:

- **Kettle Body:** Contains the heating element and water reservoir.
- **Lid:** Hinged lid for easy filling and pouring.
- **Handle:** Ergonomically designed for safe handling.
- **Water Level Indicator:** Transparent window with MIN and MAX markings.
- **Power Switch:** Located at the base of the handle, illuminates when active.
- **360° Rotational Base:** Cordless kettle body sits on this base for power.
- **Removable Filter:** Located in the spout to prevent limescale from pouring out.



**DUAL WATER WINDOWS**  
Easy to check water level



**REMOVABLE FILTER**  
Easy to clean



**INTEGRATED CORD-WRAP**  
Easy to storage



**WIDE MOUTH**  
Easy to fill and clean

Image: A detailed view highlighting the kettle's dual water windows for easy level checking, the removable filter for cleaning, the integrated cord-wrap in the base for storage, and the wide mouth for easy filling and cleaning.

### Safety Features:

- **Automatic Shut-Off:** The kettle automatically turns off once water reaches a boil.
- **Boil-Dry Protection:** Prevents the kettle from operating if there is no water inside, protecting the heating element.
- **BPA-Free and Food Grade Plastic:** Ensures safe contact with drinking water.
- **Cool-Touch Handle:** Designed to remain cool during operation for safe handling.



Image: A family scene with a baby, emphasizing the kettle's construction from BPA-free, food-grade plastic for safety.

## Setup

### Before First Use:

1. Remove all packaging materials and labels from the kettle and its base.
2. Wipe the exterior of the kettle with a damp cloth. Do not immerse the kettle or base in water.
3. Fill the kettle with water to the 'MAX' level.
4. Boil the water as described in the 'Operating Instructions' section.
5. Discard the boiled water. Repeat this process two to three times to remove any manufacturing residues.
6. The kettle is now ready for regular use.

## Operating Instructions

### Boiling Water:

1. Ensure the kettle is unplugged from the power outlet.
2. Open the lid and fill the kettle with the desired amount of fresh water. Do not fill below the 'MIN' mark or above the 'MAX' mark.



Image: A hand holding the kettle under a running tap, demonstrating how to fill it with water.

3. Close the lid securely.
4. Place the kettle firmly on its power base.
5. Plug the power cord into a standard electrical outlet.
6. Press the power switch down. The indicator light will illuminate, indicating that the kettle is heating.
7. Once the water has boiled, the kettle will automatically switch off, and the indicator light will extinguish.
8. Carefully lift the kettle from the base and pour the hot water. Exercise caution as steam may escape from the spout.



Image: A person carefully pouring hot water from the Aigostar kettle into a teacup, illustrating the pouring action.

9. For re-boiling, wait a few moments for the internal thermostat to reset before pressing the switch again.

## Maintenance and Cleaning

### General Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
- Never immerse the kettle body or power base in water or any other liquid.
- The removable filter in the spout can be rinsed under running water. If heavily soiled, gently brush it with a soft brush. Ensure it is properly reinserted before use.

### Descaling (Removing Limescale):

Limescale buildup can affect the kettle's performance and lifespan. Descale regularly, especially in areas with hard water.

1. Fill the kettle with 3 cups of white vinegar or lemon juice and 1 cup of water. Alternatively, use a commercial descaling solution according to its instructions.
2. Bring the mixture to a boil.
3. Allow the solution to soak in the kettle for 5-8 hours, or overnight for heavy buildup.
4. Empty the kettle and rinse thoroughly with fresh water several times.
5. Boil fresh water in the kettle and discard it to remove any residual descaling solution taste.

## Troubleshooting

| Problem                     | Possible Cause  | Solution   |
|-----------------------------|---|--|
| Kettle does not turn on.    | No power to the outlet; Kettle not properly seated on base; Power switch not pressed. | Check power outlet; Ensure kettle is correctly placed on base; Press the power switch firmly.                              |
| Water does not boil.        | Kettle has boil-dry protection activated; Insufficient water.                         | Allow kettle to cool and add water above 'MIN' level; Ensure water level is between MIN and MAX.                           |
| Water has an unusual taste. | New appliance residue; Limescale buildup.   | Perform initial cleaning steps (boil and discard water several times); Descale the kettle as per maintenance instructions. |
| Kettle leaks.               | Lid not closed properly; Overfilled.  | Ensure lid is securely closed; Do not fill above the 'MAX' line.   |

## Specifications

- **Brand:** Aigostar
- **Model Name:** B07FJ67QP3
- **Color:** Grey
- **Capacity:** 1.0 Liter
- **Power:** 1100W (110V ~60Hz)
- **Special Features:** Automatic Shut-Off, Boil Dry Protection, Heat Resistant Handle, Lightweight, Portable
- **Product Dimensions:** 7.4"L x 6"W x 8.14"H
- **Item Weight:** 16 ounces (1 pound)
- **Included Components:** 360° Base, Mini Electric Tea Kettle, User Manual
- **Material:** BPA-Free, Food Grade Plastic

## Warranty and Support

Aigostar products are manufactured to high-quality standards. For any questions, concerns, or warranty claims regarding your Aigostar 1L Portable Electric Kettle, please contact Aigostar customer service. Please refer to your purchase documentation for specific warranty terms and contact information.

You can typically find support contact details on the official Aigostar website or through the retailer where the product was purchased.