

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Zerone](#) /
- › [Zerone AKB73715601 Universal Remote Control Instruction Manual](#)

Zerone AKB73715601

Instruction Manual for Zerone Universal Remote Control

Model: AKB73715601

PRODUCT OVERVIEW

This Zerone AKB73715601 remote control is designed as a direct replacement for various Smart TV models, including 55LA690V, 55LA691V, 55LA860V, 55LA868V, and 55LA960V. It offers a straightforward, plug-and-play solution without requiring complex programming or setup.

Its compact and ergonomic design ensures a comfortable grip, reducing the likelihood of accidental slips. The remote provides stable performance and a farther transmitting distance compared to some original units.



Image: Front and back view of the Zerone AKB73715601 remote control, showcasing its black finish and button layout on the front, and a smooth, untextured back.

SETUP

Battery Installation

The Zerone AKB73715601 remote control requires batteries for operation. Batteries are not included in the package.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: The back of the remote control with the battery compartment open, showing the slots for two AAA batteries.

Initial Use

This remote control is designed to work immediately with compatible Smart TV models (55LA690V, 55LA691V, 55LA860V, 55LA868V, 55LA960V) without any programming or complex setup procedures. Simply insert the batteries, and it is ready for use.

OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your compatible Smart TV.



Image: A hand holding the Zerone AKB73715601 remote control, demonstrating its ergonomic design and comfortable grip.

Key Functions

- **Power Button (⏻):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (▲ / ▼):** Changes TV channels.
- **Mute Button (⏸):** Mutes or unmutes the TV sound.
- **Input Button:** Selects video input sources (HDMI, AV, etc.).
- **Q.MENU / GUIDE:** Accesses quick menu or TV program guide.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **Back Button:** Returns to the previous screen or menu.
- **EXIT / LIVE TV:** Exits the current menu or returns to live TV.

- **SMART Button:** Accesses Smart TV features and applications.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current application.



Image: A detailed view of the top section of the remote control, highlighting the power button, input selection, and navigation keys.



Image: A close-up of the lower part of the remote control, showing the colored function buttons and media playback controls.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's responsiveness decreases or it stops functioning. Refer to the "Battery Installation" section under Setup for detailed instructions.

Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which can

damage the remote control.

TROUBLESHOOTING

If you experience issues with your Zerone remote control, try the following troubleshooting steps:

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old or depleted batteries with new ones.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Point the remote directly at the TV.

- **Limited range:**

- Replace batteries, as low battery power can reduce range.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the IR signal.

- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- If only specific buttons are not working after cleaning and battery replacement, the remote may be damaged and require replacement.

If these steps do not resolve the issue, contact the manufacturer or seller for further assistance.

SPECIFICATIONS

Attribute	Detail
Product Name	Remote Control
Type	Remote Control for Smart TV
Model	AKB73715601
Color	Black
Size (Approx.)	13.1 × 4.6 × 2 cm / 5.2 × 1.8 × 0.8 inch
Compatible Product	Suitable For 55LA690V, 55LA691V, 55LA860V, 55LA868V, 55LA960V TV
Material	High quality ABS material
Power Source	2 x AAA Batteries (not included)
Item Weight	2.11 ounces



1 Warning

Please dispose of the packaging materials properly after use to avoid choking hazard.

2 Warnung

Bitte entsorgen Sie das Verpackungsmaterial nach Gebrauch ordnungsgemäß, um Erstickungsgefahr zu vermeiden.

3 Avertissement

Veillez jeter les matériaux d'emballage correctement après utilisation pour éviter tout risque d'étouffement.

4 Advertencia

Deseche los materiales de embalaje adecuadamente después de su uso para evitar peligro de asfixia.

5 Ostrzeżenie

Po użyciu należy odpowiednio zutylizować materiały opakowaniowe, aby uniknąć ryzyka zadławienia.

6 Waarschuwing

Gooi de verpakkingsmaterialen na gebruik op de juiste manier weg om verstikkingsgevaar te voorkomen.

7 Varning

Kassera förpackningsmaterialet på rätt sätt efter användning för att undvika kvävningsrisk.

8 Attenzione

Smaltire correttamente i materiali di imballaggio dopo l'uso per evitare rischi di soffocamento.

9 Uyarı

Boğulma tehlikesini önlemek için lütfen kullanımdan sonra ambalaj malzemelerini uygun şekilde atın.

Image: Diagram showing the approximate dimensions of the remote control: 17.1cm length, 4.7cm width, and 1.6cm thickness.

WARRANTY AND SUPPORT

Specific warranty details for this product are not provided in the available information. For any product support, technical assistance, or warranty inquiries, please contact the manufacturer, Zerone, or your point of purchase.

Manufacturer: Zerone

Date First Available: January 15, 2019