

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Snow Joe](#) /

› [Snow Joe SJBLZD 18-Inch Snow Broom with 52-Inch Compact Handle and 4-Inch Ice Scraper User Manual](#)

Snow Joe SJBLZD

Snow Joe SJBLZD 18-Inch Snow Broom with 52-Inch Compact Handle and 4-Inch Ice Scraper User Manual

Model: SJBLZD

1. INTRODUCTION

Thank you for choosing the Snow Joe SJBLZD Snow Broom and Ice Scraper. This tool is designed to efficiently remove snow and ice from your vehicle's surfaces without causing damage. Its dual-purpose design and extendable handle make it a versatile and essential winter accessory.

2. IMPORTANT SAFETY INFORMATION

WARNING:

- Always ensure the snow broom is fully assembled and securely locked before use.
- Do not use excessive force when scraping ice to avoid damaging vehicle surfaces.
- Keep hands and fingers clear of moving parts during assembly and adjustment.
- Store the tool in a safe place, out of reach of children.
- Inspect the tool for any damage before each use. Do not use if damaged.

3. PRODUCT OVERVIEW

The Snow Joe SJBLZD features a patented dual-purpose design for comprehensive snow and ice removal.

- **18-Inch Wide Foam Head:** Designed to push heavy, wet snow off your vehicle without scratching paint, trim, or glass surfaces.
- **Built-in 4-Inch Ice Scraper:** Effectively clears away ice build-up and frost from your windshield.
- **Interlocking Extension Pole:** Extends from 33 inches to 52 inches for maximum reach and compact storage.
- **Lightweight Design:** Weighs only 1.4 lbs for easy maneuverability.
- **Compact Storage:** Built-in bracket holders secure the disassembled pole pieces for neat storage.



Figure 1: The Snow Joe SJBLZD Snow Broom fully assembled, showing the foam head and extended handle.

4. SETUP AND ASSEMBLY

The Snow Joe SJBLZD comes with an interlocking pole for adjustable length and compact storage. Follow these steps to assemble your snow broom:

- 1. Unpack Components:** Carefully remove all components from the packaging. You should have the foam head with the ice scraper, and three pole sections.
- 2. Connect Pole Sections:** Each pole section has a button and a corresponding hole. Align the button on one section with the hole on the next section and push them together until the button snaps into place, securing the connection.
- 3. Attach Foam Head:** Connect the final pole section to the foam head assembly in the same manner, ensuring it is securely locked.
- 4. Adjust Length:** To adjust the length, press the buttons on the pole sections and slide them to your desired length (between 33 and 52 inches). Ensure the buttons snap back into place to lock the pole at the chosen length.



Figure 2: Disassembled components of the Snow Joe SJBLZD, showing the foam head with integrated ice scraper and the three interlocking pole sections.



Figure 3: The Snow Joe SJBLZD Snow Broom disassembled and secured in its compact storage brackets.

5. OPERATING INSTRUCTIONS

The Snow Joe SJBLZD is designed for efficient and safe snow and ice removal from your vehicle.

5.1. Snow Removal (Broom Head)

- 1. Extend the Pole:** Adjust the pole to a comfortable length that allows you to reach all areas of your vehicle without overstretching.
- 2. Push Snow:** Use the wide foam head to push snow off the roof, hood, trunk, and other flat surfaces of your vehicle. Apply steady, even pressure. The non-abrasive foam is safe for your vehicle's finish.
- 3. Clear Windows:** Gently push snow off windows, ensuring not to apply excessive pressure that could damage wipers or window seals.



Figure 4: The Snow Joe SJBLZD Snow Broom in action, demonstrating effective snow removal from a vehicle's surface.

5.2. Ice Removal (Ice Scraper)

- 1. Position Scraper:** Flip the tool to use the integrated 4-inch ice scraper.
- 2. Scrape Ice:** Hold the scraper firmly and apply direct pressure to the ice or frost on your windshield and windows. Use short, controlled strokes to break up and remove ice.
- 3. Avoid Damage:** Be cautious around rubber seals and trim to prevent accidental damage.



Figure 5: A close-up view of the durable 4-inch ice scraper integrated into the Snow Joe SJBLZD.

5.3. Product Demonstration Videos

Video 1: Official demonstration of the Snow Joe SJBLZD snow broom and ice scraper in use, highlighting its effectiveness in clearing snow from vehicles.

Video 2: A detailed look at the Snow Joe SJBLZD, showcasing its features and ease of use for snow and ice removal.

6. MAINTENANCE AND STORAGE

Proper care and storage will extend the life of your Snow Joe SJBLZD.

- **Cleaning:** After each use, wipe down the foam head and ice scraper to remove any remaining snow, ice, or debris.
- **Drying:** Allow the tool to air dry completely before storing to prevent mildew or corrosion.
- **Disassembly for Storage:** To store compactly, press the buttons on the pole sections and separate them. Secure the pole sections and the foam head into the built-in bracket holders on the foam head.
- **Storage Location:** Store the snow broom in a dry, protected area, such as your vehicle's trunk or a garage, away from direct sunlight and extreme temperatures.



Figure 6: The Snow Joe SJBLZD Snow Broom disassembled and stored compactly in a vehicle's trunk, utilizing its built-in bracket holders.

7. TROUBLESHOOTING

If you encounter issues with your Snow Joe SJBLZD, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pole sections do not lock securely.	Buttons are not fully engaged in the holes.	Ensure pole sections are aligned correctly and push firmly until buttons snap into place. Check for debris obstructing the buttons.
Snow is not clearing effectively.	Insufficient pressure or incorrect angle.	Apply more consistent pressure and adjust the angle of the foam head to maximize contact with the snow.
Ice scraper is not effective.	Ice is too thick or scraper is dull.	For very thick ice, consider using a de-icer spray first. Ensure the scraper edge is clean and free of debris.

8. SPECIFICATIONS

- **Model:** SJBLZD
- **Brand:** Snow Joe
- **Head Width:** 18 inches
- **Ice Scraper Width:** 4 inches
- **Adjustable Pole Length:** 33 to 52 inches
- **Material (Head):** Non-abrasive Foam
- **Material (Handle):** Plastic
- **Item Weight:** 1.4 lbs
- **UPC:** 842470110694

9. WARRANTY AND SUPPORT

Snow Joe is committed to providing high-quality products. For detailed warranty information or to register your product, please visit the official Snow Joe website or contact customer support.

- **Product Registration:** Register your product online to ensure full warranty coverage and receive important product updates.
- **Customer Support:** For technical assistance, replacement parts, or general inquiries, please refer to the contact information provided on the Snow Joe official website.

For more information, visit www.snowjoe.com.

© 2026 Snow Joe. All rights reserved.