



Manuals.plus /

› RecPro /

› RecPro RV Microwave with Trim Kit (Model RPM-1) Instruction Manual

RecPro RPM-1

RecPro RV Microwave with Trim Kit

Model: RPM-1

Brand: RecPro

**Safety
Instructions**

**Package
Contents**

**Setup &
Installation**

**Operating
Instructions**

Maintenance

Troubleshooting

Specifications

**Warranty &
Support**

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Only use this appliance for its intended use as described in this manual.
- Always ensure the turntable is properly seated before operation.
- Do not attempt to operate this microwave with the door open.
- Refer to the full safety guidelines in the printed manual for complete information.

2. PACKAGE CONTENTS

Your RecPro RV Microwave package includes:

- RecPro RV Microwave Unit
- Integrated Trim Kit
- Glass Turntable
- Turntable Ring
- Instruction Manual



Front view of the RecPro RV Microwave, showcasing its sleek design and integrated trim kit.

3. SETUP AND INSTALLATION

The RecPro RV Microwave is designed for built-in installation and comes with an integrated trim kit for a seamless appearance in your RV kitchen. This unit is a direct replacement for many Greystone and High Pointe microwaves, fitting perfectly into existing openings.

3.1. Installation Overview

The included trim kit ensures a polished final look, eliminating the need for additional purchases to integrate the appliance into your RV cabinetry. Installation hardware and tools are not included and must be sourced separately.



The RecPro RV Microwave installed in an RV kitchen, demonstrating its built-in appearance.

3.2. Dimensions for Installation

Ensure your cabinet opening matches the dimensions provided for proper fit. The overall product dimensions are approximately 14.75 inches (Depth) x 20.5 inches (Width) x 15 inches (Height).



Detailed dimensions of the microwave unit and its trim kit for accurate installation.

3.3. Turntable Assembly

1. Place the turntable ring in the center of the microwave cavity.
2. Carefully place the glass turntable on top of the ring, ensuring it sits securely in the center.

4. OPERATING INSTRUCTIONS

The RecPro RV Microwave offers convenient features for everyday use, including express cook options and precise power control.



Interior view of the microwave, highlighting the cooking cavity and turntable.

4.1. Basic Operation

- **Setting Cook Time:** Enter the desired cooking time using the number pad.
- **Starting the Microwave:** Press the "START/+30SEC" button to begin cooking.
- **Adding Time:** Press the "START/+30SEC" button during cooking to add 30 seconds to the cook time.
- **Stopping/Canceling:** Press the "STOP/Cancel" button to pause or clear the current operation.

4.2. Express Cook Options

Utilize the pre-programmed express cook options for common food items:

- Popcorn
- Potato
- Pizza
- Beverage
- Soup
- Dinner Plate
- Fresh Vegetable
- Frozen Vegetable



Key features including express cook options, oven capacity, and power output.

4.3. Power Levels and Defrost

- **Power Levels:** The microwave features 10 power levels for precise control over cooking intensity. Refer to the control panel for specific settings.
- **Defrost Function:** Use the dedicated defrost function to thaw frozen foods efficiently.



10 Power Levels for Precise Control



Saves Space by Installing Directly Into Cabinet



+30 Seconds per Touch Instant Start Button

Features such as 10 power levels and the instant start button for quick operation.

4.4. Child Safety Lock

To prevent unintended operation, activate the child safety lock feature. Consult the control panel instructions for enabling and disabling this function.



The child safety lock feature helps prevent accidental use.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your RecPro RV

Microwave.

- **Cleaning the Interior:** Wipe the interior cavity with a damp cloth and mild detergent after each use to prevent food buildup.
- **Cleaning the Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Turntable Care:** The glass turntable and ring can be removed for cleaning. Wash with warm, soapy water or in a dishwasher. Ensure they are dry before placing them back in the microwave.
- **Door Seal:** Regularly inspect the door seals for any signs of damage or wear. A clean and intact door seal is crucial for safe operation.

6. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the following common troubleshooting tips:

- **Microwave Not Starting:** Ensure the door is securely closed. Check if the appliance is properly plugged into a functioning power outlet. Verify that the circuit breaker has not tripped.
- **Food Not Heating:** Confirm that the cooking time and power level are set correctly. Ensure the turntable is rotating.
- **Unusual Noise:** Check if the turntable and ring are correctly positioned. Remove any obstructions.
- **Display Not Working:** Unplug the microwave for a few minutes, then plug it back in to reset the system.

For persistent issues or problems not listed here, please contact RecPro customer support.

7. SPECIFICATIONS

Brand	RecPro
Model	RPM-1
Capacity	1.0 Cubic Feet
Wattage	900 Watts
Voltage	120 Volts
Product Dimensions (D x W x H)	14.75 x 20.5 x 15 inches
Item Weight	37.1 pounds (16.85 Kilograms)
Installation Type	Built-In
Color	Black
Inner Material	Stainless Steel
Special Features	Child Safety Lock, Defrost, Digital Control, Express Cook, Turntable

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official RecPro website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

