

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Russell Hobbs](#) /
- › [Russell Hobbs TR9150CRR Retro Style 2-Slice Toaster User Manual](#)

Russell Hobbs TR9150CRR

Russell Hobbs TR9150CRR Retro Style 2-Slice Toaster User Manual

MODEL: TR9150CRR

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Safety Information](#) [Product](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Important Safety Information

Please read and save these instructions. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

2. Product Overview

The Russell Hobbs TR9150CRR Retro Style 2-Slice Toaster combines classic design with modern functionality to enhance your kitchen experience. This toaster is designed for efficient and consistent toasting.



Figure 1: Russell Hobbs TR9150CRR Retro Style 2-Slice Toaster, Cream.

Key Features:


- **Toasting Timer:** A visible countdown timer indicates the remaining toasting time for the selected shade.
- **Removable Bun Warmer:** A wire rack designed for warming buns, pastries, and rolls. It can be removed for standard toasting.
- **Lift & Look:** Allows monitoring of toasting progress without interrupting the heating cycle.
- **Three Functions:** Dedicated buttons for Bagel (toasts one side, warms the other), Frozen (adjusts toasting for frozen bread), and Cancel (stops toasting cycle).
- **Six Toast Shades:** Adjustable browning control from 1 (light) to 6 (dark) to suit individual

preferences.

- **Removable Crumb Tray:** Facilitates easy cleaning and maintenance.



Figure 2: Close-up of the toasting timer on the Russell Hobbs TR9150CRR. The timer visually indicates the remaining time for the selected browning setting.

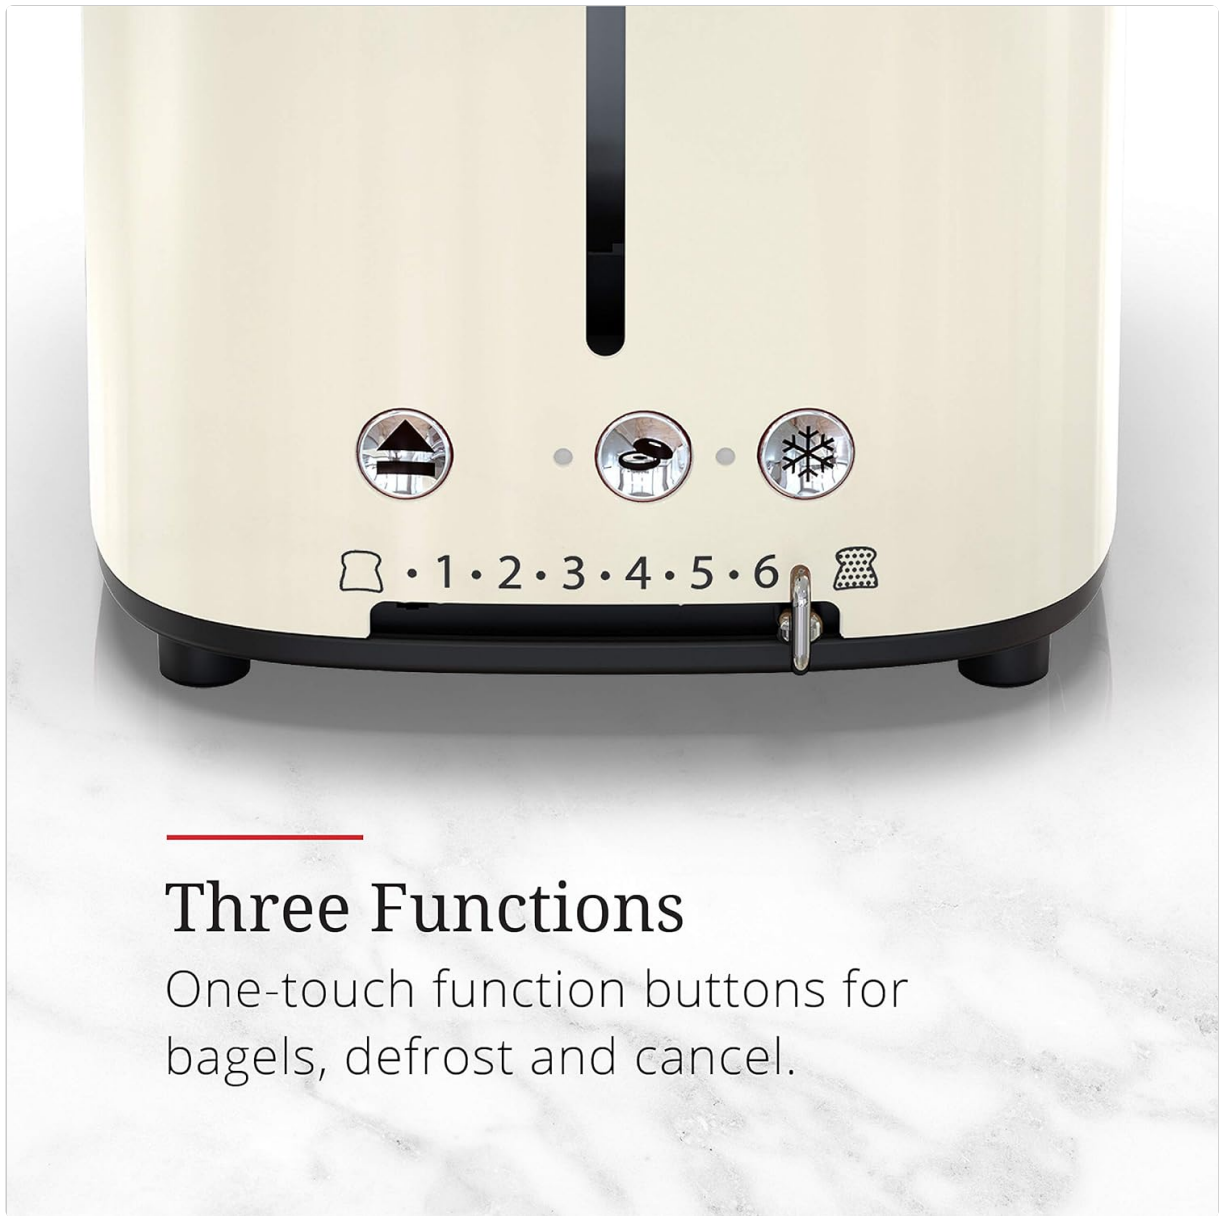

Three Functions

One-touch function buttons for bagels, defrost and cancel.

Figure 3: The toaster features one-touch function buttons for Bagel, Defrost, and Cancel, along with a browning control dial.

What's In The Box



Figure 4: The product package includes the toaster unit, a removable crumb tray, and a warming rack.

3. Setup

3.1 Unpacking and Initial Cleaning

1. Remove all packaging materials, including any stickers or labels, from the toaster.
2. Wipe the exterior of the toaster with a damp cloth to remove any dust.
3. Ensure the crumb tray is properly inserted at the bottom of the toaster.

3.2 First Use

Before toasting food for the first time, operate the toaster without bread to burn off any manufacturing residues. This may produce a slight odor and some smoke; this is normal and will dissipate quickly.

1. Plug the toaster into a standard electrical outlet.
2. Set the browning control to a medium setting (e.g., 3 or 4).
3. Press the toast lever down until it latches.
4. Allow the cycle to complete.
5. Repeat this process 2-3 times in a well-ventilated area.

4. Operating Instructions

4.1 Basic Toasting

1. Place up to two slices of bread into the toaster slots.
2. Select your desired browning level using the browning control dial (1 for light, 6 for dark).
3. Press the toast lever down until it latches. The toasting timer will begin to count down.
4. When the cycle is complete, the toast will automatically pop up.

4.2 Using the Functions

- **Bagel Function:** Insert bagels with the cut side facing inwards. Press the toast lever down, then press the **Bagel** button. This function toasts the cut side and warms the outer side.
- **Frozen Function:** Place frozen bread into the slots. Press the toast lever down, then press the **Frozen** button. This function automatically adjusts the toasting time for frozen items.
- **Cancel Function:** To stop the toasting cycle at any time, press the **Cancel** button.

4.3 Lift & Look Feature

To check the toasting progress without interrupting the cycle, simply lift the toast lever upwards. The toast will temporarily rise, allowing you to inspect it. Release the lever to continue toasting.



Lift & Look

Monitor the progress of toasting without canceling the heating cycle.

Figure 5: The Lift & Look feature allows you to check toast progress without cancelling the heating cycle.

4.4 Using the Removable Warming Rack

The warming rack is designed to gently heat buns, pastries, and rolls. It should not be used for toasting bread slices.

1. Place the warming rack securely onto the top of the toaster slots.
2. Place the items to be warmed on the rack.
3. Set the browning control to a low setting (e.g., 1 or 2).
4. Press the toast lever down.
5. Monitor the items closely to prevent over-warming or burning.
6. Once warmed, lift the toast lever to release and carefully remove the items.
7. Remove the warming rack before toasting bread slices.



Figure 6: The removable warming rack is used for heating buns, pastries, and rolls.

5. Maintenance

5.1 Cleaning the Crumb Tray

Regularly empty the crumb tray to prevent crumb buildup, which can be a fire hazard.

1. Ensure the toaster is unplugged and completely cool.
2. Pull out the crumb tray located at the bottom of the toaster.
3. Discard crumbs.
4. Wipe the tray with a damp cloth, then dry thoroughly.
5. Slide the crumb tray back into place until it clicks securely.

5.2 Exterior Cleaning

1. Ensure the toaster is unplugged and cool.
2. Wipe the exterior surfaces with a soft, damp cloth.
3. Do not use abrasive cleaners or scouring pads, as they may scratch the finish.
4. Dry thoroughly with a soft, dry cloth.

6. Troubleshooting

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; toast lever not fully depressed.	Ensure toaster is plugged in. Check power outlet with another appliance. Press toast lever down until it latches.
Toast is too light/dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher number for darker toast or a lower number for lighter toast.
Smoke coming from toaster.	Crumbs accumulated in crumb tray; food lodged in slots; first use residue.	Unplug and allow to cool. Empty crumb tray. Carefully remove any lodged food (do not use metal). Smoke on first use is normal.
Toast stuck in slots.	Oversized food item.	Unplug the toaster. Carefully remove the food item using non-metallic tongs.

7. Specifications

Model Number: TR9150CRR

Brand: Russell Hobbs

Color: Cream

Material: Stainless Steel

Product Dimensions: 6.7 x 9.8 x 7.9 inches

Weight: 3.7 Pounds

Wattage: 850 watts

Number of Slices: 2

Special Features: Toasting Timer, Removable Bun Warmer, Lift & Look, Bagel Function, Frozen Function, Cancel Function, 6 Browning Levels, Removable Crumb Tray

Manufacturer: Spectrum Brands

UPC: 027043996558



Figure 7: Product dimensions for the Russell Hobbs TR9150CRR Toaster.

8. Warranty & Support

8.1 Limited Warranty

This product is covered by a limited manufacturer's warranty against defects in material or workmanship under normal household use. The warranty period and terms may vary by region. Please refer to the warranty card included with your product or contact customer support for specific details.

8.2 Customer Support

For assistance with product setup, operation, maintenance, or troubleshooting, please contact Russell Hobbs customer support. Contact information can typically be found on the product packaging, in the included documentation, or on the official Russell Hobbs website.

Please retain your proof of purchase for warranty claims.

