

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER TO3210SSD-CL 6-Slice Toaster Oven Instruction Manual

BLACK+DECKER TO3210SSD-CL

BLACK+DECKER TO3210SSD-CL 6-Slice Toaster Oven Instruction Manual

Model: **TO3210SSD-CL** | Brand: **BLACK+DECKER**

IMPORTANT SAFETY INSTRUCTIONS

WARNING: This appliance is designed for 220-240 Volts, 50/60Hz ONLY. It will NOT work in the USA or regions with 110-120 Volt electrical systems. This product is for Export Only.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to 'OFF', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything similar.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
- **In the event of a food flare-up, keep the oven door closed and unplug the power cord immediately.**

PRODUCT OVERVIEW

The BLACK+DECKER TO3210SSD-CL is a versatile 6-slice toaster oven designed for various cooking tasks. It features a spacious interior, multiple cooking functions, and user-friendly controls.



Figure 1: Front view of the BLACK+DECKER TO3210SSD-CL Toaster Oven. The image displays the oven's exterior, including the handle, glass door, interior rack and pan, and the control panel with three rotary knobs and an indicator light.

Parts Description:

- **Oven Housing:** The main body of the toaster oven.
- **Glass Door:** Transparent door for viewing food during cooking.
- **Door Handle:** For opening and closing the oven door.
- **Control Panel:** Located on the right side, housing the control knobs and indicator light.
- **Function/Temperature Knob:** (Top Knob) Selects cooking function (Bake, Broil, Toast, Convection Bake, Keep Warm) and sets temperature.
- **Timer Knob:** (Middle Knob) Sets cooking time up to 60 minutes or selects 'Stay On' for continuous operation.
- **Toast Shade/Timer Knob:** (Bottom Knob) Specifically for toast shade selection or a dedicated toast timer.
- **Power Indicator Light:** Illuminates when the oven is operating.
- **Baking Rack(s):** Two removable racks for holding food.
- **Baking Pan:** A rectangular pan for baking and broiling.
- **Crumb Tray:** Removable tray at the bottom for easy cleaning of crumbs.

SETUP

1. **Unpacking:** Carefully remove all packaging materials, including any labels or stickers. Remove all accessories from inside the oven.
2. **Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure there is at least 10 cm (4 inches) of space on all sides of the oven for proper ventilation. Do not place near flammable materials.
3. **Initial Cleaning:** Wipe the exterior with a damp cloth. Wash the baking rack, baking pan, and crumb tray in warm, soapy water. Rinse and dry thoroughly. Do not immerse the oven body, cord, or plug in water.
4. **First Use (Burn-Off):** Before first use, plug the oven into a 220-240V AC electrical outlet. Turn the

Function/Temperature knob to 'Bake' and set the temperature to 230°C (450°F). Turn the Timer knob to 'Stay On' or 15 minutes. An initial odor or light smoke may occur; this is normal and will dissipate. Ensure the area is well-ventilated. After this initial cycle, turn the oven off and allow it to cool completely.

OPERATING INSTRUCTIONS

Always preheat the oven for 5-10 minutes before cooking, unless otherwise specified by the recipe.

General Operation:

1. Place the baking rack in the desired position. This oven offers three rack positions for cooking flexibility.
2. Place food directly on the rack or in the baking pan.
3. Close the oven door.
4. Select the desired cooking function and temperature using the Function/Temperature knob.
5. Set the cooking time using the Timer knob. The power indicator light will illuminate.
6. When cooking is complete, the timer will chime, and the oven will turn off. If using 'Stay On', manually turn the Function/Temperature knob to 'OFF'.
7. Carefully remove food using oven mitts.

Cooking Functions:

- **Convection Bake:**

This function uses a fan to circulate hot air, allowing for faster and more even cooking. Ideal for baking cookies, cakes, and casseroles.

- a. Place food on the baking rack or in the baking pan.
- b. Turn the Function/Temperature knob to 'Convection Bake' and set the desired temperature.
- c. Set the Timer knob for the desired cooking duration.

- **Bake:**

Standard baking function for a variety of foods. Suitable for roasting meats, vegetables, and general baking.

- a. Place food on the baking rack or in the baking pan.
- b. Turn the Function/Temperature knob to 'Bake' and set the desired temperature.
- c. Set the Timer knob for the desired cooking duration.

- **Broil:**

Uses intense top heat for quick cooking, browning, or toasting. Ideal for thin cuts of meat, fish, or melting cheese.

- a. Place food on the baking pan, positioned on the top rack for best results.
- b. Turn the Function/Temperature knob to 'Broil'. Temperature is fixed for broiling.
- c. Set the Timer knob for the desired broiling duration. Monitor food closely to prevent burning.

- **Toast:**

Designed for toasting bread, bagels, and frozen waffles. The bottom knob controls toast shade.

- a. Place bread slices directly on the baking rack. This oven can accommodate up to 6 slices.
- b. Turn the Function/Temperature knob to 'Toast'.
- c. Use the bottom Toast Shade/Timer knob to select the desired toast shade (light to dark).
- d. The oven will automatically turn off when the toasting cycle is complete.

- **Keep Warm:**

Maintains food at a serving temperature without further cooking. Ideal for keeping dishes warm before serving.

- a. Place cooked food in the oven.
- b. Turn the Function/Temperature knob to 'Keep Warm'.
- c. Set the Timer knob to 'Stay On' or for a specific duration.

CARE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your toaster oven. Always unplug the appliance and allow it to cool completely before cleaning.

- **Crumb Tray:** Slide out the crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly before replacing.
- **Baking Rack and Pan:** Wash in warm, soapy water. For stubborn food residue, soak in warm water before cleaning. These parts are generally dishwasher safe, but hand washing is recommended for best results.
- **Interior:** Wipe the interior walls with a damp cloth and mild liquid soap. Do not use abrasive cleaners or scouring pads, as they can damage the non-stick coating.
- **Exterior:** Wipe the exterior surfaces with a damp cloth. Dry thoroughly. Do not use abrasive cleaners.
- **Glass Door:** Clean with a soft cloth and glass cleaner or mild soapy water. Avoid harsh chemicals that could damage the door seal.
- **Do Not Immerse:** Never immerse the main body of the oven, power cord, or plug in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your toaster oven, refer to the following common problems and solutions:

- **Oven does not turn on:**
 - Ensure the power cord is securely plugged into a functional 220-240V outlet.
 - Check if the Function/Temperature knob is set to a cooking function and the Timer knob is set to a time or 'Stay On'.
 - Verify that the electrical outlet is working by plugging in another appliance.
- **Food is not cooking evenly:**
 - Ensure the oven is preheated before placing food inside.
 - Rotate food halfway through the cooking cycle.
 - Adjust rack position for optimal heat distribution for your specific food item.
 - Avoid overcrowding the oven, which can hinder air circulation.
- **Smoke or burning smell during operation:**
 - A slight odor or smoke during first use is normal.
 - Check for food spills or crumbs on the heating elements or crumb tray. Clean thoroughly after the oven has cooled.
 - Ensure no packaging materials or foreign objects are inside the oven.
 - If a food flare-up occurs, keep the door closed and unplug the oven immediately.
- **Toast is too light or too dark:**
 - Adjust the Toast Shade/Timer knob to a lighter or darker setting as desired.
 - Ensure the oven is not preheated excessively before toasting.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model Number	TO3210SSD-CL
Brand	BLACK+DECKER
Capacity	6-slice toast / 12-inch pizza
Voltage	220-240 Volts

Frequency	50/60Hz
Functions	Convection Bake, Broil, Toast, Keep Warm
Control Type	Knob
Color	Silver
Material	Plastic (exterior accents), Metal (interior)
Product Dimensions	19 x 14 x 12 inches (approximate)
Item Weight	13.52 pounds (approximate)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official BLACK+DECKER website for your region. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require assistance with troubleshooting or parts, please contact BLACK+DECKER customer service directly.