

[Manuals.plus](#) /

› [Drsn](#) /

› Drsn TV Base Pedestal Feet TV Stand Legs User Manual

Drsn TV Base Pedestal Feet (B07FLLSP59)

Drsn TV Base Pedestal Feet Instruction Manual

Model: TV Base Pedestal Feet (B07FLLSP59)

Brand: Drsn

PRODUCT OVERVIEW

The Drsn TV Base Pedestal Feet are designed to provide stable support for various television models. This versatile stand offers both back mount and bottom base stand functionalities, adapting to different TV designs. Constructed from durable aluminum alloy with non-slip rubber pads, it ensures stability and protects surfaces.



Image: A pair of black TV base pedestal feet, with a ghosted image of a TV showing how they attach.

KEY FEATURES

- **Universal Compatibility:** Designed for televisions with specific mounting hole distances (2.16in/5.5cm or within 1.77in/4.5cm between holes, and 3.15in/8cm from top mounting hole to edge).
- **Dual Functionality:** Can be used as a back mount stand or a bottom base stand, offering flexibility for TV placement.
- **Durable Construction:** Made from high-quality aluminum alloy for strength and stability.
- **Surface Protection:** Equipped with rubber pads on the bottom to prevent scratches on furniture.

COMPATIBILITY CHECK

Before installation, it is crucial to verify your television's compatibility with the Drsn TV Base Pedestal Feet. Please ensure your TV meets the following criteria:

1. Your TV must have 4 mounting holes on the back near the bottom.
2. The distance between the mounting holes (Distance A) should be exactly 2.16 inches (5.5 cm) or less than 1.77

inches (4.5 cm).

3. Distance C (from the bottom edge of the TV to the lowest mounting hole) must be less than 2.95 inches.
4. Distance B (from the side edge of the TV to the outermost mounting hole) must be greater than 0.98 inches.
5. The size of the stick (the part that inserts into the TV) is 0.71 x 0.63 inches. Ensure your TV's slots can accommodate this dimension.

IT'S A MATCH ! !



CHECK 1: Pls make sure there are 4 holes on the back of the TV near the bottom.

CHECK 2: Distance **A** is exactly 2.16in or less than 1.77in.

Distance **C** must be less than 2.95in and distance **B** must be greater than 0.98in.

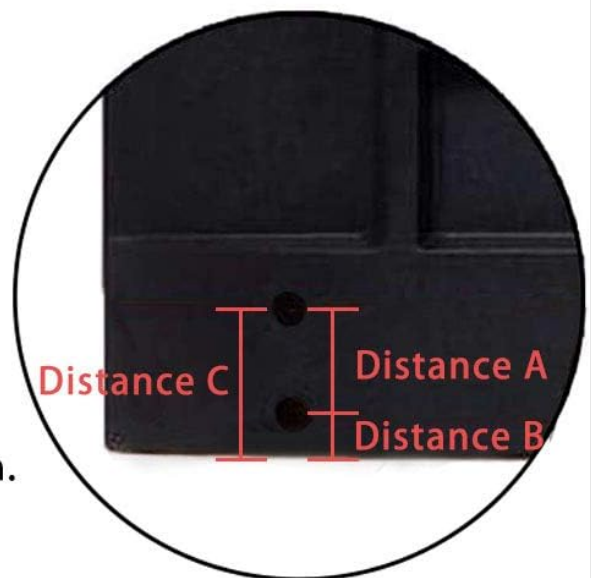


Image: Diagram illustrating the required measurements (Distance A, B, C) for TV compatibility with the stand.

IT'S A BACK MOUNTING TV BASE!

NOTE: Not applicable to some TVs that require embedded TV legs.



Image: Side and back view of a television showing the TV base attached to the back mounting holes.

PACKAGE CONTENTS

Please check the package to ensure all components are present:

- 2 x TV Base Pedestal Feet
- 2 x Upper Mounting Brackets
- Screws (various sizes for TV attachment)
- Hex Key (Allen wrench)
- Non-slip rubber stickers

PACKAGE INCLUDES



Image: All components included in the package, laid out for clear viewing.

SETUP AND INSTALLATION

Follow these steps to correctly install your Drsn TV Base Pedestal Feet:

1. **Step 1: Attach Non-Slip Rubber Stickers.** Carefully peel and apply the non-slip rubber stickers to the bottom of each TV base foot. This prevents scratching your furniture and provides stability.
2. **Step 2: Assemble the Stand.** Insert the upper mounting bracket into the designated slot on the TV base foot. Secure it by tightening the provided screws with the hex key. Ensure it is firmly attached.
3. **Step 3: Attach to TV.** Carefully lay your TV screen-down on a soft, clean surface to prevent damage. Locate the screw holes on the back of your TV that align with the upper mounting brackets. Insert the assembled stands into these holes and tighten the screws securely. Confirm the position and ensure both stands are level and stable.

HOW TO INSTALL



STEP 1: Put on the non-slip rubber stickers.

STEP 2: Insert the upper part into the leg and tighten the screws.

STEP 3: Find the TV screw holes, confirm the position and tighten the screws.

Image: Three panels showing the installation steps: applying rubber pads, assembling the stand, and attaching it to the TV.

Installation Video Guide

For a visual demonstration of the installation process, please watch the official video below:

Your browser does not support the video tag.

Video: An official installation guide demonstrating how to assemble and attach the Drsn TV Base Pedestal Feet to a television.



Image: A television securely placed on a cabinet using the Drsn TV Base Pedestal Feet, demonstrating the final setup.

OPERATING

Once installed, the Drsn TV Base Pedestal Feet provide a fixed, stable platform for your television. No further operation is required beyond ensuring the TV is placed on a flat, sturdy surface to maintain balance and prevent tipping.

MAINTENANCE

To ensure the longevity and continued stability of your TV stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, dry cloth to remove dust. For stubborn marks, a slightly damp cloth can be used, followed by drying. Avoid abrasive cleaners or solvents.
- **Screw Check:** Periodically check all screws to ensure they remain tight. Over time, vibrations or movement can cause screws to loosen. Re-tighten as necessary to maintain stability.
- **Surface Inspection:** Inspect the rubber pads on the bottom of the feet regularly for wear and tear. Replace if they become damaged to prevent scratching surfaces.

TROUBLESHOOTING

If you encounter issues with your Drsn TV Base Pedestal Feet, consider the following:

- **Stand Does Not Fit TV:** Double-check the compatibility measurements provided in the "Compatibility Check" section. Ensure the mounting hole distances and the stick size match your TV's specifications. Not all TVs are compatible, especially those requiring embedded legs or different VESA patterns.
- **TV Feels Unstable:**
 - Ensure all screws attaching the stands to the TV are securely tightened.
 - Verify that the TV is placed on a completely flat and stable surface.
 - Check if the rubber pads are properly affixed to the bottom of the feet.

- **Scratches on Furniture:** Ensure the non-slip rubber stickers are correctly applied to the bottom of both feet. If they are worn, consider replacing them.

SPECIFICATIONS

Attribute	Detail
Brand	Drsn
Model (ASIN)	B07FLLSP59
Material	Aluminum Alloy
Item Weight	1.01 pounds
Package Dimensions	8.46 x 6.42 x 1.61 inches
Mounting Type	Tabletop Mount (Back Mount / Bottom Base)
Movement Type	Fixed
Minimum Compatible TV Size	37 Inches
Maximum Compatible TV Size	65 Inches
UPC	657419458986

Image: A diagram showing the product dimensions, including height, width, and maximum load capacity of 99 lbs.

PRODUCT PARAMETER



WARRANTY AND SUPPORT

Drsn provides an excellent warranty for this TV stand. If you encounter any problems or have questions, please contact us via email. We are committed to responding and resolving your issue within 24 hours.

For further assistance, please visit the official Drsn website or contact customer support through your purchase platform.

© 2024 Drsn. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question