

[Manuals.plus](#) /

> [BOMAZ](#) /

> BOMAZ Replacement Remote Control for Samsung Smart LED TVs (Models UN70KU6300, UN70KU6300FXZA, UN60KU6300FXZA)

BOMAZ 8541715131

BOMAZ Replacement Remote Control User Manual

For Samsung Smart LED TV Models: UN70KU6300, UN70KU6300FXZA, UN60KU6300FXZA

INTRODUCTION

This manual provides instructions for the BOMAZ replacement remote control, designed for use with specific Samsung Smart LED TV models. This remote control offers a direct replacement solution, requiring no programming for immediate use. Please read this manual thoroughly to ensure proper operation and longevity of your device.

SETUP

1. Battery Installation

The remote control requires two (2) AA batteries for operation. Ensure correct polarity when inserting the batteries.



Image: Front view of the BOMAZ replacement remote control. The battery compartment is located on the rear of the device.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two (2) AA batteries, matching the positive (+) and negative (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

2. Initial Use

This BOMAZ replacement remote control is designed for immediate use with compatible Samsung Smart LED TV models without requiring any programming or pairing. Simply install the batteries, point the remote at your television, and begin operation.

Compatible TV Models:

- Samsung UN70KU6300
- Samsung UN70KU6300FXZA
- Samsung UN60KU6300
- Samsung UN60KU6300FXZA

OPERATING INSTRUCTIONS

The remote control utilizes infrared (IR) technology. Ensure a clear line of sight between the remote control and your television's IR receiver for optimal performance. The effective operating distance is approximately 8 meters (26 feet).



Image: Top-down view of the BOMAZ replacement remote control, highlighting the button layout for various functions.

Button Functions:

- **Power ():** Turns the television on or off.
- **123:** Accesses the on-screen number pad for direct channel input.
- **EXTRA:** Provides access to additional TV functions or information.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select items.
- **Back (↶):** Returns to the previous screen or menu.
- **Home (△):** Accesses the Smart Hub or main menu of the television.
- **Play/Pause (⏮):** Controls media playback.
- **Volume (VOL):** Adjusts the sound level. Pressing the button mutes/unmutes.
- **Channel (CH):** Changes television channels. Pressing the button displays the channel list.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote control.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure the batteries are correctly inserted with the proper polarity (+/-). Replace old batteries with new ones if necessary.
- **Line of Sight:** Make sure there are no obstructions between the remote control and the television's IR receiver.
- **Distance:** Confirm you are within the effective operating range of approximately 8 meters (26 feet).
- **TV Power:** Ensure the television is powered on and not in standby mode.

Specific Buttons Not Working

- If only certain buttons (e.g., Volume) are unresponsive, try replacing the batteries first.
- Ensure the remote is clean and there is no debris lodged under the buttons.
- If the issue persists after checking batteries and cleaning, the remote control may require replacement.

SPECIFICATIONS

Model Number	8541715131
---------------------	------------

Brand	BOMAZ
Connectivity Technology	Infrared (IR)
Maximum Range	8 Meters
Battery Type	2 x AA batteries (not included)
Material	ABS Material
Compatible Devices	Samsung Smart LED Televisions
Additional Features	No Programming Required, Universal

WARRANTY INFORMATION

This BOMAZ replacement remote control comes with a 30-day warranty from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues with your remote control that cannot be resolved using the troubleshooting steps provided in this manual, or if you have any questions, please contact the seller directly. They will be able to provide further assistance and support.