

[Manuals.plus](#) /

› [CACAZI](#) /

› CACAZI Wireless Doorbell Model W899 Instruction Manual

CACAZI W899

CACAZI Wireless Doorbell Model W899 Instruction Manual

1. PRODUCT OVERVIEW

The CACAZI Wireless Doorbell Kit (Model W899) provides a reliable and convenient solution for home, office, or store use. It features a long operating range, multiple chime options, adjustable volume, and a waterproof push button. The system includes one receiver and one push button, designed for easy installation without complex wiring.



An overview of the CACAZI Wireless Doorbell system, featuring the plug-in receiver on the left and the waterproof push button on the right.



Transmission	Signal	Intelligent	Volume	Music
Good signal	Long distance transmission	Not afraid of interference	6 Levels volume	48 songs

This image illustrates the main features of the doorbell: good signal transmission, long distance range, interference resistance, 6 volume levels, and 48 available chimes.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Wireless Doorbell Push Button (Transmitter)
- 1 x Plug-in Doorbell Receiver
- 1 x Double-sided Adhesive Tape
- 1 x Screw
- 1 x Alkaline Battery (23A 12V) for the transmitter (pre-installed)

3. SPECIFICATIONS

Model Number	W899
--------------	------

Operating Range	Up to 1100 feet (350m) in open areas
Melodies	48 selectable chimes
Volume Levels	6 levels (0-80dB)
Transmitter Battery	23A 12V alkaline battery (included, not rechargeable)
Receiver Power Source	AC110-220V (plugs into wall outlet)
Transmitter Size	73 x 41 x 19 mm
Receiver Size	92 x 54 x 32 mm
Waterproof Rating	IP44 (for push button)
Applicable Temperature	-30°C to 70°C
Material	ABS plastic

STRONG SIGNAL

Wireless range up to 350 m



The doorbell system offers a strong wireless signal, with an operating range of up to 350 meters (1100 feet) in open areas.

4. SETUP AND INSTALLATION

The CACAZI Wireless Doorbell is designed for easy, wire-free installation. Follow these steps to set up your doorbell:

4.1 Receiver Installation

1. Plug the receiver into a standard electrical outlet in your desired indoor location. Ensure the outlet is functioning correctly.

4.2 Push Button (Transmitter) Installation

The push button can be installed using either the provided double-sided adhesive tape or screws.


Choose from about 48 chimes

Adjust to 6 volume.....

LED Light indicator

US Plug

High quality speaker

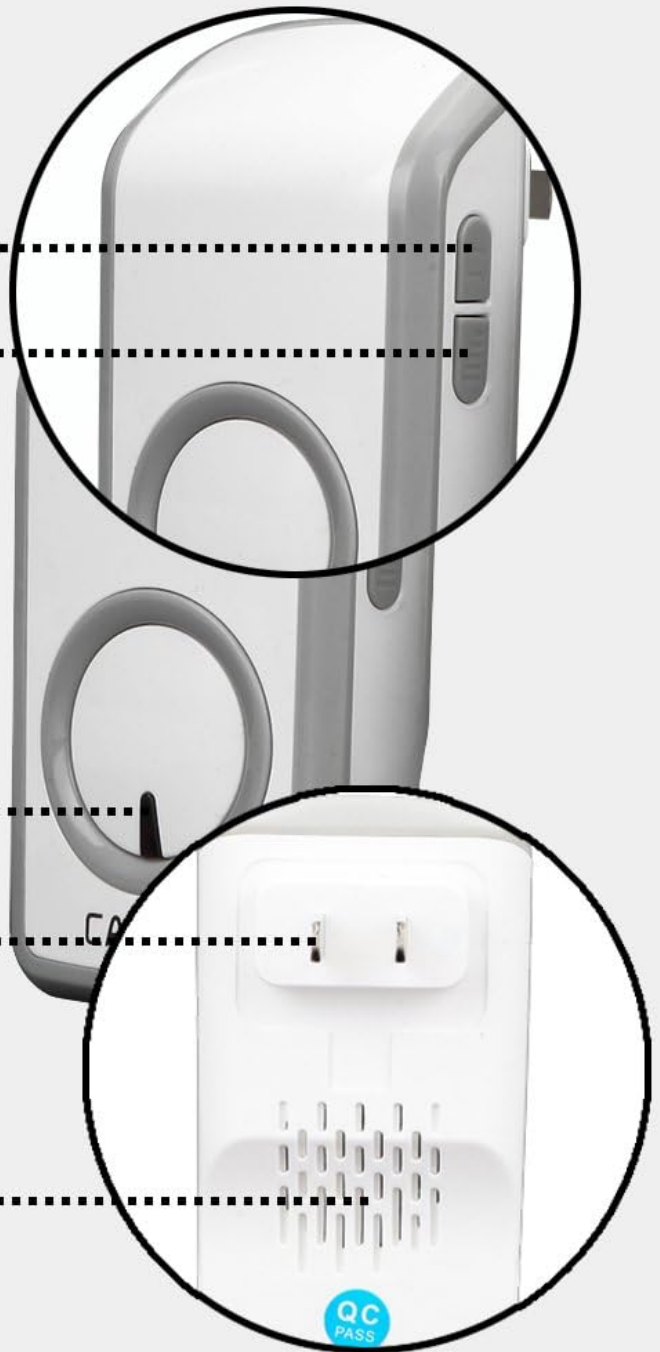

This image demonstrates two installation methods for the push button: using double-sided adhesive tape or mounting with screws and anchors.

Method A: Using Double-Sided Adhesive Tape

1. Clean the desired mounting surface thoroughly to ensure it is dry and free of dust or grease.
2. Peel off one side of the protective film from the double-sided adhesive tape and attach it firmly to the back of the push button.
3. Peel off the other side of the protective film and press the push button firmly onto the cleaned surface for at least 30 seconds.

Method B: Using Screws and Anchors

 
1. Open the push button casing to access the mounting holes.
2. Mark the desired drilling locations on the wall using the push button as a template.
3. Drill pilot holes and insert wall anchors if necessary (for drywall or masonry).
4. Secure the push button to the wall using the provided screw.

5. Close the push button casing.

Important Note:

- Avoid mounting the push button on an iron door or metal surface, as this can significantly interfere with the wireless signal and reduce the operating range.
- The push button is rated IP44 waterproof, making it suitable for outdoor use.

Launcher waterproof design Meet the IP44 standard



WORKING TEMPERATURE

-30° Celsius to 70° Celsius



The push button is designed to be waterproof (IP44 rated) and can operate in temperatures ranging from -30°C to 70°C, making it suitable for outdoor use.

5. OPERATING INSTRUCTIONS

Once installed, operating your CACAZI Wireless Doorbell is straightforward.

5.1 Activating the Doorbell

1. Press the push button (transmitter) located outside your door.
2. The receiver, plugged into an indoor outlet, will ring with the selected chime and flash a blue LED light.

Preess the button with your finger
The blue **LED** lights flashed on the receiver



When the push button is pressed, the receiver emits a blue LED flash, providing a visual alert in addition to the audible chime.

5.2 Changing Chime Melodies

1. Locate the chime selection button on the side of the receiver.
2. Press this button repeatedly to cycle through the 48 available melodies.
3. The receiver will play each melody as you press the button. Stop pressing when you hear your desired chime.


5.3 Adjusting Volume

1. Locate the volume adjustment button on the side of the receiver.
2. Press this button to cycle through the 6 available volume levels (from 0dB to 80dB).
3. Select the volume level that best suits your environment.

Installation Instruction

Solution A:

Mount the button with double-side type

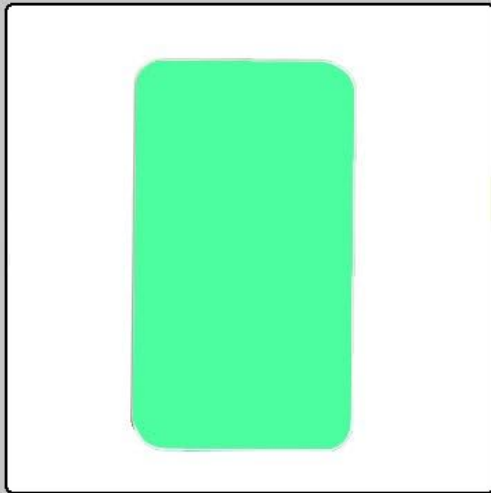


Solution B:

Mount the button with screws and anchors



A detailed view of the receiver, pointing out the chime selection button, volume adjustment button, LED light indicator, US plug, and high-quality speaker.

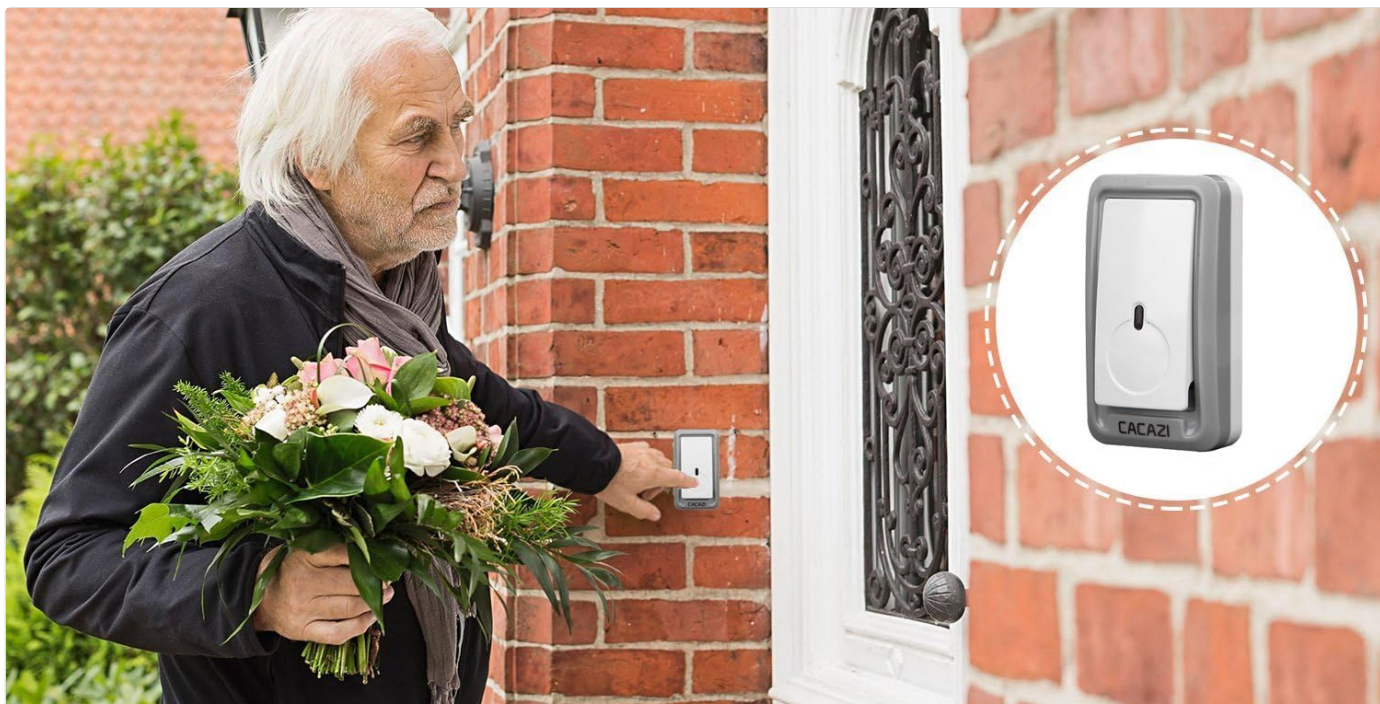

An illustration of the doorbell in a typical usage scenario, with a visitor pressing the outdoor push button and the indoor receiver alerting the homeowner.

6. MAINTENANCE

To ensure optimal performance and longevity of your CACAZI Wireless Doorbell, follow these maintenance guidelines:

6.1 Transmitter Battery Replacement

The push button (transmitter) is powered by a 23A 12V alkaline battery. This battery is not rechargeable. Replace the battery when you notice a decrease in the doorbell's operating range or if the push button's LED indicator (if present) no longer illuminates upon pressing.

1. Carefully open the casing of the push button.
2. Remove the old 23A 12V battery.
3. Insert a new 23A 12V alkaline battery, ensuring correct polarity (+/-).
4. Close the casing securely.

6.2 Receiver

The receiver plugs into a wall circuit and does not require batteries. No specific maintenance is needed beyond ensuring it remains plugged into a working outlet.

6.3 Cleaning

Wipe the doorbell units with a dry, soft cloth to remove dust or dirt. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the components.

7. TROUBLESHOOTING

If you encounter issues with your CACAZI Wireless Doorbell, please refer to the following troubleshooting guide:

Problem: Doorbell does not ring when the push button is pressed.

- **Solution:** Ensure the receiver is securely plugged into a working electrical outlet. Try plugging another device into the same outlet to confirm it has power.
- **Solution:** Check the transmitter battery. The push button requires a 23A 12V alkaline battery. If the battery is depleted, replace it with a new one (refer to Section 6.1).
- **Solution:** Verify the distance between the transmitter and receiver. While the doorbell has an operating range of up to 1100 feet (350m) in open areas, obstacles like thick walls, metal structures, or other electronic devices can reduce this range. Try moving the receiver closer to the push button.
- **Solution:** Ensure the push button is not mounted on an iron door or a large metal surface. Metal can interfere with the wireless signal. Relocate the push button if necessary.

Problem: Chime is too quiet or too loud.

- **Solution:** Adjust the volume using the dedicated volume button on the side of the receiver (refer to Section 5.3).

Problem: Doorbell rings intermittently or has a weak signal.

- **Solution:** Replace the transmitter battery, even if it seems to be working. A low battery can cause signal degradation.
- **Solution:** Check for potential sources of interference, such as large metal objects, thick walls, or other wireless devices operating on similar frequencies. Try repositioning the receiver or transmitter slightly.

8. WARRANTY AND SUPPORT

Your CACAZI Wireless Doorbell is backed by a commitment to quality and customer satisfaction.

- **Warranty:** Every CACAZI product includes a 12-month worry-free guarantee from the date of purchase.
- **Money-Back Guarantee:** A 60-day money-back guarantee is also provided.

For technical support, warranty claims, or any other inquiries, please refer to your purchase documentation or contact the seller directly through the platform where the product was purchased. Please have your model number (W899) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question