

[Manuals.plus](#) /

› [UBay](#) /

› UBay Universal Remote Control for Toshiba TVs Instruction Manual (Model CT-8037)

UBay CT-8037

UBay Universal Remote Control for Toshiba TVs

Model: CT-8037

INTRODUCTION

This manual provides instructions for the UBay Universal Remote Control, designed for use with various Toshiba television models. This remote control is engineered for immediate use without requiring any programming or setup. Simply insert batteries, and it is ready to operate your Toshiba TV.





Image: Front view of the UBay Universal Remote Control, showing all buttons and its ergonomic design.

SETUP: BATTERY INSTALLATION

The UBay Universal Remote Control requires two AA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Incorrect battery orientation may prevent the remote from functioning.



Image: A magnified view of the central buttons on the remote, including Volume, Mute, and the dedicated Netflix button.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your Toshiba TV. Below is a guide to the primary buttons and their functions:

- **POWER (Red Button):** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, etc.).
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **CC (Closed Caption):** Toggles closed captions on or off.

- **PIC MODE / PIC SIZE:** Adjusts picture mode or aspect ratio.
- **Number Pad (0-9, 100):** Direct channel selection.
- **CH RTN (Channel Return):** Switches to the previously viewed channel.
- **VOL (+/-):** Increases or decreases the volume.
- **MUTE:** Silences the TV audio.
- **NETFLIX:** Direct access button for the Netflix application.
- **CH (Channel Up/Down):** Changes channels sequentially.
- **MENU:** Opens the TV's main menu.
- **INFO:** Displays current program information.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Closes the current menu or application.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Previous, Stop, Next):** Controls media playback functions.

COMPATIBILITY

This UBay Universal Remote Control is compatible with a wide range of Toshiba TVs, including LCD, LED, Smart, and 4K models. It is designed to replace various Toshiba remote models, including but not limited to:

- CT-90325
- CT-8037
- CT-90326
- CT-90329
- CT-90296
- CT-90301
- CT-90275
- CT-90302
- CT-90310
- CT-RC1US-16
- CT-90427
- And many more Toshiba TV remote models.



Universal Remote Control for All Toshiba LCD LED HDTV Smart TVs



Compatible with Toshiba Remote:
CT-90325, CT-8037, CT-90326, CT-90329, CT-90296, CT-90301, CT-90275, CT-90302, CT-90310, CT-RC1US-16, CT-90427 and more.....

Image: The UBay remote control displayed alongside a Toshiba television, illustrating its universal compatibility with various Toshiba TV models.

TROUBLESHOOTING

Problem	Solution
Remote is not responding.	◦ Ensure batteries are inserted correctly with proper polarity (+/-). ◦ Replace old batteries with new AA batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Point the remote directly at the TV.

Problem	Solution
Specific buttons are not working.	◦ Check if the button is stuck or dirty. Clean gently if necessary. ◦ Verify that the remote is within operational range and pointed at the TV. ◦ If only specific smart TV buttons (e.g., Netflix) are not working, ensure your TV is a smart TV and connected to the internet.
Remote works intermittently.	◦ Batteries may be low. Replace them. ◦ Ensure a clear line of sight to the TV. ◦ Avoid strong light sources (e.g., direct sunlight) that might interfere with the IR signal.

SPECIFICATIONS

- Brand:** UBay
- Model Number:** CT-8037
- Product Dimensions:** 6.8 x 1.8 x 0.7 inches
- Item Weight:** 1.76 ounces
- Color:** Black
- Special Feature:** Universal compatibility with Toshiba TVs
- Max Number of Supported Devices:** 1 (Television)
- Batteries Required:** 2 x AA (not included)

WARRANTY AND SUPPORT

This UBay Universal Remote Control comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact UBay customer support.

For technical assistance or further inquiries, please visit the UBay official website or contact their customer service department. Contact information can typically be found on the product packaging or the seller's information page.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FM74NHV>

More documents and user manuals: **<https://manuals.plus/>**