

Braun BC02BW

Braun Classic Travel Analogue Alarm Clock

MODEL BC02BW USER MANUAL

Introduction

This manual provides instructions for the setup, operation, and maintenance of your Braun Classic Travel Analogue Alarm Clock, Model BC02BW. Please read these instructions carefully before using the product to ensure proper function and longevity.

Setup

1. Battery Installation

The Braun BC02BW alarm clock requires one (1) AA battery (not included) for operation. Follow these steps to install the battery:

1. Locate the battery compartment cover on the back of the clock.
2. Gently slide or lift the cover to open the compartment.
3. Insert one new AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Back view of the Braun BC02BW alarm clock, illustrating the location of the battery compartment.

2. Setting the Time

To set the current time on your alarm clock:

1. Locate the time setting knob on the back of the clock.
2. Rotate the knob clockwise or counter-clockwise until the hour and minute hands display the correct time.
3. Ensure the time is set accurately, especially for AM/PM if applicable (though this is an analogue clock, setting it correctly for a 12-hour cycle is important for alarm function).



Image: Front view of the Braun BC02BW alarm clock, showing the clock face and hands for time setting.

Operating Instructions

1. Setting the Alarm

To set the desired alarm time:

1. Locate the alarm setting knob on the back of the clock.
2. Rotate this knob until the alarm hand (often a smaller, distinct hand) points to your desired wake-up time.



Image: Top view of the Braun BC02BW alarm clock, highlighting the alarm setting switch and the alarm hand.

2. Activating and Deactivating the Alarm

To turn the alarm on or off:

1. On the top of the clock, locate the alarm ON/OFF switch.
2. Slide the switch to the 'ON' position to activate the alarm. A green indicator may become visible, signifying the alarm is set.
3. Slide the switch to the 'OFF' position to deactivate the alarm. The green indicator will no longer be visible.



Image: Close-up of the alarm ON/OFF switch on the top of the clock, showing the green indicator when the alarm is active.

3. Crescendo Beep Alarm Feature

The BC02BW features a crescendo beep alarm. When activated, the alarm will start with a soft, slow beep and gradually increase in frequency and volume until it reaches its maximum level. This design aims to provide a gentle wake-up experience that becomes more insistent if not turned off.

4. Luminous Tipped Hands

The hour and minute hands of the clock are equipped with luminous tips. These tips absorb light during the day and glow in the dark, allowing for easy time reading in low-light conditions without needing an external light source.



Image: The clock face in a dark environment, demonstrating the visibility of the luminous tipped hands.

Maintenance

1. Cleaning

To clean your alarm clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the clock's finish and internal components.

2. Battery Replacement

When the clock's movement becomes erratic or the alarm sound weakens, it is time to replace the battery. Follow the battery installation steps outlined in the Setup section. Always use a fresh AA battery for optimal performance.

Troubleshooting

If you encounter issues with your Braun BC02BW alarm clock, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Clock not running / Alarm not sounding	Dead or incorrectly installed battery.	Replace the AA battery with a new one, ensuring correct polarity.
Alarm sounds at the wrong time	Alarm time set incorrectly.	Re-adjust the alarm hand to the desired wake-up time.
Alarm is too quiet or inconsistent	Low battery power.	Replace the AA battery with a new one.

Specifications

- **Model:** BC02BW
- **Movement:** Quiet Precision Quartz Movement
- **Alarm Type:** Crescendo Beep Alarm
- **Power Source:** 1 x AA Battery (not included)
- **Dimensions (W x H x D):** Approximately 5.7cm x 5.7cm x 2.7cm (2.24"W x 2.24"H)
- **Features:** Luminous tipped hands, iconic yellow second hand



Image: The Braun BC02BW alarm clock shown in a hand, demonstrating its compact and travel-friendly dimensions.

Warranty

This Braun Classic Travel Analogue Alarm Clock, Model BC02BW, is covered by a manufacturer's 2-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

Customer Support

For further assistance, technical support, or warranty inquiries, please refer to the contact information provided with your product packaging or visit the official Braun website. When contacting support, please have your model number (BC02BW) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

