

## UBay N2QAYB000321

# UBay N2QAYB000321 Remote Control User Manual

For Panasonic LCD and Plasma TVs

## 1. INTRODUCTION

---

This manual provides instructions for the UBay N2QAYB000321 replacement remote control, designed for a wide range of Panasonic LCD and Plasma televisions. This remote is a direct replacement and requires no complex programming or pairing. Simply insert the batteries, and it is ready for immediate use with your compatible TV model.

## 2. PRODUCT OVERVIEW

---





Image: The UBay N2QAYB000321 remote control, featuring a black ergonomic design with clearly labeled buttons for power, input, menu, volume, channel, number pad, and media playback controls.

The UBay N2QAYB000321 remote control is an ergonomic, black-colored device designed to replicate the functionality of the original Panasonic N2QAYB000321 remote. It provides full access to your TV's features, including channel navigation, volume control, input selection, menu access, and media playback functions.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Note: Batteries are not included with the remote control.**

## 4. OPERATING INSTRUCTIONS

---

This remote control is designed for straightforward operation. Once batteries are installed, it is ready for use with your compatible Panasonic TV.

### 4.1 Basic Functions

- **POWER (Red Button):** Turns the TV on or off.
- **INPUT:** Selects the video input source (e.g., HDMI 1, AV, Component).
- **MENU:** Accesses the TV's main menu.
- **EXIT:** Exits the current menu or on-screen display.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Up/Down):** Changes channels.
- **Number Pad (0-9):** Directly enters channel numbers.
- **MUTE:** Mutes or unmutes the TV sound.
- **Directional Pad (Up/Down/Left/Right) & OK:** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **Media Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls playback of connected media devices or TV content.

### 4.2 Specific Functions

- **VIERA TOOLS:** Accesses Panasonic's VIERA Tools menu for quick access to various TV functions.
- **SD CARD:** If your TV supports it, this button may provide access to content on an inserted SD card.
- **VIERA Link:** Controls compatible Panasonic VIERA Link devices connected via HDMI.
- **SUB MENU:** Accesses sub-menus within the TV's interface.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **SAP (Secondary Audio Program):** Selects secondary audio programs, if available.

**Important: This remote control is designed for traditional LCD/Plasma TVs and does not feature smart TV functionalities like voice control or direct app buttons (e.g., Netflix, YouTube) found on some modern smart TV remotes.**

## 5. COMPATIBLE TV MODELS

---

The UBay N2QAYB000321 remote control is compatible with the following Panasonic LCD and Plasma TV models:

- TC-26LX14
- TC-L26X1
- TC-32LX14
- TC-32LX14N
- TC-L32C12
- TC-L32C12K
- TC-L32C12N
- TC-L32G1
- TC-L32S1
- TC-L32X1
- TC-L32X1C

- TC-L32X1N
- TC-L32X1NC
- TC-L37G1
- TC-L37S1
- TC-L37X1
- TC-L42U12
- TC-42PX14
- TC-42PX14N
- TC-50PS14
- TC-50PX14
- TC-50PX14N
- TC-54PS14
- TC-58PS14
- TC-65PS14
- TC-P42C1
- TC-P42C1N
- TC-P42S1
- TC-P42U1
- TC-P42X1
- TC-P42X1N
- TC-P46S1
- TC-P46U1
- TC-P46U1N
- TC-P50C1
- TC-P50S1
- TC-P50U1
- TC-P50X1
- TC-P50X1C
- TC-P50X1N
- TC-P54S1
- TC-P58S1
- TC-P65S1

## **6. MAINTENANCE**

---

### **6.1 Battery Replacement**

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA batteries. Do not mix old and new batteries, or different types of batteries.

### **6.2 Cleaning**

To clean the remote, wipe it with a soft, dry cloth. Do not use liquid or aerosol cleaners, as they may damage the remote's surface or internal components.

## 7. TROUBLESHOOTING

---

- **Remote not responding:** Ensure batteries are inserted correctly with the correct polarity. Replace with fresh batteries if necessary. Check for any obstructions between the remote and the TV's IR sensor.
- **Intermittent response:** This often indicates low battery power. Replace the batteries.
- **Buttons not working:** If specific buttons are unresponsive, try cleaning the remote as described in the Maintenance section. If the issue persists, the remote may need replacement.

## 8. SPECIFICATIONS

---

Feature	Detail
Model Number	N2QAYB000321
Brand	UBay
Compatible Devices	Panasonic LCD and Plasma Televisions
Power Supply	2 x 1.5V AAA Batteries (not included)
Product Dimensions	8.3 x 2 x 0.8 inches
Item Weight	3 ounces
Color	Black
Special Feature	Ergonomic

## 9. WARRANTY AND SUPPORT

---

For any questions, concerns, or support regarding your UBay N2QAYB000321 remote control, please refer to the seller's return policy or contact UBay customer service through the platform where the purchase was made. Please retain your proof of purchase for any warranty claims.