

UBay RMT-B119A

UBay RMT-B119A Remote Control Instruction Manual

Model: RMT-B119A | Brand: UBay

INTRODUCTION

This manual provides comprehensive instructions for the UBay RMT-B119A remote control. This remote is designed as a direct replacement for various Sony Blu-Ray and DVD players, offering full functionality without the need for programming. Please read this manual carefully to ensure proper use and longevity of your remote control.

PACKAGE CONTENTS

- 1 x UBay RMT-B119A Remote Control
- (Batteries are not included and must be purchased separately)

SETUP

1. Battery Installation

The UBay RMT-B119A remote control requires two (2) AAA alkaline batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Front and back view of the UBay RMT-B119A remote control. The back view clearly shows the battery compartment cover.

2. Initial Use

This remote control is pre-programmed and does not require any additional setup or coding for compatible Sony Blu-Ray and DVD players. Once batteries are installed, it is ready for immediate use. Point the remote directly at your Sony Blu-Ray or DVD player to operate it.

OPERATING INSTRUCTIONS

The UBay RMT-B119A remote control provides all essential functions for your Sony Blu-Ray or DVD player. Below is a general overview of key buttons and their functions:



Image: Front view of the UBay RMT-B119A remote control, displaying all functional buttons.

- **Power (I/O):** Turns the Blu-Ray/DVD player on or off.
- **Open/Close:** Opens or closes the disc tray.
- **Input:** Selects the input source (if applicable to the player).
- **TV Power:** (Green button) May control TV power if compatible and configured.
- **Number Buttons (0-9):** For direct track selection or inputting numbers.
- **VOL +/-:** Adjusts volume (if player supports this function or is connected to a compatible audio system).
- **Audio:** Cycles through available audio tracks.
- **Subtitle/Display:** Controls subtitle options or displays on-screen information.
- **Color Buttons (Yellow, Blue, Red, Green):** Used for specific functions within menus or interactive content.
- **TOP MENU / POP UP MENU:** Accesses the disc's top menu or pop-up menu.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and confirms selections.
- **RETURN:** Returns to the previous menu or screen.
- **OPTIONS:** Accesses additional options or settings.
- **HOME:** Returns to the player's main home screen.
- **Playback Controls (PREV, NEXT, PLAY, PAUSE, STOP, SEN):** Standard controls for media

playback.

- **NETFLIX:** Direct access button for the Netflix streaming service (requires player to be connected to internet and Netflix account).
- **BD:** Button for Blu-Ray Disc functions.

Note: The functionality of certain buttons (e.g., TV Power, VOL +/-) may depend on your specific Sony Blu-Ray/DVD player model and its connectivity to other devices.

COMPATIBILITY

The UBay RMT-B119A remote control is compatible with a wide range of Sony Blu-Ray Disc and DVD players. This remote functions identically to the original remote for the following models:

- BDP-BX39
- BDP-BX59
- BDP-BX110
- BDP-BX310
- BDP-BX510
- BDP-S390
- BDP-S390WM
- BDP-S590
- BDP-S590WM
- BDP-S1100
- BDP-S2100
- BDP-S3100
- BDP-S3100/BF
- BDP-S5100
- BDP-S5100/BM
- BDP-S5100E
- BDP-S580
- BDP-XX510

If your Sony Blu-Ray or DVD player model is listed above, this remote control will function without any programming required.

MAINTENANCE

To ensure optimal performance and extend the lifespan of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal circuits or buttons.

TROUBLESHOOTING

If you encounter issues with your UBay RMT-B119A remote control, please refer to the following common solutions:

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> ◦ Ensure batteries are installed correctly with correct polarity. ◦ Replace old batteries with new AAA alkaline batteries. ◦ Ensure there are no obstructions between the remote and the Blu-Ray/DVD player's infrared sensor. ◦ Confirm you are within the effective operating range (up to 10 meters).
Certain buttons do not work.	<ul style="list-style-type: none"> ◦ Verify that your Blu-Ray/DVD player model is listed in the compatibility section. ◦ Some functions (e.g., TV Power, VOL +/-) may require specific player capabilities or setup that is not controlled by this remote. ◦ Clean the remote's surface, especially around the non-working buttons, to ensure no debris is interfering.
Remote works intermittently.	<ul style="list-style-type: none"> ◦ This often indicates low battery power. Replace batteries. ◦ Ensure a clear line of sight to the player's IR sensor.

If the problem persists after trying these solutions, please contact UBay customer support for further assistance.

SPECIFICATIONS

- **Model:** RMT-B119A
- **Brand:** UBay
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Sony Blu-Ray Disc / DVD Players (specific models listed in Compatibility section)
- **Power Source:** 2 x AAA Alkaline Batteries (not included)
- **Maximum Range:** Up to 10 meters (33 feet)
- **Color:** Black
- **Item Weight:** Approximately 2 Ounces (56 grams)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact UBay customer service directly. Contact details can typically be found on the product

packaging or the UBay official website.

© 2026 UBay. All rights reserved.