

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Brother](#) /
- › [Brother HL-L3210CW Compact Digital Color Printer User Manual](#)

Brother HLL3210CW

Brother HL-L3210CW Digital Color Printer User Manual

Model: HLL3210CW

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Brother HL-L3210CW Compact Digital Color Printer. Designed for busy home or small office environments, this printer delivers high-quality color and monochrome prints with versatile connectivity options.



Figure 1: Front view of the Brother HL-L3210CW Compact Digital Color Printer.

SETUP

Follow these steps to set up your Brother HL-L3210CW printer:

1. **Unpacking:** Carefully remove the printer from its packaging. Remove all protective tapes, films, and packing materials from the exterior and interior of the printer. This includes pulling out toner cartridges to remove shipping tabs and plastic.
2. **Toner Cartridge Installation:** Install the included starter toner cartridges (Black, Cyan, Magenta, Yellow) and the DR223CL Drum Unit Set. Refer to the Quick Set-Up Guide for detailed instructions.
3. **Paper Loading:** Load paper into the 250-sheet capacity adjustable paper tray. The tray supports letter or legal size paper. The manual feed slot can accommodate various media types such as card stock, envelopes, and photo paper.



Figure 2: Loading paper into the main paper tray.

4. **Power Connection:** Connect the power cord to the printer and a power outlet.

5. **Connectivity:**

- **Wireless Setup:** The printer supports built-in wireless and Wi-Fi Direct. Follow the on-screen prompts on the printer's LED display or use the Brother setup software from the included CD-ROM to connect to your wireless network.
- **USB Connection:** For a local connection, connect the printer to a single computer via a USB interface (USB cable not included).

6. **Driver Installation:** Install the printer drivers from the included CD-ROM or download the latest drivers from the official Brother support website.

For more detailed setup instructions, please refer to the official [Installation Manual \(PDF\)](#).

OPERATING INSTRUCTIONS

The Brother HL-L3210CW printer is designed for efficient and high-quality printing. Below are key operational aspects:

Printing Documents

- **Print Speed:** The printer offers fast print speeds of up to 19 pages per minute (ppm) for monochrome documents.

Color print speed is 1 ppm.

- **Print Quality:** Achieve professional-quality prints with sharp text and vivid images. The maximum color print resolution is 600x600 dpi or higher, and the maximum black and white print resolution is 600 dpi.
- **Paper Handling:**
 - The main paper tray has a 250-sheet capacity and is adjustable for letter or legal size paper.
 - The manual feed slot supports various media types, including card stock, envelopes, and glossy photo paper.
- **Duplex Printing:** This model supports manual duplex printing.



Figure 3: Retrieving a printed document from the output tray.

Mobile Device Printing

Print wirelessly from your desktop, laptop, smartphone, or tablet by connecting to the same wireless network as the printer. Utilize Brother's mobile printing applications for seamless printing from your devices.



Figure 4: Using a mobile device to print to the Brother HL-L3210CW printer.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your printer.

Toner and Drum Unit Replacement

- Use only Brother Genuine Toner cartridges for best results and to maintain your warranty. Compatible toner cartridge models include TN223BK, TN223C, TN223M, TN223Y, TN227BK, TN227C, TN227M, TN227Y.
- The DR223CL Drum Unit Set has an approximate yield of 18,000 pages. Replace the drum unit when indicated by the printer.
- The printer features a Toner Save Mode to help reduce toner consumption.



Figure 5: Accessing the toner and drum unit for maintenance.

Smart Reorders with Alexa

To ensure you never run out of toner, connect your printer to Alexa. You can receive notifications when toner levels are low and opt-in to Smart Reorders for automatic replenishment.

TROUBLESHOOTING

This section provides general guidance for common issues. For detailed troubleshooting, refer to the comprehensive User Manual (PDF).

- **Printer Not Responding:**

- Check power connections and ensure the printer is turned on.
- Verify network connectivity (Wi-Fi or USB). Restart your router or reconnect the USB cable.
- Ensure printer drivers are correctly installed and updated on your computer or device.

- **Print Quality Issues:**

- Check toner levels and replace cartridges if low.
- Ensure you are using Brother Genuine Toner.

- Clean the drum unit or replace if necessary.
- Verify paper type and quality settings in your print preferences.

- **Paper Jams:**

- Follow the printer's display instructions to locate and carefully remove jammed paper.
- Ensure paper is loaded correctly and not overfilled in the tray.

For more detailed troubleshooting steps, please refer to the official [User Manual \(PDF\)](#).

SPECIFICATIONS

Feature	Specification
Model Name	HLL3210CW
Product Dimensions (DxWxH)	16.1"D x 18.1"W x 9.9"H
Item Weight	37.8 pounds
Printing Technology	Laser
Printer Output	Color
Max Print Speed (Monochrome)	19 ppm
Max Print Speed (Color)	1 ppm
Max Print Resolution (Color)	600x600 dpi or higher
Max Print Resolution (B&W)	600 dpi
Max Input Sheet Capacity	251 sheets
Connectivity Technology	Wired, Wireless (Wi-Fi, Wi-Fi Direct, USB)
Duplex Printing	Manual
Included Components	CD-ROM, Starter Toner Cartridges (BK, C, M, Y), Quick Set-Up Guide, Drum Unit Set
Power Consumption (On-mode)	390 Watts

WARRANTY AND SUPPORT

The Brother HL-L3210CW Compact Digital Color Printer comes with a **one-year limited warranty**. Brother provides free online, call, or live chat support for the life of your printer.

For support, please visit the official Brother support website or refer to the contact information provided in your product documentation.

