

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› User Manual for ECONTROLLY NS-RC4NA-14 Replacement Remote Control

ECONTROLLY RCEC-NS-RC4NA-14

User Manual for ECONTROLLY NS-RC4NA-14 Replacement Remote Control

Model: NS-RC4NA-14 | Brand: ECONTROLLY

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY NS-RC4NA-14 replacement remote control. Designed to be a direct replacement for various Insignia LCD HDTV models, this remote offers seamless operation without the need for complex programming. Simply insert batteries, and it's ready for use.

Compatible Insignia LCD HDTV models include, but are not limited to: NS19E310NA15, NS22E400NA14, NS24D510NA15, NS24E200NA14, NS24E400, NS28D310NA15, NS28E200NA14, NS29D310NA15, NS32D200NA14, NS32D201NA14, NS32D310NA15, NS32D311MX15, NS32D311NA15, NS32D312NA15, NS39D400NA14, NS40D510NA15, NS42D510NA15, NS46D400NA14, NS48D510NA15, NS50D400NA14, NS50D550NA15, NS55D550NA15, NS65D550NA15.

SETUP

Battery Installation

The NS-RC4NA-14 remote control requires two (2) AAA batteries for operation. No programming or pairing is necessary; the remote functions immediately upon battery insertion.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.
5. The remote is now ready for use with your compatible Insignia LCD HDTV.



Image: The ECONTROLLY NS-RC4NA-14 replacement remote control, showing its full layout of buttons including power, input, number pad, navigation, volume, channel, and media controls. The model number NS-RC4NA-14 is visible at the bottom.

OPERATING INSTRUCTIONS

Button Functions

Familiarize yourself with the primary functions of the remote control buttons:

Button	Function
Power (Red Button)	Turns the TV on or off.

Button	Function
INPUT	Cycles through available input sources (HDMI, AV, Component, etc.).
0-9 (Number Pad)	Directly selects TV channels or enters numerical values.
MENU	Accesses the TV's main menu for settings and options.
Navigation Arrows (Up, Down, Left, Right)	Navigates through menu options and channel lists.
ENTER	Confirms selections within menus.
EXIT	Exits the current menu or on-screen display.
INFO*	Displays information about the current program or input.
ASPECT	Adjusts the screen aspect ratio (e.g., 16:9, 4:3).
CCD	Activates or deactivates Closed Captioning.
VOL (+/-)	Increases (+) or decreases (-) the volume level.
MUTE	Mutes or unmutes the TV audio.
CH (Up/Down)	Changes the TV channel up or down.
SLEEP	Sets a sleep timer for the TV.
FAVORITE	Accesses favorite channels list.
MTS/SAP	Selects Multi-channel Television Sound (MTS) or Secondary Audio Program (SAP) options.
PICTURE	Adjusts picture modes (e.g., Standard, Movie, Vivid).
Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip Back, Skip Forward)	Controls media playback functions when connected to compatible devices or internal media players.
AUDIO	Adjusts audio settings or selects audio tracks.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal components.

Troubleshooting

If you experience issues with your remote control, try the following solutions:

Problem	Solution
Remote is not responding.	• Ensure batteries are inserted correctly with proper polarity (+/-). • Replace old batteries with new AAA alkaline batteries. • Check for any obstructions between the remote and the TV's IR sensor. • Ensure you are within the effective range and line of sight of the TV.
Some buttons are not working.	• Clean the remote's surface, especially around the non-functioning buttons, to remove any dirt or residue. • Replace batteries, as low power can sometimes affect specific button responsiveness. • If the issue persists for specific buttons, the remote may be damaged and require replacement.
Remote works intermittently.	• This often indicates low battery power. Replace the batteries. • Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the IR signal.

Specifications

Feature	Detail
Model Number	RCEC-NS-RC4NA-14
Brand	ECONTROLLY
Compatible Devices	Insignia LCD HDTVs (various models)
Power Source	2 x AAA Batteries (not included)
Color	Black
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce
Special Feature	Ergonomic design, No programming required

Warranty and Support

As a replacement remote control, this product typically does not come with a separate manufacturer's warranty. However, your purchase may be covered by the return and refund policies of the retailer from whom you purchased the item. For any issues or inquiries regarding your ECONTROLLY NS-RC4NA-14 remote control, please refer to the customer service or support channels provided by your point of purchase (e.g., Amazon customer service for purchases made on

Amazon.com). They can assist with returns, replacements, or further troubleshooting.
Please retain your purchase receipt or order confirmation as proof of purchase for any support claims.