

Beper 50.160

Beper 50.160 Vertical Steamer User Manual

Model: 50.160

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Beper 50.160 Vertical Steamer. This manual provides essential instructions for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Precautions:

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Keep the steamer out of reach of children and pets.
- Do not touch the hot steam nozzle or soleplate during operation or immediately after use.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the steamer.
- Unplug the appliance from the power outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Never direct steam towards people, animals, or electrical appliances.
- Do not operate the steamer if the cord or plug is damaged, or if the appliance malfunctions or has been dropped.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Beper 50.160 Vertical Steamer and its accessories.



Image 2.1: The Beper 50.160 Vertical Steamer shown with its packaging, highlighting the main unit and included accessories: a clothes brush, a nylon brush, and a trouser clip.

- **Main Steamer Unit:** Handheld device with steam nozzle and water tank.
- **Water Tank:** Detachable tank with a 120ml capacity.
- **Steam Nozzle/Soleplate:** The heated surface from which steam is emitted.
- **Power Button/Steam Trigger:** Controls steam output.
- **Clothes Brush:** Attachment for removing lint and refreshing fabrics.



Image 2.2: Detailed view of the clothes brush attachment, designed to gently brush fabrics while steaming.

- **Nylon Brush:** Attachment for tougher fabrics or deeper cleaning.



Image 2.3: Detailed view of the nylon brush attachment, suitable for more robust fabric treatment.

- **Trouser Clip:** Attachment for steaming trousers and creating creases.



Image 2.4: The steamer unit with the trouser clip attachment, useful for precise steaming of garments like trousers.

3. SETUP INSTRUCTIONS

1. **Unpack the Steamer:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
2. **Fill the Water Tank:**
 - Ensure the steamer is unplugged.
 - Remove the water tank from the main unit.
 - Open the water tank cap and fill with distilled or demineralized water up to the 'MAX' line (120ml capacity). Do not overfill.
 - Close the cap securely and reattach the water tank to the main unit.
3. **Attach Desired Accessory:** If needed, securely attach the clothes brush, nylon brush, or trouser clip to the steam nozzle until it clicks into place.
4. **Connect to Power:** Plug the power cord into a suitable electrical outlet (230V).

4. OPERATING INSTRUCTIONS

Follow these steps for effective garment steaming.

1. **Preheating:** Once plugged in, the steamer will begin to heat up. The indicator light will illuminate. It typically takes about 15 seconds for the steamer to reach operating temperature. The light may turn off or change color when ready.
2. **Prepare Garment:** Hang the garment on a hanger. For best results, gently pull the fabric taut with one hand while steaming with the other.
3. **Begin Steaming:** Hold the steamer upright and press the steam trigger. Move the steam nozzle slowly over the fabric, allowing the steam to penetrate and relax the fibers.
4. **Steaming Technique:**
 - For delicate fabrics, hold the steamer slightly away from the garment.
 - For heavier fabrics, press the nozzle gently against the fabric.
 - Use the brush attachments to help smooth out wrinkles and remove lint.



Image 4.1: A user demonstrating the vertical steaming process on a light blue top, holding the fabric taut for effective wrinkle removal.

5. **Continuous Steam:** The 120ml tank provides approximately 6 minutes of continuous steam. Refill as needed, ensuring the unit is unplugged first.
6. **Finishing:** Once steaming is complete, release the steam trigger. Unplug the steamer and allow it to cool down completely before storing.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your steamer.

1. **Empty Water Tank:** After each use, ensure the steamer is unplugged and cooled. Remove the water tank and empty any remaining water. This prevents mineral buildup.
2. **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Clean Steam Nozzle:** If mineral deposits appear on the steam nozzle, gently wipe them with a cloth dampened with a mild vinegar solution. Rinse with a damp cloth.
4. **Descaling (Periodically):** If you notice reduced steam output or sputtering, descaling may be necessary. Fill the water tank with a mixture of 50% white vinegar and 50% distilled water. Run the steamer until half the solution is used, then unplug and let it sit for 30 minutes. Repeat the process

with the remaining solution, then rinse the tank and run with clean distilled water.

5. **Storage:** Ensure the steamer is completely cool and dry before storing. Store it in a cool, dry place, preferably in its original packaging.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank empty; Steamer not heated sufficiently; Mineral buildup.	Refill water tank; Allow adequate preheating time (15 seconds); Perform descaling procedure.
Water leaking from nozzle.	Overfilled water tank; Steamer not fully heated; Mineral buildup.	Do not overfill tank; Wait for steamer to fully heat up; Perform descaling procedure.
Steamer not turning on.	Not plugged in; Power outlet issue; Appliance malfunction.	Ensure plug is securely in outlet; Test outlet with another appliance; Contact customer support if issue persists.

7. SPECIFICATIONS

- **Model:** Beper 50.160
- **Power:** 1300 Watts
- **Voltage:** 230 Volts
- **Water Tank Capacity:** 120 Milliliters
- **Steam Flow:** Approximately 25 g/min
- **Heat-up Time:** Approximately 15 seconds
- **Continuous Steam Time:** Approximately 6 minutes (per full tank)
- **Product Dimensions:** 27.2 x 15.5 x 14.2 cm
- **Item Weight:** 750 g
- **Color:** Gold

8. WARRANTY AND SUPPORT

This Beper 50.160 Vertical Steamer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or inquiries regarding your product, please contact Beper customer service through their official website or the contact information provided in your product documentation. When contacting support, please have your model number (50.160) and purchase details ready.

