

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nintendo](#) /

› [Nintendo Joy-Con Wrist Strap \(Model: HAC-014\) Instruction Manual](#)

**Nintendo HAC-014**

# Nintendo Joy-Con Wrist Strap (Model: HAC-014) Instruction Manual

## INTRODUCTION

Welcome to your new Nintendo Joy-Con Wrist Strap. This accessory is designed to enhance your gaming experience by providing a secure grip and easier access to the SL and SR buttons during active play and motion-controlled games on your Nintendo Switch.

## PRODUCT OVERVIEW

The Nintendo Joy-Con Wrist Strap is an official accessory designed to attach to your Nintendo Switch Joy-Con controller. It helps prevent accidental drops during gameplay and improves button accessibility.





**Image:** The Nintendo Joy-Con Wrist Strap in black, featuring its rail connector and adjustable cord. This strap is designed to be attached to a Joy-Con controller.

### Components:

- One (1) Nintendo Joy-Con Wrist Strap (Black)

### SETUP INSTRUCTIONS

## Attaching the Wrist Strap to a Joy-Con Controller

1. Identify the rail on the side of your Joy-Con controller. This is the side with the small '+' or '-' button and the SL/SR buttons.
2. Align the rail on the wrist strap with the rail on the Joy-Con controller. Ensure the wrist strap is oriented correctly, with the cord facing the bottom of the controller.
3. Gently slide the wrist strap downwards along the Joy-Con's rail until you hear a distinct click. This indicates that the strap is securely locked into place.
4. Before use, gently pull on the wrist strap to confirm it is firmly attached and will not detach during gameplay.

## Detaching the Wrist Strap from a Joy-Con Controller

1. Locate the small release button on the back of the wrist strap, near where it connects to the Joy-Con.
2. Press and hold this release button.
3. While holding the button, slide the wrist strap upwards to remove it from the Joy-Con controller. Do not force the strap if it does not slide easily; ensure the release button is fully depressed.

## OPERATING INSTRUCTIONS

### Using the Wrist Strap During Gameplay

1. Once the wrist strap is securely attached to your Joy-Con controller, place your hand through the loop of the strap.
2. Adjust the cord lock to tighten the strap around your wrist. This ensures the Joy-Con remains attached to your person, even during vigorous motion-controlled gameplay, preventing accidental release or damage.
3. When the Joy-Con is held horizontally, the wrist strap extends the SL and SR buttons, making them more prominent and easier to press. This is particularly useful in multiplayer games where a single Joy-Con is used by each player.

## MAINTENANCE AND CARE

To ensure the longevity and proper function of your Nintendo Joy-Con Wrist Strap, follow these care guidelines:

- **Cleaning:** Wipe the wrist strap with a soft, dry cloth to remove dust or smudges. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Avoid Chemicals:** Do not use harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the strap's material or finish.
- **Storage:** Store the wrist strap in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the strap for any signs of wear, tear, or damage to the locking mechanism. Discontinue use if damage is observed.

## TROUBLESHOOTING

### Wrist Strap Not Attaching Securely

- **Check Alignment:** Ensure the wrist strap's rail is perfectly aligned with the Joy-Con's rail.
- **Clear Debris:** Inspect both rails for any dust, dirt, or foreign objects that might obstruct the connection. Clean if necessary.
- **Firm Slide:** Apply firm, even pressure when sliding the strap down until you hear a click. Do not force it.

## Difficulty Pressing SL/SR Buttons

- **Full Attachment:** Verify that the wrist strap is fully attached and locked onto the Joy-Con. If it's not fully seated, the extended buttons may not align correctly.
- **Orientation:** Ensure the Joy-Con is held horizontally for optimal access to the extended SL/SR buttons.

## SPECIFICATIONS

- **Model Number:** HAC-014
- **Dimensions:** Approximately 11.99 cm (L) x 3.51 cm (W) x 2.49 cm (H)
- **Weight:** Approximately 20 grams
- **Color:** Black
- **Compatibility:** Nintendo Switch Joy-Con Controllers

## WARRANTY AND SUPPORT

For product support, warranty information, or service inquiries regarding your Nintendo Joy-Con Wrist Strap, please visit the official Nintendo support website or contact Nintendo customer service directly. Specific warranty terms may vary by region.

If you purchased this product from a retailer, please consult their return and exchange policies for details regarding defective or damaged items. Keep your proof of purchase for any warranty claims.