

ECONTROLLY RM-GD027

ECONTROLLY RM-GD027 Remote Control Instruction Manual

Model: RM-GD027 | Brand: ECONTROLLY

INTRODUCTION

This instruction manual provides comprehensive guidance for the proper use and maintenance of your new ECONTROLLY RM-GD027 Remote Control. This remote is designed as a direct replacement for various Sony BRAVIA TV models, offering immediate functionality without the need for complex programming. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

SAFETY INFORMATION

- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not mix old and new batteries, or different types of batteries (e.g., alkaline and rechargeable).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Avoid exposing the remote control to direct sunlight, heat sources, or excessive moisture.
- Do not attempt to disassemble or modify the remote control. This may void the warranty and cause damage.

PRODUCT OVERVIEW

The ECONTROLLY RM-GD027 is a dedicated replacement remote control for specific Sony BRAVIA TV models. It features a standard layout with all essential functions for TV operation.





Figure 1: Front view of the ECONTROLLY RM-GD027 remote control. This image displays the full layout of the remote, including the power

button, input selection, channel and volume controls, numeric keypad, and navigation buttons.

Button Functions:

Button	Function
Power (I/O)	Turns the TV on or off.
AUDIO	Selects audio output options.
RELATED SEARCH	Initiates a related content search.
Input Selection (Square with arrow)	Switches between different input sources (HDMI, AV, etc.).
Playback Controls (Rewind, Play, Fast Forward, Stop, Pause, Skip)	Controls media playback.
I-MANUAL	Accesses the TV's on-screen instruction manual.
SYNC MENU	Accesses the BRAVIA Sync menu for connected devices.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions, often used in menus or interactive services.
GUIDE	Displays the electronic program guide.
SEN (Sony Entertainment Network)	Direct access to Sony Entertainment Network services.
Navigation Pad (Up, Down, Left, Right, Enter)	Navigates through menus and selects items.
RETURN	Goes back to the previous screen or menu.
OPTIONS	Displays context-sensitive options for the current screen.
HOME	Accesses the TV's main home menu.
ANALOG/DIGITAL	Switches between analog and digital TV modes.
Numeric Keypad (0-9)	Direct channel entry and numerical input.
Volume (+/-)	Adjusts the TV volume.
Mute (Speaker with cross)	Mutes or unmutes the TV sound.
PROG (+/-)	Changes TV channels up or down.
MEDIA	Accesses media playback functions.

SETUP

Battery Installation:

The ECONTROLLY RM-GD027 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries correctly:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect installation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 2: Back view of the ECONTROLLY RM-GD027 remote control with the battery compartment open, showing the placement for two AAA batteries.

Once batteries are installed, the remote control is ready for use. No programming or pairing is required for compatible Sony BRAVIA TV models.

OPERATING INSTRUCTIONS

The ECONTROLLY RM-GD027 remote control is designed for immediate use with compatible Sony BRAVIA TV models. Simply point the remote towards your television and press the desired button.

Compatibility:

This remote control is compatible with the following Sony BRAVIA TV models:

- KDL-55W804A
- KDL-55W800A
- KDL-50W704A
- KDL-50W700A
- KDL-47W804A
- KDL-50W708A
- KDL-47W800A
- KDL-46W708A
- KDL-46W704A

Basic Operation:

- **Power On/Off:** Press the **Power (I/O)** button to turn your TV on or off.
- **Channel Selection:** Use the **PROG (+/-)** buttons to change channels sequentially, or use the **Numeric Keypad (0-9)** for direct channel entry.
- **Volume Control:** Adjust the sound level using the **Volume (+/-)** buttons. Press the **Mute** button to silence the TV.
- **Input Source:** Press the **Input Selection** button to cycle through available input sources (e.g., HDMI 1, AV, Component).
- **Menu Navigation:** Use the **Navigation Pad** (Up, Down, Left, Right) to move through on-screen menus and press the central **Enter** button to confirm selections.
- **Home Menu:** Press the **HOME** button to access the main menu of your Sony BRAVIA TV.
- **Return:** Press the **RETURN** button to go back to the previous screen or exit a menu.

MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	Batteries are dead or incorrectly installed.	Replace with new AAA batteries, ensuring correct polarity (+/-).
Remote control has limited range or intermittent response.	Weak batteries; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries; Remove any objects blocking the line of sight to the TV's IR sensor; Ensure the TV's IR sensor is clean.
Some buttons do not function.	Button malfunction; TV model not fully compatible with all functions.	Ensure your TV model is listed in the compatibility section. If issues persist, the remote may be faulty.
Remote makes clicking noise when using buttons.	Normal characteristic of the remote's button mechanism.	This is a known characteristic and does not indicate a malfunction.

SPECIFICATIONS

- Model:** RM-GD027
- Brand:** ECONTROLLY
- Compatibility:** Sony BRAVIA TVs (KDL-55W804A, KDL-55W800A, KDL-50W704A, KDL-50W700A, KDL-47W804A, KDL-50W708A, KDL-47W800A, KDL-46W708A, KDL-46W704A)
- Power Source:** 2 x AAA Batteries (not included)
- Connectivity Technology:** Infrared (IR)
- Product Dimensions:** Approximately 7 x 2 x 0.65 inches (17.78 x 5.08 x 1.65 cm)
- Item Weight:** Approximately 1 ounce (28.35 grams)
- Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the seller's policy or contact the point of purchase. Keep your purchase receipt as proof of purchase.

For further assistance, you may also visit the [ECONTROLLY brand page on Amazon](#) or contact Amazon customer service for product-related inquiries.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question