

Chefman RJ11-17-CTI-RL

Chefman Electric Kettle with Temperature Control User Manual

Model: RJ11-17-CTI-RL

INTRODUCTION

Thank you for choosing the Chefman Electric Kettle. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this guide thoroughly before first use and retain it for future reference.

The Chefman Electric Kettle is designed for rapid boiling and precise temperature control, making it ideal for a variety of hot beverages and instant meals. Its durable glass construction and advanced safety features ensure a reliable and convenient experience.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The kettle features an automatic shut-off function and boil-dry protection for enhanced safety.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Chefman Electric Kettle:

- **Glass Carafe:** Transparent body with water level markings (MIN, 0.5L, 1.0L, 1.5L, MAX 1.8L).


- **Power Base:** 360° swivel base for cordless convenience.
- **Handle:** Ergonomically designed for easy gripping and pouring.
- **Control Panel:** Buttons for power and temperature selection with LED indicators.
- **Removable Tea Infuser:** For steeping loose leaf tea directly in the kettle.
- **Lift-Off Lid:** Fully removable for easy filling and cleaning.



This image displays the Chefman Electric Kettle, highlighting its clear glass body, black handle and base, and the internal tea infuser. Water is actively boiling, indicated by bubbles and red LED illumination at the base.

Customize Your Temperature

5 color-coded temp settings

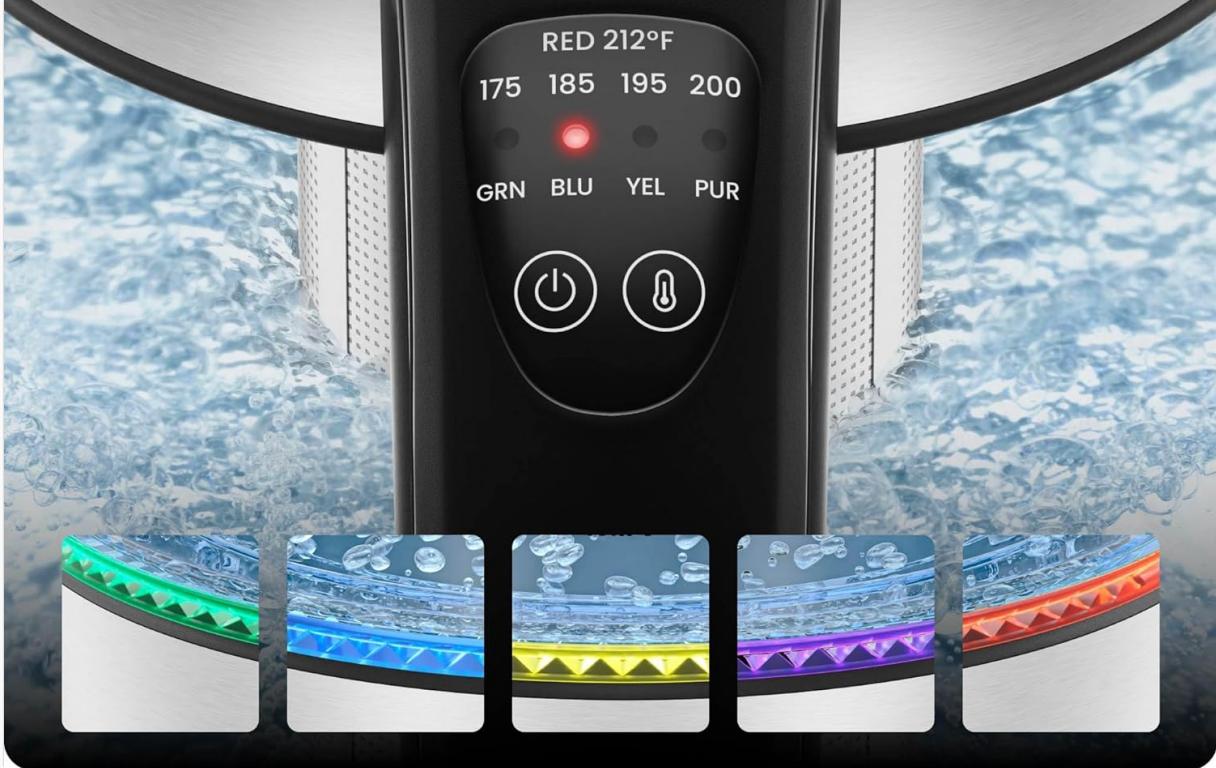

A detailed view of the kettle's control panel on the handle, showing buttons for power and temperature selection. Various temperature presets (175°F, 185°F, 195°F, 200°F, 212°F) are visible, along with corresponding color-coded LED indicators (Green, Blue, Yellow, Purple, Red).

SETUP

Before first use, follow these steps:

1. Unpack the kettle and all accessories. Remove any packaging materials.
2. Wash the glass carafe, lid, and tea infuser with warm, soapy water. Rinse thoroughly and dry. Do not immerse the power base in water.
3. Place the power base on a dry, flat, stable, and heat-resistant surface.
4. Fill the kettle with water up to the MAX fill line (1.8L). Boil the water and then discard it. Repeat this process 2-3 times to remove any manufacturing residue.

Removable Lift-Off Lid

Easy to clean or fill



This image shows the Chefman Electric Kettle with its lid removed, illustrating how easily it detaches for filling and cleaning.

OPERATING INSTRUCTIONS

Using your Chefman Electric Kettle is simple:

- 1. Fill the Kettle:** Remove the lid and fill the glass carafe with fresh, cold water. Do not fill below the MIN line or above the MAX line (1.8L).
- 2. Place on Base:** Securely place the kettle onto the power base. Ensure the kettle is properly seated.
- 3. Plug In:** Plug the power cord into a standard electrical outlet.
- 4. Select Temperature:** Press the power button to turn on the kettle. Use the temperature selection button to cycle through the 5 preset temperatures:
 - 175°F (Green LED)
 - 185°F (Blue LED)
 - 195°F (Yellow LED)
 - 200°F (Purple LED)
 - 212°F (Red LED - Boil)

The kettle will begin heating to the selected temperature. The LED lights will indicate the heating

mode.

5. **Automatic Shut-Off:** The kettle will automatically shut off once the selected temperature is reached or if the kettle boils dry.
6. **Serving:** Carefully lift the kettle from the base to pour. The cordless design allows for easy serving.
7. **Using the Tea Infuser:** For loose leaf tea, fill the removable tea infuser with your desired amount of tea leaves. Place the infuser inside the kettle before filling with water and selecting your temperature.

Teatime in No Time

Boil water quickly and easily for your favorite drinks



The image features the Chefman Electric Kettle on a countertop, filled with amber-colored tea, positioned next to two white teacups, suggesting its use for preparing hot beverages.

Steep a Whole Pot

With a stainless-steel tea infuser



A person is shown pouring hot tea from the Chefman Electric Kettle, which has a tea infuser inside, into a white teacup. This demonstrates the kettle's pouring functionality and the use of the infuser.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and appearance of your kettle.

- **Before Cleaning:** Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior (Glass Carafe & Infuser):** The glass carafe and tea infuser should be hand washed with warm, soapy water. Rinse thoroughly. The glass is stain-resistant.
- **Descaling:** Over time, mineral deposits (limescale) may build up inside the kettle, especially in hard water areas. To descale, fill the kettle with a mixture of 1 part white vinegar to 2 parts water. Bring to a boil and let it stand for 30 minutes. Empty the kettle and rinse thoroughly several times. For stubborn deposits, repeat the process or use a commercial descaling solution.

TROUBLESHOOTING GUIDE

If you encounter issues with your Chefman Electric Kettle, please refer to the comprehensive [Troubleshooting Guide \(PDF\)](#) for detailed solutions. Below are some common issues and general advice:

Problem	Possible Cause / Solution
Kettle does not turn on.	Ensure the kettle is properly seated on the power base and the power cord is securely plugged into a working outlet. Check if the circuit breaker has tripped.
Water is not heating.	Verify that a temperature setting has been selected. If the kettle has recently boiled, the thermal cut-off may need a few minutes to reset.
Kettle shuts off too quickly.	This may indicate limescale buildup. Perform a descaling procedure as described in the Maintenance section. Ensure the kettle is filled above the MIN line.
Unusual noise during operation.	Minor bubbling or humming is normal during heating. Excessive noise might be due to mineral deposits; consider descaling.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Chefman
Model Name	Electric Kettle w/ Temperature Control, Removable Tea Infuser
Item Model Number	RJ11-17-CTI-RL
Capacity	1.8 Liters
Color	1.8L - Temperature Control
Special Features	Automatic Shut-Off, Boil Dry Protection, Indicator Light, Rapid Boil, Temperature Control
Material	Glass, Stainless Steel (Stain-resistant, thermal shock resistance, clarity)
Product Dimensions	10"L x 5.5"W x 4"H
Item Weight	3.3 Pounds
Power	1100W/120V
UPC	816458022576



This image provides a clear diagram of the Chefman Electric Kettle with its key dimensions labeled: 9.1 inches in height, 8.7 inches in length, and 6.7 inches in width, offering a visual reference for its size.

WARRANTY AND CUSTOMER SUPPORT

Your Chefman Electric Kettle is backed by a **1-year assurance** provided by Chefman, ensuring quality and reliability.

For product support, warranty claims, or any questions not covered in this manual, please contact Chefman Customer Support. You can find contact information on the official Chefman website or through your purchase platform.

For more detailed information, please consult the official [User Guide \(PDF\)](#).

