

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fujifilm](#) /

› [Fujifilm XF10 Champagne Gold User Manual](#)

Fujifilm XF10

Fujifilm XF10 Champagne Gold Digital Camera User Manual

Comprehensive instructions for setup, operation, maintenance, and troubleshooting.

1. INTRODUCTION

This manual provides essential information for using your Fujifilm XF10 Champagne Gold digital camera. Please read these instructions carefully to ensure proper operation and to maximize your camera's performance. The Fujifilm XF10 is a premium compact digital camera designed for high-quality imaging in a portable form factor.

2. WHAT'S IN THE BOX

Verify that all the following items are included with your Fujifilm XF10 camera:

- Fujifilm XF10 Digital Camera (Champagne Gold)
- NP-95 Li-ion Battery
- AC Power Adapter
- Plug Adapter
- USB Cable
- Hand Strap
- Lens Cap
- Owner's Manual
- U.S.A. Warranty Information



Figure 2.1: Front view of the Fujifilm XF10 Champagne Gold camera.

Please ensure all components are present before proceeding with setup.

3. CAMERA OVERVIEW

3.1 Front View



Figure 3.1: The front of the camera features the FUJINON 18.5mmF2.8 fixed lens, flash, and autofocus assist lamp.

3.2 Rear View



Figure 3.2: The rear of the camera displays the 3.0-inch LCD touchscreen, control dial, and various function buttons for menu navigation and playback.

3.3 Top View



Figure 3.3: The top panel includes the mode dial, shutter button, power switch, and exposure compensation dial.

3.4 Side View



Figure 3.4: The side of the camera houses the HDMI, USB, and microphone ports, along with the memory card slot.

4. GETTING STARTED

4.1 Charging the Battery

1. Insert the NP-95 Li-ion battery into the camera.
2. Connect the USB cable to the camera's USB port and the AC power adapter.
3. Plug the AC power adapter into a wall outlet. The charging indicator will illuminate.
4. Charging is complete when the indicator light turns off.

4.2 Inserting a Memory Card

The Fujifilm XF10 supports SDXC memory cards. Open the battery/card compartment cover, insert the memory card with the contacts facing the correct direction until it clicks into place, then close the cover securely.

4.3 Turning the Camera On/Off

To turn the camera on, slide the power switch located on the top of the camera. To turn it off, slide the switch again.

5. BASIC OPERATION

5.1 Taking Photos

1. Set the mode dial to a desired shooting mode (e.g., P for Program AE, A for Aperture Priority AE).
2. Frame your shot using the LCD monitor.
3. Press the shutter button halfway to focus.
4. Press the shutter button fully to take the picture.

5.2 Recording Videos

1. Set the mode dial to the movie mode icon.
2. Press the dedicated movie recording button to start recording.
3. Press the movie recording button again to stop recording.

5.3 Using the Touchscreen

The 3.0-inch LCD is a touchscreen. You can tap to select focus points, navigate menus, and review images by swiping.

5.4 Adjusting Flash Settings

Press the flash button (usually indicated by a lightning bolt icon) to cycle through flash modes such as Auto, Forced Flash, Slow Sync, and Flash Off.

6. ADVANCED FEATURES

- **24.2MP APS-C CMOS Sensor:** Delivers high-resolution images with wide dynamic range.
- **4K Video Recording:** Capture cinematic footage at 3840 x 2160 resolution at 15 frames per second (15P). Continuous recording is available for up to approximately 30 minutes.
- **Full HD High-Speed Video:** Record smooth slow-motion footage in Full HD.
- **Bluetooth 4.1 Low Energy:** For easy wireless transfer of images to compatible smart devices.
- **Film Simulation Modes:** Utilize Fujifilm's proprietary color reproduction technology with various film simulation modes to achieve distinct photographic styles.

7. MAINTENANCE

7.1 Cleaning the Camera

- Use a blower brush to remove dust from the lens and body.
- Wipe the camera body with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water or lens cleaner.
- Clean the LCD screen with a soft, lint-free cloth designed for optics.

7.2 Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- Charge the battery fully before extended periods of non-use.

8. TROUBLESHOOTING

8.1 Camera Not Turning On

- Ensure the battery is fully charged and correctly inserted.
- Check if the battery contacts are clean.

8.2 Autofocus Issues

- In low light conditions, autofocus may be slower. Ensure adequate lighting or use manual focus.
- Ensure the lens is clean and free from obstructions.

8.3 Short Battery Life

- Reduce screen brightness.
- Limit continuous video recording, especially 4K.
- Turn off Wi-Fi/Bluetooth when not in use.

9. SPECIFICATIONS

Sensor Type	24.2MP APS-C CMOS sensor
Lens	FUJINON 18.5mmF2.8 fixed lens
Display	3.0-inch (Approx. 1,040k-dot) Color LCD Touchscreen
ISO Sensitivity	Standard: ISO200 - ISO12800; Extended: ISO100 - ISO51200
Video Resolution	4K (3840 x 2160) at 15P, Full HD 1080p
Connectivity	Bluetooth 4.1 LE, HDMI (Type D Micro), USB
Storage Media	SDXC memory card
Weight	Approx. 280g (0.62 lbs)

10. WARRANTY AND SUPPORT

10.1 Product Warranty

The Fujifilm XF10 Champagne Gold camera comes with a 1-year manufacturer's warranty. Please refer to the included U.S.A. Warranty document for full terms and conditions.

10.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official Fujifilm support website or contact their customer service department. Keep your proof of purchase for warranty claims.