

## Pyle PTVDLED40.5

# Pyle 40 Inch LED TV - 1080p HDTV with Built-in CD/DVD Player - Model PTVDLED40.5 Instruction Manual

Model: PTVDLED40.5

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Product Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pyle 40 Inch LED TV with Built-in CD/DVD Player, Model PTVDLED40.5. Please read this manual thoroughly before using the product and retain it for future reference.



Image: Front view of the Pyle 40 Inch LED TV, showing the screen displaying a landscape, a remote control, and a hand inserting a disc into the side-loading DVD player.

## 2. SAFETY INFORMATION

**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the

apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

### 3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Pyle 40 Inch HD LED TV (Model PTVDLED40.5)
- Full Function Remote Control
- (2) AAA Batteries for Remote Control
- (2) Base Stands
- Mounting Screws for Base Stands
- Power Cord



Image: Included accessories for the Pyle 40 Inch LED TV, showing the remote control, power cord, two base stands, and

## 4. PRODUCT OVERVIEW

### 4.1 Front View



Image: Front view of the Pyle 40 Inch LED TV, showcasing the screen and the Pyle logo.

- **Screen Display:** 40-inch D-LED Backlight display.
- **Pyle Logo:** Indicates brand.
- **IR Sensor:** For remote control signals.
- **Power Indicator:** LED light indicating power status.

### 4.2 Side Panel Controls



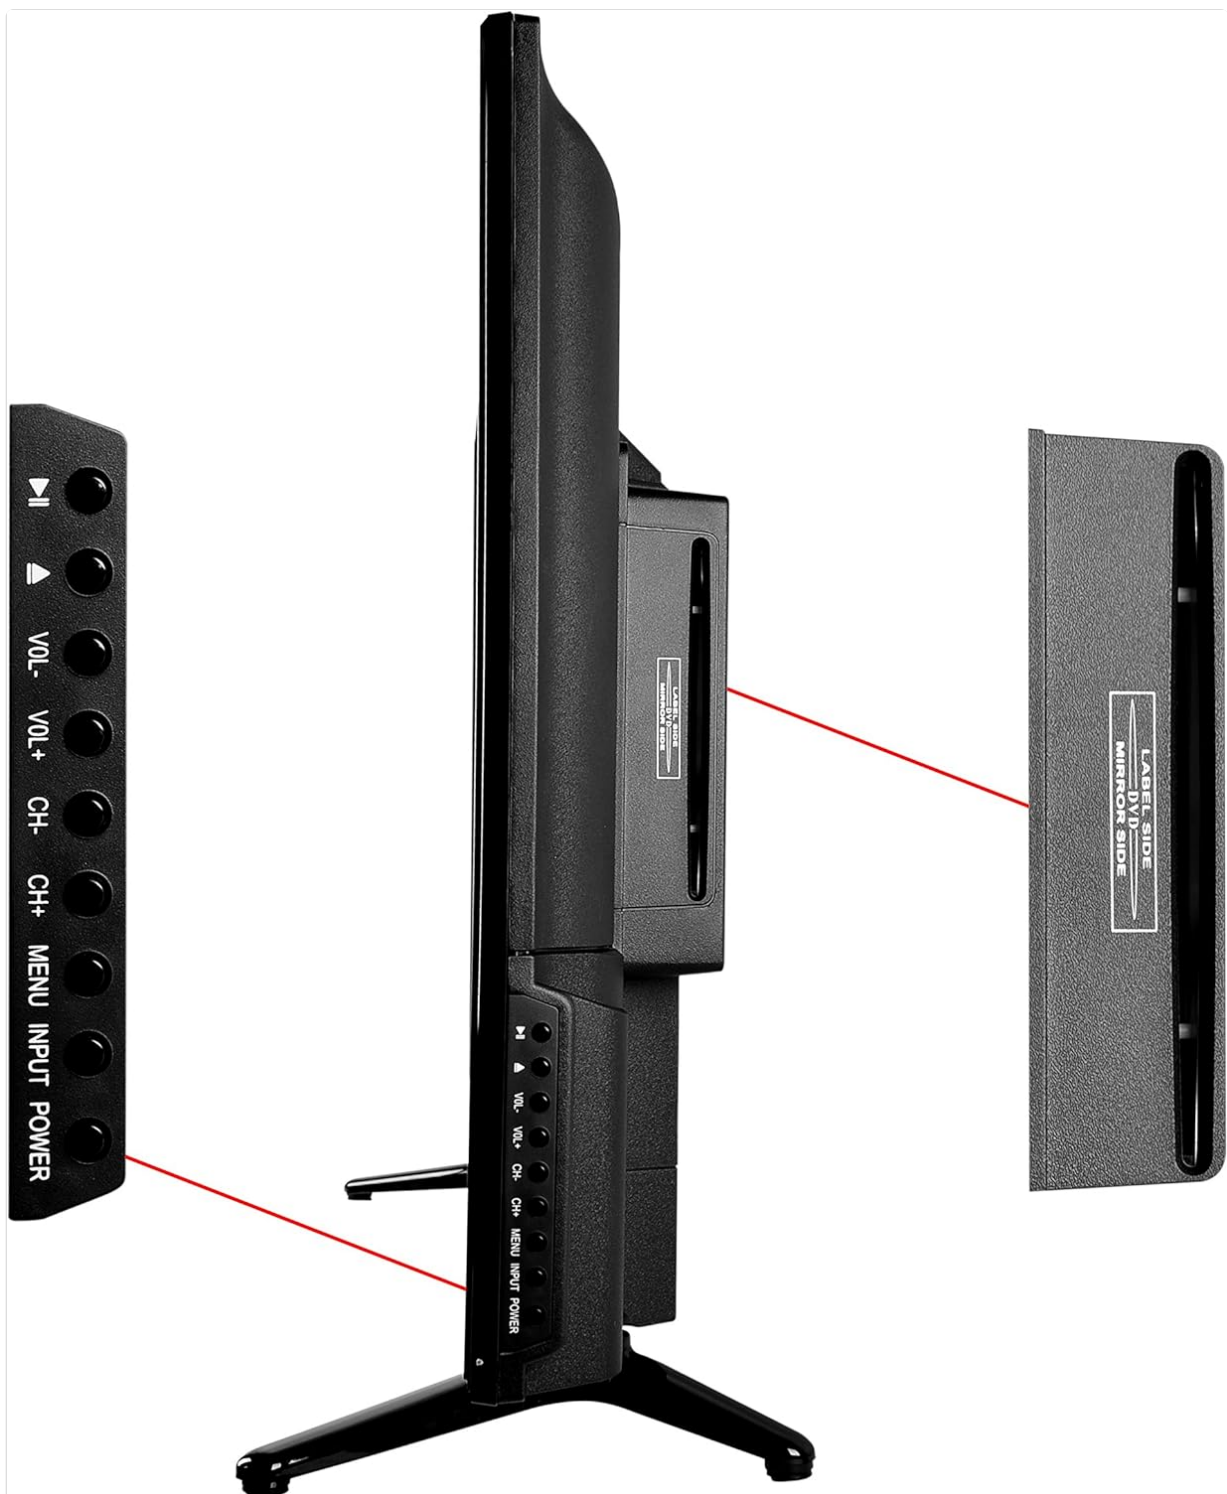


Image: Close-up of the side panel controls on the Pyle 40 Inch LED TV, showing buttons for volume, channel, menu, input, and power.

- **VOL +/-:** Adjusts volume level.
- **CH +/-:** Changes channels.
- **MENU:** Accesses the on-screen menu.
- **INPUT:** Selects input source (HDMI, AV, etc.).
- **POWER:** Turns the TV on or off.

#### 4.3 Rear Panel Connections

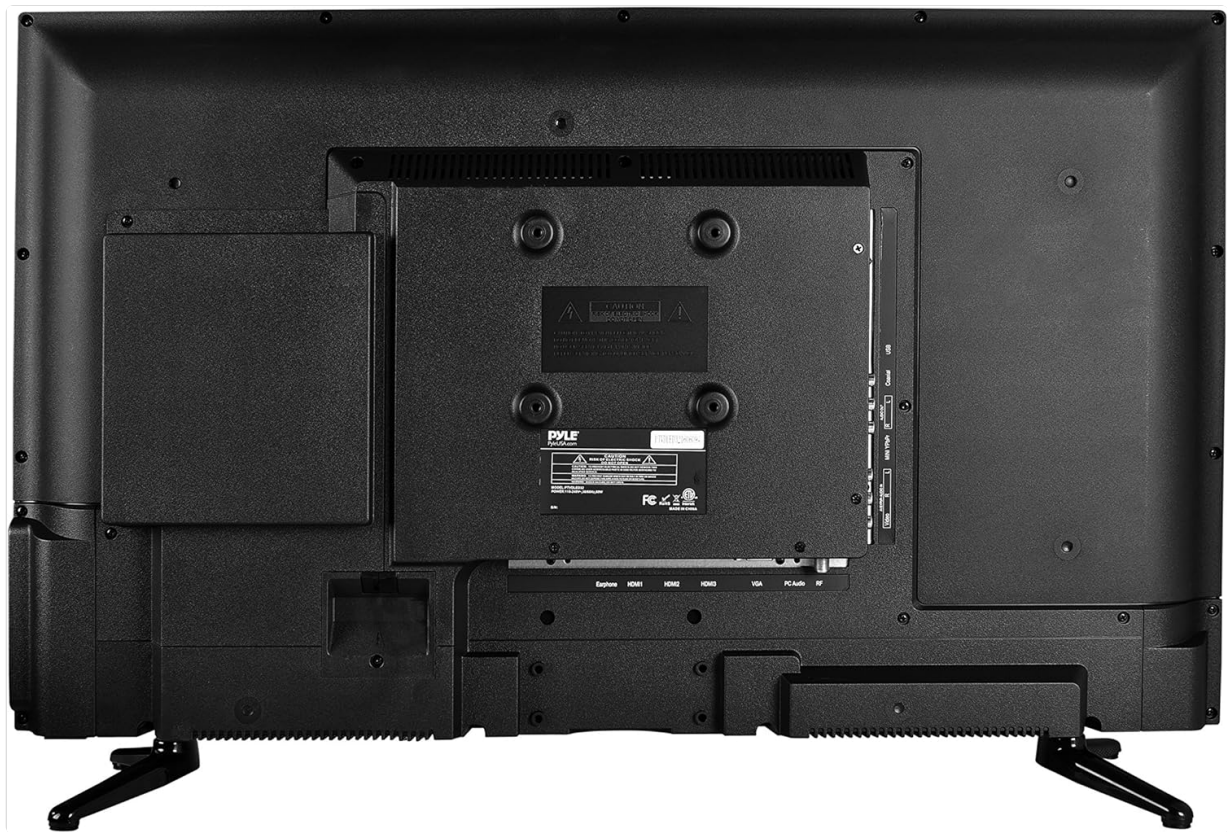


Image: Rear view of the Pyle 40 Inch LED TV, highlighting the various input and output ports.



Image: Detailed close-up of the input/output ports on the Pyle 40 Inch LED TV, including HDMI, VGA, PC Audio, RF, Earphone, USB, Coaxial, Audio Out, Mini YPbPr, and Video/Audio In (RCA).

- **HDMI (x3):** High-Definition Multimedia Interface inputs for digital audio/video.
- **YPbPr (Component Video):** Analog video input (green, blue, red) for high-quality analog video.
- **RCA (L/R Audio, Video):** Analog audio (white, red) and composite video (yellow) inputs.
- **VGA/PC:** Video Graphics Array input for connecting a computer.
- **PC Audio:** Audio input for VGA connection.
- **RF (Antenna):** Input for connecting an antenna or cable TV.
- **Optical (Digital) Audio Out:** Digital audio output for connecting to a soundbar or receiver.
- **Headphones:** 3.5mm audio output for headphones.
- **USB:** For service or media playback (check manual for specific functionality).
- **Coaxial:** Digital audio output.

#### 4.4 Built-in CD/DVD Player

The TV features a side-loading CD/DVD player. Insert discs gently into the slot located on the side of the television.



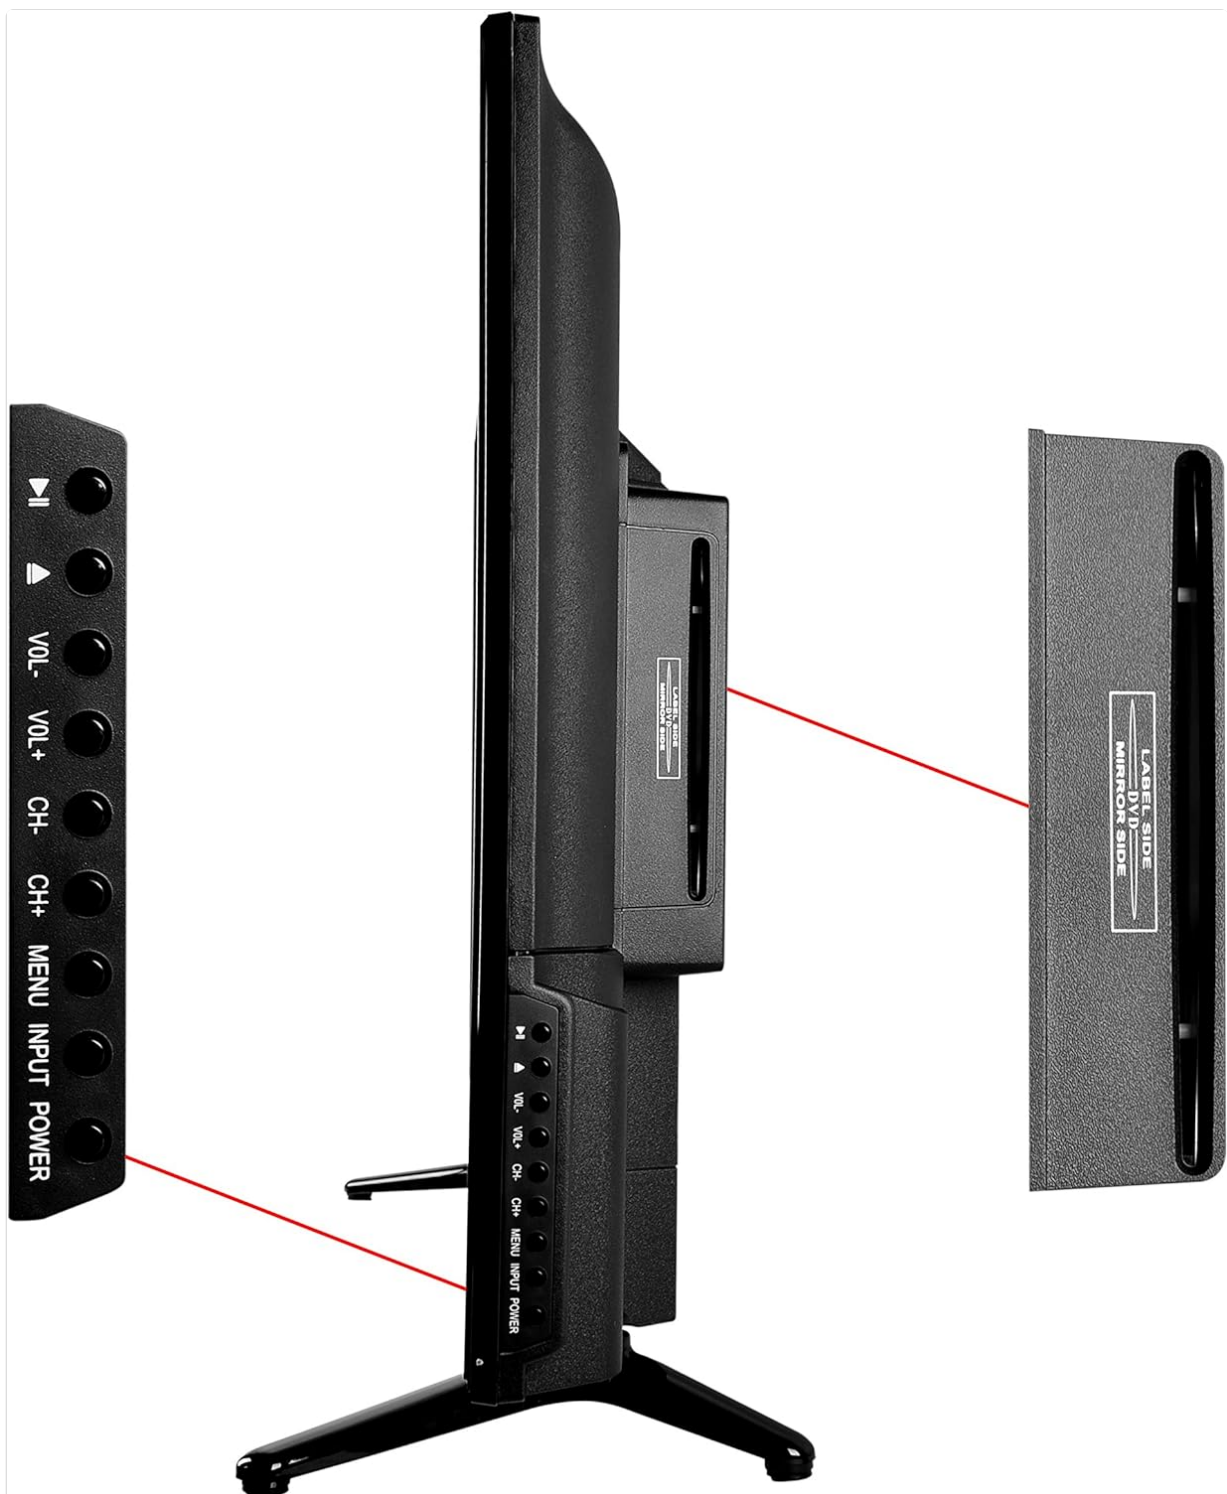


Image: Side view of the Pyle 40 Inch LED TV, clearly showing the slot for the built-in CD/DVD player.

## 5. SETUP

### 5.1 Attaching the Base Stands

1. Carefully place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each base stand with the corresponding slots on the bottom of the TV.
3. Secure each stand using the provided screws. Ensure they are tightened firmly.





Image: The Pyle 40 Inch LED TV shown with its two base stands securely attached, ready for placement on a flat surface.

## 5.2 Wall Mounting (Optional)

The TV is VESA mounting compatible (200mm x 200mm). Remove the base stands if you intend to wall mount the television. Use a VESA-compatible wall mount kit (sold separately) and follow the instructions provided with the wall mount.

**WARNING: Wall mounting should be performed by qualified personnel to prevent injury or damage.**

## 5.3 Connecting Power

1. Connect the power cord to the AC input on the back of the TV.
2. Plug the other end of the power cord into a standard electrical outlet (100-240V, 50/60Hz).

## 5.4 Connecting External Devices

Refer to the "Rear Panel Connections" section for port locations.

- **HDMI Devices:** Connect HDMI cables from your devices (e.g., Blu-ray player, game console) to the

HDMI ports on the TV.

- **Component Video (YPbPr) Devices:** Connect component video cables (green, blue, red) and RCA audio cables (white, red) from your device to the corresponding inputs.
- **Composite Video (RCA) Devices:** Connect composite video cable (yellow) and RCA audio cables (white, red) from your device to the corresponding inputs.
- **Antenna/Cable:** Connect an RF coaxial cable from your antenna or cable wall outlet to the RF input.
- **PC Connection:** Connect a VGA cable from your computer to the VGA port and an audio cable from your computer's audio output to the PC Audio input.

## 6. OPERATION

### 6.1 Power On/Off

Press the **POWER** button on the remote control or the side panel to turn the TV on or off.

### 6.2 Remote Control

Insert two 'AAA' batteries into the remote control, observing polarity. Point the remote control towards the TV's IR sensor.



Image: The full-function remote control for the Pyle 40 Inch LED TV, showing various buttons for power, input, volume, channel, menu, and media playback.

- **POWER:** Turns the TV on/off.
- **INPUT:** Selects the input source.
- **VOL +/-:** Adjusts volume.

- **CH +/-:** Changes channels.
- **MENU:** Opens the main menu.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menu options.
- **EXIT/BACK:** Exits current menu or goes back.
- **MUTE:** Mutes/unmutes sound.
- **DVD Controls:** Play, Pause, Stop, Fast Forward, Rewind, Next/Previous Track.
- **V-CHIP:** Accesses V-Chip settings for parental control.
- **CC (Closed Caption):** Toggles closed captions on/off.
- **SLEEP:** Sets the sleep timer.

### 6.3 Selecting Input Source

Press the **INPUT** button on the remote control to cycle through available input sources (TV, HDMI1, HDMI2, HDMI3, YPbPr, AV, VGA, DVD).

### 6.4 Using the Built-in CD/DVD Player

1. Ensure the TV is powered on.
2. Gently insert a compatible disc (DVD, DVD+/-R, DVD+/-RW, CD, CD-R, CD-RW, JPEG) into the side-loading slot with the label facing up.
3. The TV should automatically switch to DVD mode. If not, press the **INPUT** button and select "DVD".
4. Use the DVD control buttons on the remote control (Play, Pause, Stop, etc.) to manage playback.

### 6.5 Menu Functions

Press the **MENU** button to access the on-screen display (OSD) menu. Use the navigation buttons to select and adjust settings.

- **Picture Settings:** Adjust brightness, contrast, color, sharpness, and picture modes (Standard, Dynamic, Movie, User).
- **Sound Settings:** Adjust bass, treble, balance, and sound modes (Standard, Music, Movie, User).
- **Channel Settings:** Auto scan for channels, manual tuning, channel list.
- **Time Settings:** Set current time, sleep timer, auto power off.
- **Option Settings:** Language, V-Chip (parental control), Closed Caption, display modes (16:9, 4:3, Zoom, Cinema).

## 7. MAINTENANCE

---

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with a small amount of screen cleaner specifically designed for electronics. Do not spray cleaner directly onto the screen.
- **Cleaning the Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, discontinue use and contact qualified service personnel.



## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; no power from outlet.	Ensure power cord is securely plugged in. Check if the outlet is working by plugging in another device.
No picture, but sound is present	Incorrect input source selected; loose video cable.	Press the <b>INPUT</b> button to select the correct source. Check video cable connections.
No sound, but picture is present	Volume is muted or too low; incorrect audio cable connection.	Press the <b>MUTE</b> button or increase volume. Check audio cable connections.
Remote control not working	Batteries are dead or incorrectly inserted; obstruction between remote and TV.	Replace batteries. Ensure correct polarity. Remove any obstructions. Point remote directly at the TV's IR sensor.
DVD player not reading disc	Disc is dirty, scratched, or incompatible format; disc inserted incorrectly.	Clean the disc. Try a different, known-good disc. Ensure disc is inserted with the label facing up.
Poor picture quality from antenna	Weak signal; antenna not positioned correctly.	Adjust antenna position. Perform an auto channel scan. Consider a stronger antenna or signal amplifier.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	PTVDLED40.5
Screen Size	40.0 inches (Diagonal)
Display Type	D-LED Backlight
Display Resolution	1920 x 1080 (Full HD 1080p)
Signal Support	1080p, 1080i, 720p, 480p, 480i
Display Modes	16:9, 4:3, Zoom, Cinema
Viewing Angle	178° Vertical, 178° Horizontal
Speaker Power	(2) x 8 Watt, 8Ω
Refresh Rate	60Hz
TV Tuner	ATSC/NTSC
Response Time	6ms
Max. Color	16.7M
Contrast	5000:1 (50,000:1 Dynamic)

Feature	Detail
Brightness	250 cd/m2
CD/DVD Disc Support	DVD, DVD+/-R, DVD+/-RW, CD, CD-R, CD-RW, JPEG
VESA Mounting	200mm x 200mm
Power	100-240V, 50/60Hz
Dimensions (L x W x H)	36.5" x 3.5" x 21.9" (Panel Only)
Item Weight	16.32 pounds
Included Components	40" HD LED TV, Full Function Remote Control
Connectivity Technology	HDMI
Energy Efficiency	Estimated Yearly Energy Cost: \$11.52




Image: Energy Guide label for the Pyle PTVDLED40 TV, showing an estimated yearly energy cost of \$11.52.


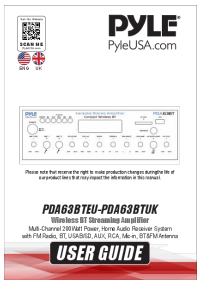 



## 10. WARRANTY & SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Pyle website. Keep your purchase receipt as proof of purchase for any warranty claims. For customer support inquiries, you may also refer to the [Amazon Customer Support page](#).

© 2023 Pyle. All rights reserved. Information in this manual is subject to change without notice.

### Related Documents - PTVDLED40.5

	<p><a href="#">Pyle PD3000BT Wireless BT Home Theater Preamplifier - 3000 Watt Pro Audio Stereo Receiver</a></p> <p>User manual for the Pyle PD3000BT, a 3000 Watt 4-Channel Pro Audio Stereo Receiver and Home Theater Preamplifier with Wireless BT streaming, CD/DVD player, USB reader, AM/FM radio, and microphone inputs. Includes setup, operation, playback, and troubleshooting guides.</p>
---	--

	<p><a href="#">Pyle PLRD143F 13.3" TFT LCD Monitor/DVD Player Instruction Manual</a></p> <p>This instruction manual provides comprehensive details for the Pyle PLRD143F 13.3" TFT LCD Monitor/DVD Player, covering its specifications, features, operation, installation, troubleshooting, and setup options.</p>
	<p><a href="#">Pyle PDA63BTEU-PDA63BTUK 200W Wireless Bluetooth Amplifier User Guide</a></p> <p>Get the most out of your Pyle PDA63BTEU-PDA63BTUK 200W wireless Bluetooth streaming amplifier. This user guide covers setup, features, controls, technical specifications, and safety information for this multi-channel home audio receiver.</p>
	<p><a href="#">Pyle PKRK270BT Karaoke Vibe Portable Video PA Speaker System User Guide</a></p> <p>Comprehensive user guide for the Pyle PKRK270BT Karaoke Vibe Portable Video PA Speaker System, detailing features, setup, operation, troubleshooting, and technical specifications. Includes information on disc playback, multimedia, Bluetooth connectivity, and more.</p>
	<p><a href="#">Pyle PDV156BK 15.6" Portable CD/DVD Player User Guide</a></p> <p>User guide for the Pyle PDV156BK, a 15.6" portable CD/DVD player with a Hi-Res HD Widescreen Display and Dual Full Range Stereo Speakers. Includes safety instructions, features, setup, playback, specifications, and troubleshooting.</p>
	<p><a href="#">Pyle PD1000BA - PD3000BA Home Theater Wireless BT Streaming Preamp</a></p> <p>This user manual provides comprehensive instructions for the Pyle PD1000BA and PD3000BA Home Theater Wireless BT Streaming Preamp. It covers safety precautions, controls, connections, basic and advanced playback, disc compatibility, system setup, and troubleshooting.</p>