

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Samsung](#) /

› Samsung Series 7 UE43NU7400UXZT User Manual

Samsung UE43NU7400UXZT

Samsung Series 7 UE43NU7400UXZT User Manual

Model: UE43NU7400UXZT

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Samsung Series 7 UE43NU7400UXZT 4K UHD Smart LED TV. Please read this manual thoroughly before using your television to ensure safe and optimal performance.

Key features of your television include:

- **Screen Size:** 43 inches (108 cm visible diagonal)
- **Display Technology:** LED Panel with 4K Resolution
- **Picture Enhancement:** HDR (High Dynamic Range) Technology
- **Tuners:** DVB-T2CS2 x 2
- **Connectivity:** Wireless (Wi-Fi) and Ethernet
- **Aspect Ratio:** 16:9
- **Energy Efficiency Class:** A

2. SETUP

2.1 Unboxing and Placement

Carefully remove the television and all components from the packaging. It is recommended to have assistance due to the size and weight of the unit (approximately 15.1 kg). Place the TV on a stable, flat surface or mount it securely on a wall.



Figure 2.1: Front view of the Samsung Series 7 UE43NU7400UXZT television.

2.2 Connecting the Stand or Wall Mounting

Attach the included stand according to the separate assembly guide provided in the box. If wall mounting, ensure you use a compatible VESA mount and appropriate M8x45 bolts, as these are typically not included with the TV and may require separate purchase. The TV includes spacers for wall mounting.

2.3 Connecting External Devices

Connect your external devices such as set-top boxes, game consoles, or Blu-ray players to the available HDMI ports. This model features 3 HDMI inputs (one with ARC support) and 2 USB ports. It also includes 2 component RCA inputs (with connection cables) and an optical audio output.



Figure 2.2: Rear view of the television displaying connection ports.

2.4 Initial Setup Wizard

After connecting the power cable and turning on the TV, the initial setup wizard will guide you through language selection, network connection (Wi-Fi or Ethernet), and channel scanning for DVB-T2CS2 tuners.

3. OPERATING THE TELEVISION

3.1 Remote Control

The included remote control is compact and features voice control for convenient navigation. While minimal buttons are present, all essential functions can be accessed. An accompanying mobile application is also available for more comprehensive control.

3.2 Smart TV Features (Tizen OS)

Your television runs on Samsung's Tizen operating system, providing a user-friendly interface and access to various applications. Popular streaming services like Netflix and Prime Video are supported, offering excellent 4K HDR content. The system is designed for quick access to channel management and device control.

3.3 Picture and Sound Settings

Access the TV's menu to adjust picture and sound settings. For optimal viewing, it may be necessary to calibrate colors and disable certain digital artifacts by setting controls to "OFF" to achieve a more natural image. The menu offers extensive options for customization.

3.4 Connectivity Notes

Please note that this television does not include a headphone jack. Additionally, direct recording to an external hard disk or USB pen drive is not supported.

4. MAINTENANCE

4.1 Cleaning the Television

To clean the screen, gently wipe it with a soft, dry, lint-free cloth. For the frame and stand, use a slightly damp cloth. Avoid using abrasive cleaners, waxes, or solvents as they can damage the finish.

4.2 Software Updates

Periodically check for software updates through the TV's settings menu to ensure optimal performance and access to the latest features. Updates can improve stability and introduce new functionalities.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your television.

- **No Picture/No Sound:** Ensure all cables are securely connected and the correct input source is selected. Check power connections.
- **Network Connection Issues:** Verify your Wi-Fi password or Ethernet cable connection. Restart your router if necessary.
- **Image Irregularities:** If you observe white spots in the corners, especially on dark images, this may indicate backlight uniformity variations. If persistent or severe, contact customer support.
- **File Playback Issues:** Note that the TV may not support all video formats, such as AVI. Ensure your media files are in compatible formats.
- **Remote Control Unresponsive:** Check battery levels. Ensure no obstructions are between the remote and the TV's sensor.

For issues not covered here, please refer to the full digital manual available within the TV's internal memory or contact Samsung customer support.

6. SPECIFICATIONS

Feature	Detail
Manufacturer	Samsung

Feature	Detail
Model Number	UE43NU7400UXZT
Product Dimensions	97.02 x 5.88 x 56.32 cm
Weight	15.1 kg
Screen Size	43 inches (108 Centimeters)
Display Technology	LED
Resolution	4K
Refresh Rate	480 <i>(Note: This often refers to a motion rate index, not native panel refresh rate.)</i>
Special Feature	HDR Technology
Included Components	TV - Remote Control
Connectivity Technology	Wireless (Wi-Fi), Ethernet
Aspect Ratio	16:9
Energy Efficiency Class	A
First Available Date	July 16, 2018

7. WARRANTY AND SUPPORT

For information regarding warranty and return policies, please refer to the official Samsung warranty documentation included with your product or visit the Samsung support website. Amazon's return policy allows for returns within 30 days of receipt if you change your mind. For defective or damaged products, consult Amazon's help page on returns. Specific information for Marketplace purchases is also available on Amazon's help pages.

For technical assistance or further inquiries, please contact Samsung customer support directly.

Relevant links for Amazon's return policies (for reference, actual links might vary):

- [Amazon.it Returns Policy](#)
- [Amazon.it Defective/Damaged Product Returns](#)
- [Amazon.it Marketplace Returns](#)