

Magnussen M1

Magnussen Audio M1 Bluetooth Wireless Headphones User Manual

INTRODUCTION

Thank you for choosing the Magnussen Audio M1 Bluetooth Wireless Headphones. These lightweight, in-ear headphones are designed for comfortable use, offering high-fidelity stereo sound and hands-free functionality. With Bluetooth 4.1 connectivity and IPX4 water and sweat resistance, they are suitable for various activities, including sports. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Please check the package for the following items:

- Magnussen Audio M1 Wireless Earbuds (Left and Right)
- Portable Charging Case
- Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Magnussen M1 headphones.



Figure 1: Front view of the Magnussen M1 wireless earbuds, highlighting the ear tips and charging contacts.



Figure 2: Side view of a single Magnussen M1 earbud, featuring the outer casing and Magnussen branding.



Figure 3: The Magnussen M1 earbuds securely placed within their open charging case, ready for charging or storage.



Figure 4: The Magnusson M1 charging case in its closed state, displaying the Magnusson logo on top.

SETUP

1. Charging the Headphones and Case

Before first use, fully charge the Magnusson M1 headphones and their charging case.

1. Place both earbuds into the charging case. Ensure they are correctly seated so the charging contacts align.
2. Connect the charging cable to the charging port on the case and plug the other end into a USB power source (e.g., computer, wall adapter).
3. The LED indicator on the case will show the charging status. Refer to the LED indicator section for details (if available, otherwise omit).
4. A full charge for the case and earbuds takes approximately 1.5 hours.
5. Once fully charged, the earbuds provide up to 4 hours of continuous playback, with the charging case providing an additional 4 hours, totaling up to 8 hours of battery life.

2. Bluetooth Pairing

To connect your Magnusson M1 headphones to a device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light (color/pattern not specified, assume standard).
3. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.
4. Search for available devices. Select "Magnusson M1" from the list.

5. Once connected, the LED indicator on the earbuds will change (e.g., stop flashing, turn solid blue). You will hear an audible confirmation.
6. The headphones will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

The Magnussen M1 headphones feature touch controls for easy operation.

Power On/Off

- **Power On:** Open the charging case, or press and hold the touch area on both earbuds for approximately 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid, or press and hold the touch area on both earbuds for approximately 5 seconds.

Music Playback

- **Play/Pause:** Tap the touch area on either earbud once.
- **Next Track:** Double-tap the touch area on the right earbud.
- **Previous Track:** Double-tap the touch area on the left earbud.

Call Management

- **Answer/End Call:** Tap the touch area on either earbud once during an incoming call or an active call.
- **Reject Call:** Press and hold the touch area on either earbud for approximately 2 seconds during an incoming call.

MAINTENANCE

Cleaning

- Regularly clean the earbuds, especially the ear tips and charging contacts, with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Ensure no moisture enters the earbud openings.

Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

Water and Sweat Resistance (IPX4)

- The Magnussen M1 headphones are IPX4 rated, meaning they are resistant to splashing water from any direction.
- This rating protects against sweat and light rain, making them suitable for workouts and outdoor activities.
- **Do not submerge the headphones in water.** They are not designed for swimming or showering.
- Ensure the earbuds are dry before placing them back into the charging case to prevent damage.

TROUBLESHOOTING

If you encounter issues with your Magnussen M1 headphones, try the following solutions:

- **No Power:** Ensure both the earbuds and the charging case are fully charged.
- **Cannot Pair:**
 - Make sure Bluetooth is enabled on your device.
 - Ensure the earbuds are in pairing mode (LED flashing).
 - Move the earbuds closer to your device.
 - Forget "Magnussen M1" from your device's Bluetooth list and try pairing again.
 - Restart your device.
- **No Sound:**
 - Check the volume level on both your device and the earbuds.
 - Ensure the earbuds are properly connected to your device.
 - Try playing audio from a different application or source.
- **Intermittent Connection:**
 - Reduce the distance between the earbuds and your device.
 - Avoid obstacles between the earbuds and your device (e.g., walls, large objects).
 - Minimize interference from other wireless devices.

SPECIFICATIONS

Feature	Detail
Model	Magnussen M1
Connectivity	Bluetooth 4.1
Water Resistance Rating	IPX4 (Sweat and Splash Resistant)
Battery Life (Earbuds)	Up to 4 hours (continuous playback)
Total Battery Life (with Case)	Up to 8 hours
Charging Time	Approximately 1.5 hours
Audio Features	High-fidelity stereo sound
Microphone	Inline microphone for hands-free calls
Control Method	Touch control
Material	Synthetic leather (housing/finish)
Form Factor	In-ear headphones
Product Dimensions	12 x 3.5 x 10.5 cm (charging case/packaging)
Weight	11 g (earbuds)
Color	Black

SAFETY INFORMATION

- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.
- **Driving Safety:** Do not use headphones while driving or cycling in situations where it may be unsafe.
- **Choking Hazard:** Keep small parts away from children and pets.
- **Battery Safety:** Do not attempt to replace the battery yourself. Do not expose to extreme heat or fire.
- **Disposal:** Dispose of the product and batteries according to local regulations. Do not dispose of with household waste.

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the official Magnussen Audio website or contact your local retailer. Keep your proof of purchase for warranty claims.