

Eureka NEC122

Eureka NEC122 PowerPlush Cordless Stick Vacuum Cleaner User Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

2. PRODUCT COMPONENTS



Figure 2.1: All components included with the Eureka NEC122 PowerPlush Cordless Stick Vacuum Cleaner.

The Eureka NEC122 PowerPlush Cordless Stick Vacuum Cleaner comes with the following components:

- Main Handheld Unit (with dust cup and motor)
- Extension Wand
- Motorized PowerPlush Floor Nozzle
- Detachable 21.6V Lithium-Ion Battery
- Charging Adapter
- Crevice Tool
- Dusting Brush
- Wall Mount with accessory storage

3. SETUP

3.1 Assembly

Assemble the vacuum cleaner by connecting the extension wand to the main handheld unit, then attach the motorized PowerPlush floor nozzle to the other end of the extension wand. Ensure all connections click securely into place.



Figure 3.1: The Eureka NEC122 PowerPlush Cordless Stick Vacuum Cleaner fully assembled.

3.2 Charging the Battery

Before first use, fully charge the 21.6V Lithium-Ion battery. The battery is detachable for convenient charging and storage.

Detachable Battery

For easy storage and replacement, the battery is designed to be removable.



Figure 3.2: The detachable 21.6V battery can be easily removed for charging or replacement.

Connect the charging adapter to the battery and plug it into a power outlet. The battery indicator lights will show the charging status. A full charge typically takes several hours. Do not operate the vacuum while it is charging.


4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To turn the vacuum on, press the power button located on the handle. Press it again to turn the vacuum off. The vacuum features a trigger that stays on until pressed again, eliminating the need to hold it down continuously.

4.2 Using the Vacuum

The Eureka NEC122 PowerPlush is designed for efficient cleaning on hard floors. The soft plush brush roll effectively picks up both fine dust and larger particles.

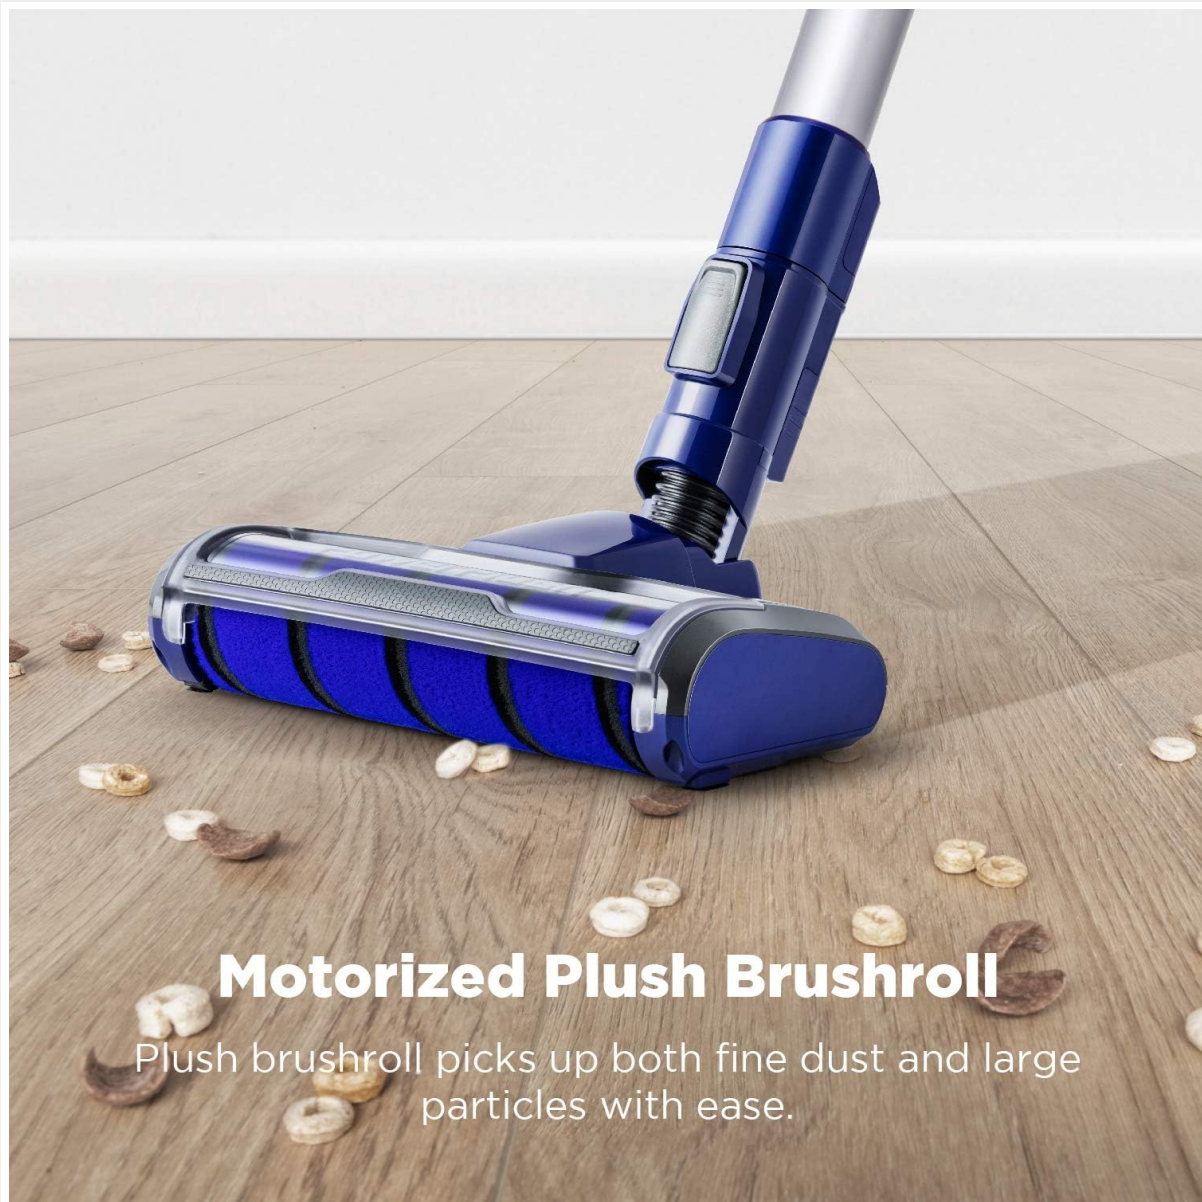


Motorized Plush Brushroll

Plush brushroll picks up both fine dust and large particles with ease.

Figure 4.1: The motorized PowerPlush brushroll is specifically designed for optimal performance on hard floors.

Its lightweight design (approximately 5.3 lbs) and swivel steering make it easy to maneuver around furniture and clean hard-to-reach areas, including under furniture and high surfaces.

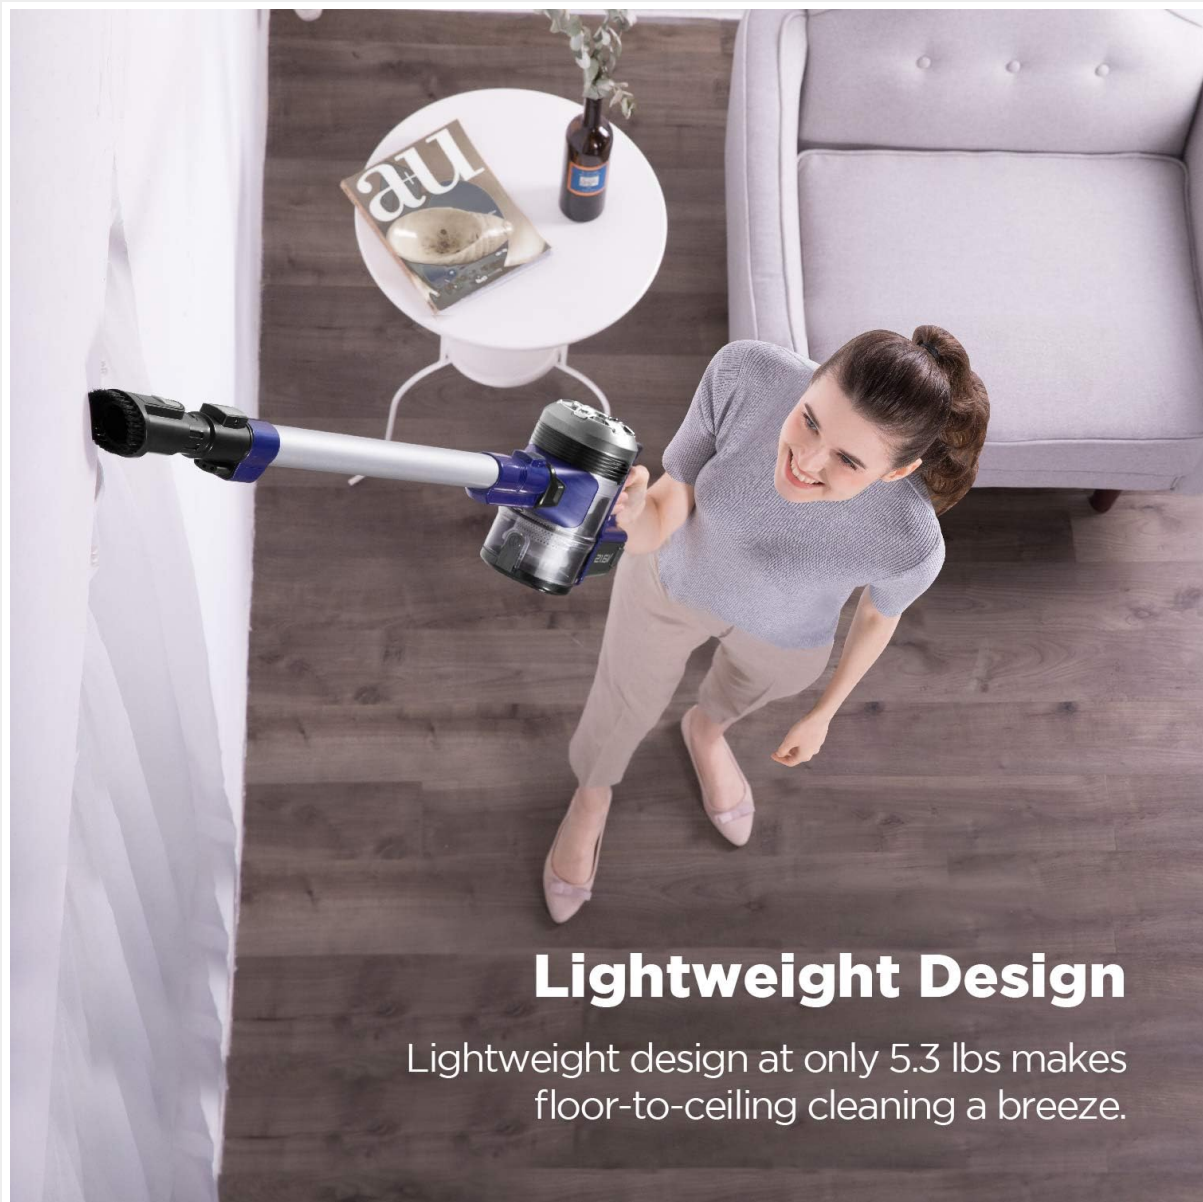

Lightweight Design

Lightweight design at only 5.3 lbs makes floor-to-ceiling cleaning a breeze.

Figure 4.2: The lightweight design allows for easy floor-to-ceiling cleaning.

4.3 Battery Indicator Lights

The battery indicator lights on the main unit provide real-time information about the battery's charge level, allowing you to plan your cleaning tasks efficiently.

Battery Indicator Lights

Assist to realize efficient cleanings by presenting accurate state of the battery.



Figure 4.3: Battery indicator lights display the current charge status.

4.4 Using Accessories

The included crevice tool and dusting brush can be attached directly to the handheld unit or the extension wand for versatile cleaning of upholstery, tight spaces, and delicate surfaces.

4.5 Storage

The vacuum comes with a wall mount that includes storage for the two cleaning tools. This allows for convenient and organized storage of your vacuum and its accessories.

Easy Storage

The wall mount, with two on-board accessories, can easily be secured to any wall.



Figure 4.4: The wall mount provides easy storage for the vacuum and its accessories.

5. MAINTENANCE

5.1 Emptying the Dust Cup

Empty the dust cup regularly to maintain optimal suction. Simply press the release button to expel dirt directly into a trash bin, or twist off the dust cup and empty it by hand.

Easy-To-Empty Dust Cup

Simply press release button to expel dirt OR twist off and empty by hand.



Figure 5.1: The dust cup can be emptied with a press of a button or by twisting it off.

5.2 Cleaning the Filter

The vacuum features a washable anti-allergen filter. For best performance, clean the filter frequently. Remove the filter from the dust cup, rinse it under running water until clean, and allow it to air dry completely for at least 24 hours before reinserting. Do not use the vacuum with a wet filter.

Washable Anti-allergen Filter

Captures microscopic dust and expels clean air
meanwhile saves maintenance cost.



Figure 5.2: The washable anti-allergen filter helps capture microscopic dust.

5.3 Cleaning the Brush Roll

Periodically check the PowerPlush brush roll for tangled hair or debris. Remove any obstructions to ensure efficient cleaning and prevent damage to the motor.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged or not properly inserted.	Ensure battery is fully charged and securely inserted.
Reduced suction power	Dust cup is full; filter is clogged; brush roll is obstructed.	Empty dust cup; clean or replace filter; remove obstructions from brush roll.
Brush roll not spinning	Obstruction in brush roll; floor nozzle not properly attached.	Clear any debris from brush roll; ensure floor nozzle is securely connected.
Short battery life	Battery not fully charged; battery degradation over time.	Ensure battery is fully charged before use. Consider purchasing a replacement battery if performance significantly degrades.

7. SPECIFICATIONS

Feature	Detail
Brand	Eureka
Model Name	NEC122
Power	21.6V (110 watts)
Battery Type	Lithium-Ion
Battery Life	Approximately 25 minutes
Filter Type	Washable Cloth Filter
Weight	5.3 pounds
Dimensions (L x W x H)	8.5 x 9.5 x 43.5 inches
Recommended Use	Hard Floor
Special Features	2-Way easy empty, Bagless, Cordless, Lightweight, Self-Propelled, Washable Filter, Clear brushroll window, Hard floor expertise, Powerful suction, Swivel steering



8. WARRANTY AND SUPPORT


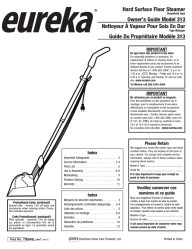
The Eureka NEC122 PowerPlush Cordless Stick Vacuum Cleaner comes with a **2-year limited warranty** on the vacuum unit and a **12-month limited warranty** on the battery.

For warranty claims, technical support, or to purchase replacement parts, please visit the official Eureka store or contact Eureka customer service.

Eureka Store: <https://www.amazon.com/stores/Eureka/page/2C146D16-2E09-4B35-81CF-B1382470E3EF>

Related Documents - NEC122

	<p>Eureka NEC180 Series Cordless Stick Vacuum Cleaner Owner's Guide</p> <p>Comprehensive owner's guide for the Eureka NEC180 Series cordless stick vacuum cleaner, covering assembly, operation, maintenance, troubleshooting, and warranty information.</p>
	<p>Eureka Quick Up 2-in-1 Cordless 96H User Manual</p> <p>Comprehensive user manual for the Eureka Quick Up 2-in-1 Cordless 96H vacuum cleaner. Includes setup, operation, maintenance, and troubleshooting guides.</p>

<p>User Manual of Product 1: eureka NEU180A PowerSpeed Bagless Upright Vacuum Cleaner, Lila, Blue</p> <p>User Manual of Product 2: Eureka NEC180 RapidClean Pro Cordless Stick and Handheld Vacuum Cleaner for Hard Floors, Battery Operated Portable Vacuum Cleaner with Maximum Efficiency Powerful Suction White</p>	<p>Eureka NEU180 and NEC180 Series Vacuum Cleaner Owner's Guide</p> <p>Comprehensive owner's guide for Eureka NEU180 series upright vacuum cleaners (including models NEU180, NEU181, NEU181A, NEU182A, NEU182B, NEU185, NEU188, NEU188A) and NEC180 series cordless stick and handheld vacuum cleaners. This manual provides important instructions for assembly, operation, maintenance, troubleshooting, and warranty information to prolong the life and ensure optimal performance of your Eureka vacuum.</p>
<p>Owner's Guide NEC370 Series Cordless Stick Vacuum Cleaner</p> <p>Thank you for purchasing your new Eureka vacuum!</p> <p>Important Instructions</p> <p>For easy assembly, please take a few moments to read this owner's guide.</p> <p>If you have questions about your new vacuum, please contact our customer service HELPLINE at 1-800-255-2888.</p> <p>We're here to help! Please read our safety instructions carefully.</p>  <p>www.eureka.com eureka</p>	<p>Eureka NEC370 Series Cordless Stick Vacuum Cleaner Owner's Guide</p> <p>This owner's guide provides essential instructions for the Eureka NEC370 Series Cordless Stick Vacuum Cleaner, covering assembly, operation, maintenance, and troubleshooting.</p>
 <p>Hard Surface Floor Steamer Owner's Guide Model 313 Safeguards & Power For Safe Use Safety Be Prepared Model 313</p>	<p>Eureka Hard Surface Floor Steamer Model 313 Owner's Guide</p> <p>Owner's guide for the Eureka Hard Surface Floor Steamer Model 313, providing instructions on assembly, use, maintenance, troubleshooting, and warranty information. Learn how to effectively clean and sanitize hard floors with steam.</p>
<p>User Manual of Product 1: eureka NEU180B PowerSpeed Bagless Upright Vacuum Cleaner, Lila, Purple</p> <p>User Manual of Product 2: Eureka NEC180 RapidClean Pro Cordless Stick and Handheld Vacuum Cleaner for Hard Floors, Battery Operated Portable Vacuum Cleaner with Maximum Efficiency Powerful Suction White</p>	<p>Eureka PowerSpeed Upright & RapidClean Pro Cordless Stick Vacuum Cleaners: Owner's Guide & User Manuals</p> <p>Comprehensive owner's guide and user manual for Eureka NEU180 series PowerSpeed Bagless Upright Vacuum Cleaners (including models NEU180, NEU181, NEU182B, NEU188) and NEC180 series RapidClean Pro Cordless Stick and Handheld Vacuum Cleaners. Includes important safeguards, assembly instructions, parts identification, usage guidelines, maintenance procedures for dust cups, filters, and brushrolls, troubleshooting tips, warranty information, and replacement parts.</p>