

- › **MAGNUSSEN** /
- › **Magnussen Audio W1 Wired Over-Ear Headphones Instruction Manual**

MAGNUSSEN W1

Magnussen Audio W1 Wired Over-Ear Headphones Instruction Manual

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Magnussen Audio W1 headphones deliver a high-fidelity stereo audio experience with precise acoustics, clarity, balance, and a broad sound spectrum. Designed for comfort and portability, these headphones feature an adjustable and foldable design, an integrated microphone for hands-free calls, and a detachable cable for convenience and durability.



Figure 1.1: Magnussen Audio W1 headphones, showcasing their sleek glossy black design.

2. SETUP INSTRUCTIONS

2.1 Unboxing and Initial Inspection

Carefully remove the Magnussen Audio W1 headphones and their accessories from the packaging. Verify that all components are present: the headphones, the detachable audio cable, and the rigid carrying case. Inspect for any visible damage.

2.2 Connecting the Audio Cable

1. Locate the audio input port on the left earcup of the headphones.
2. Insert the smaller end of the detachable audio cable firmly into the headphone's audio input port.
3. Connect the larger end of the audio cable into the 3.5mm audio jack of your compatible device (e.g., smartphone, tablet, computer).

2.3 Adjusting for Comfort

The Magnussen W1 headphones are designed for a precise and comfortable fit. Adjust the headband by sliding the earcups up or down until they rest comfortably over your ears. The earcups also pivot to conform to the shape of your head, ensuring optimal sound isolation and comfort during extended use.



Figure 2.1: Proper adjustment of the headband and earcups ensures a comfortable and secure fit.



Figure 2.2: The headphones are designed to be worn comfortably for various activities.

3. OPERATING INSTRUCTIONS

3.1 Audio Playback

Once connected to your audio device, simply start playing your desired audio content. The Magnussen W1 headphones will reproduce sound with high fidelity. Use your connected device's volume controls to adjust the audio level.

3.2 Hands-Free Functionality

The integrated microphone and remote control on the audio cable allow for hands-free operation. Specific functions may vary slightly depending on your connected device, but generally include:

- **Play/Pause Music:** Press the button on the remote once.
- **Answer/End Calls:** Press the button on the remote once during an incoming call to answer, or once during a call to end it.
- **Reject Call:** Press and hold the button on the remote for approximately 2 seconds during an incoming call.
- **Next Track:** Press the button on the remote twice quickly.
- **Previous Track:** Press the button on the remote three times quickly.

Ensure the microphone is positioned appropriately for clear voice transmission during calls.

4. MAINTENANCE AND CARE

4.1 Cleaning

- Use a soft, dry, lint-free cloth to wipe the surfaces of the headphones.
- For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners.
- Do not allow moisture to enter any openings.
- Clean the earpads regularly to prevent buildup.

4.2 Storage

When not in use, fold the Magnussen W1 headphones for compact storage. Place them in the provided rigid, lightweight carrying case to protect them from dust, scratches, and impacts. This case is designed to ensure the headphones' safety during transport.



Figure 4.1: The headphones can be folded for easy storage and transport in their protective case.

4.3 Detachable Cable Care

The detachable cable can be removed and replaced if necessary. Always grasp the plug, not the cable, when disconnecting to prevent damage to the cable or the headphone port. Avoid sharp bends or excessive pulling on the cable.

5. TROUBLESHOOTING

If you encounter issues with your Magnussen Audio W1 headphones, refer to the following common solutions:

Problem	Possible Cause	Solution
No sound or low volume	<ul style="list-style-type: none">• Cable not fully connected• Device volume too low• Incorrect audio output selected on device• Damaged cable	<ul style="list-style-type: none">• Ensure the audio cable is securely plugged into both the headphones and the audio source.• Increase the volume on your connected device.• Check your device's audio settings to ensure the correct output is selected.• Try a different audio cable if available.
Microphone not working	<ul style="list-style-type: none">• Cable not fully connected• Microphone muted on device• Incompatible device settings	<ul style="list-style-type: none">• Ensure the audio cable is fully connected.• Check your device's microphone settings and ensure it's not muted.• Verify that your device supports the inline remote/microphone functionality.
Uncomfortable fit	<ul style="list-style-type: none">• Headband not adjusted• Earcups not positioned correctly	<ul style="list-style-type: none">• Adjust the headband length by sliding the earcups up or down.• Pivot the earcups to find the most comfortable position over your ears.

6. PRODUCT SPECIFICATIONS

Model Name: MAGNUSSEN W1

Product Type: Over-Ear Headphones

Connectivity Technology: Wired

Color: Glossy Black

Form Factor: Supra-Aural (Over-Ear)

Special Features: Lightweight, Foldable

Cable Function: Detachable

Compatible Devices: Fully compatible with all devices featuring a 3.5mm audio jack

Age Range (Description): Adult

7. WARRANTY AND SUPPORT

7.1 Warranty Information

For detailed warranty information regarding your Magnussen Audio W1 headphones, please refer to the warranty card included with your product or visit the official Magnussen Audio website. Warranty terms and conditions may

vary by region and retailer.

7.2 Customer Support

If you require further assistance, technical support, or have questions not covered in this manual, please contact Magnussen Audio customer service through their official website or the contact information provided in your product packaging. Please have your product model number (W1) and purchase details ready when contacting support.