

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Devoko](#) /

› Devoko Patio Chaise Lounge Set DV18ATK Instruction Manual

## Devoko DV18ATK

# Devoko Patio Chaise Lounge Set DV18ATK Instruction Manual

Model: DV18ATK

## INTRODUCTION

Thank you for choosing the Devoko Patio Chaise Lounge Set. This manual provides essential information for the safe and efficient use of your new outdoor furniture. Please read these instructions carefully before use and retain them for future reference.

## IMPORTANT SAFETY INFORMATION

Protect the product from direct sunlight, rain, and snow. Avoid long-term exposure of the cushions to the sun to prevent fading and material degradation. Ensure the weight on each chaise lounge does not exceed 350 pounds to prevent damage or injury. Always place the furniture on a stable, level surface.

## PACKAGE CONTENTS

Your Devoko Patio Chaise Lounge Set includes the following items:

- Two (2) Patio Chaise Lounge Chairs
- Two (2) Cushions with Headrests
- One (1) Folding Side Table
- One (1) Instruction Manual

## PRODUCT FEATURES

- **Adjustable Backrest:** Features 5 adjustable positions for personalized comfort.
- **Durable Construction:** Made with a sturdy steel tube frame and black rattan weaving.
- **Comfortable Cushions:** Includes stylish cushions with headrests for enhanced relaxation. Cushions can be secured to prevent sliding.
- **Folding Design:** Chaise lounges are foldable for easy storage and portability.
- **Integrated Handle:** Convenient handle design for effortless carrying when folded.
- **Compact Side Table:** A folding table is included for holding drinks or small items.
- **Weather-Resistant Materials:** Designed for outdoor use, resistant to various weather conditions.

## SETUP AND ASSEMBLY

The Devoko Patio Chaise Lounge Set requires no assembly. The chairs and table arrive pre-assembled and are designed for immediate use after unfolding.

### 1. Unfolding the Chaise Lounge:

Carefully remove the chaise lounge from its packaging. Unfold the chair by extending the frame until it locks into place. Ensure all legs are stable on the ground.



*Image: Two unfolded Devoko patio chaise lounges with beige cushions and a small folding table positioned between them, ready for use.*

### 2. Attaching Cushions:

Place the provided cushions onto the chaise lounges. Use the integrated fixing ropes to secure the cushions to the chair frame, preventing them from sliding during use.



*Image: A close-up view of hands securing a cushion to the chaise lounge frame using a fixing rope.*

### **3. Setting up the Folding Table:**

Unfold the small side table by extending its legs until they lock securely. Place it between the chaise lounges or as desired.

## **OPERATION**

### **Adjusting the Backrest**

The chaise lounge features an adjustable backrest with 5 different positions. To adjust, lift the backrest slightly and move it to the desired notch on the support bar. Ensure it is securely seated in the chosen position before use.



# ADJUSTABLE BACKREST

Freely adjust 5 gears to meet your needs

*Image: A person demonstrating the adjustment of the chaise lounge backrest to one of its five available positions.*

## **Folding for Storage or Transport**

To fold the chaise lounge for storage or transport, first remove the cushion. Then, collapse the frame by releasing the locking mechanism (if present) and folding the chair inward. Use the integrated handle for easy carrying.



# HANDLE DESIGN

Easy to carry without assembly

*Image: A person carrying a folded Devoko patio chaise lounge by its integrated handle, highlighting its portability.*

## CARE AND MAINTENANCE

- **Cleaning the Frame:** Wipe the rattan and steel frame clean with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent water spots and rust.
- **Cushion Care:** The cushions are removable for cleaning. Spot clean with a mild detergent and water. Allow to air dry completely before reattaching or storing. Avoid prolonged exposure to direct sunlight to maintain color and material integrity.
- **Storage:** When not in use for extended periods, especially during harsh weather, it is recommended to fold and store the chaise lounges and table in a dry, protected area.
- **Regular Inspection:** Periodically check all bolts and connections to ensure they are tight and secure. Tighten if necessary.

## PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	DV18ATK
Material	Alloy Steel, Rattan
Color	Beige (Cushions), Black (Rattan/Frame)
Item Weight	Approximately 53.7 pounds (for the set)
Product Dimensions (Unfolded)	77 x 21 x 24 inches (L x W x H)
Assembled Height	12.99 inches
Assembled Width	25 inches
Assembled Length	40.94 inches
Max Load Capacity	350 lbs per chaise lounge
Special Feature	Adjustable Lumbar (Backrest)



Image: A diagram illustrating the key dimensions of the chaise lounge (77" L x 24" W x 21" H) and the folding table (15.75" x 15.75" x 15.75").

## TROUBLESHOOTING

- **Stability Issues:** If the chaise lounge feels unstable, ensure it is placed on a flat, level surface. Check that all folding mechanisms are fully engaged and locked.
- **Cushion Sliding:** If cushions slide, ensure the fixing ropes are securely tied to the chair frame.
- **Difficulty Folding/Unfolding:** Ensure no obstructions are present in the folding mechanism. Apply gentle, even pressure. Do not force the mechanism.
- **Rusting:** While designed for outdoor use, prolonged exposure to moisture can lead to rust on metal components. Ensure the product is dried thoroughly after rain and stored in a dry place when not in use.

## **WARRANTY AND CUSTOMER SUPPORT**

For warranty information or customer support regarding your Devoko Patio Chaise Lounge Set, please refer to the purchase documentation or contact Devoko customer service directly. Contact details can typically be found on the manufacturer's website or through your retailer.

**Online Support:** Visit the official Devoko website for FAQs and support resources.