

Manuals.plus /

› MAGNUSSEN /

› Magnussen Audio S3 Portable Bluetooth Speaker User Manual

## MAGNUSSEN S3

# Magnussen Audio S3 Portable Bluetooth Speaker

## INSTRUCTION MANUAL

### Introduction

Thank you for choosing the Magnussen Audio S3 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. Please read these instructions carefully before using the product.

#### Package Contents:

- Magnussen Audio S3 Portable Bluetooth Speaker
- Audio Cable
- Charging Cable (not explicitly listed but implied by 'Câble électrique' for power source)

### Product Overview



Figure 1: Front view of the Magnussen Audio S3 Portable Bluetooth Speaker, showcasing its sleek design and speaker

grille.



Figure 2: Top panel of the Magnussen Audio S3, showing the control buttons: Play/Pause, Volume Down (-), Volume Up (+), and Mode (M).



Figure 3: Rear panel of the Magnussen Audio S3, featuring the SD card slot, USB-A port (for power bank function), Micro-USB charging port, AUX input, and power switch.

## Setup

### 1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the Micro-USB port on the rear panel (refer to Figure 3) and plug the other end into a compatible USB power source. The charging indicator light will show the charging status and turn off or change color when fully charged.

### 2. Powering On/Off

- To power on: Locate the power switch on the rear panel (Figure 3) and slide it to the 'ON' position.
- To power off: Slide the power switch to the 'OFF' position.

### 3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the 'M' (Mode) button on the top panel (Figure 2) until you hear a Bluetooth pairing prompt.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Magnussen S3" from the list of devices.
4. Once paired, the speaker will indicate a successful connection, and you can begin playing audio wirelessly.

### 4. Connecting via Audio Cable (AUX)

For devices without Bluetooth, or if you prefer a wired connection, use the provided audio cable. Connect one end to the AUX input port on the rear panel of the speaker (Figure 3) and the other end to the audio

output jack of your device. The speaker will automatically switch to AUX mode, or you may need to press the 'M' (Mode) button to select AUX input.

## 5. Using an SD Card

Insert a compatible SD card (with pre-loaded music files) into the SD card slot on the rear panel (Figure 3). The speaker will automatically detect the card and begin playing music, or you may need to press the 'M' (Mode) button to select SD card mode.

## Operation

---

### 1. Music Playback Controls

Use the buttons on the top panel (Figure 2) to control music playback:

- **Play/Pause:** Press the Play/Pause button to start or pause music playback.
- **Volume Up (+):** Press to increase volume. Long press to skip to the next track.
- **Volume Down (-):** Press to decrease volume. Long press to go to the previous track.
- **Mode (M):** Press to switch between Bluetooth, AUX, and SD card modes.

### 2. Hands-Free Calling

When connected via Bluetooth to a smartphone, the speaker supports hands-free calling:

- **Answer Call:** Press the Play/Pause button to answer an incoming call.
- **End Call:** Press the Play/Pause button again to end a call.
- **Reject Call:** Long press the Play/Pause button to reject an incoming call.

### 3. Power Bank Function

The Magnussen S3 can act as a power bank to charge your mobile devices. Connect your device's charging cable to the USB-A port on the rear panel (Figure 3). The speaker will then provide power to charge your device.

### 4. Lamp Function

The speaker includes a lamp function. Refer to the product packaging or additional documentation for specific instructions on how to activate and control the lamp feature, as its operation is not detailed in the provided specifications.

## Maintenance

---

### 1. General Care

- Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.
- Do not drop or subject the speaker to strong impacts.
- Keep the speaker away from water, although it is rated as waterproof, prolonged submersion or exposure to harsh liquids should be avoided.

### 2. Cleaning

Wipe the speaker with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

## Troubleshooting

---

- **No Power:** Ensure the speaker is fully charged. Check the power switch is in the 'ON' position.
- **No Sound:** Check the volume level on both the speaker and your connected device. Ensure the correct input mode (Bluetooth, AUX, SD) is selected.
- **Bluetooth Connection Issues:** Ensure the speaker is in pairing mode. Turn off and on Bluetooth on your device. Move your device closer to the speaker. Disconnect and re-pair the speaker from your device's Bluetooth settings.
- **Poor Sound Quality:** Ensure the speaker and device are within Bluetooth range. Check for interference from other wireless devices. Try a different audio source or file.

## Specifications

<b>Model Name</b>	Magnussen S3
<b>Brand</b>	MAGNUSSEN
<b>Bluetooth Version</b>	4.1
<b>Battery Life</b>	Up to 6 hours
<b>Dimensions (L x W x H)</b>	13.8 x 13.8 x 23 cm
<b>Weight</b>	550 grams
<b>Color</b>	White
<b>Material</b>	Kunststoff (Plastic)
<b>Waterproof</b>	Yes
<b>Audio Output Mode</b>	Surround
<b>Connectivity Technology</b>	Bluetooth
<b>Special Features</b>	High-resolution audio, Bluetooth, Power Bank function, Lamp function
<b>Recommended Use</b>	For smartphone or tablet
<b>Compatible Devices</b>	Fully compatible with all devices

## Warranty Information

The Magnussen Audio S3 Portable Bluetooth Speaker comes with a limited warranty. Please retain your proof of purchase for any warranty claims. For specific terms and conditions of the warranty, refer to the documentation included with your product or contact Magnussen customer support.

## Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact Magnussen customer support. You can typically find contact information on the manufacturer's official website or on the product packaging.

