

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz 7.6 cu. ft. Mini Refrigerator User Manual

Galanz 7.6 cu. ft. Mini Refrigerator

Galanz 7.6 cu. ft. Mini Refrigerator User Manual

Model: 7.6 cu. ft. Mini Refrigerator

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Galanz 7.6 cu. ft. Mini Refrigerator. Please read this manual thoroughly before using the appliance and retain it for future reference.



Image: The Galanz 7.6 cu. ft. Mini Refrigerator in a vibrant red finish, showcasing its retro design and compact form factor.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded outlet. Do not use extension cords or ungrounded adapters.
- **Ventilation:** Allow adequate space around the refrigerator for proper ventilation. Do not block ventilation openings.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Child Safety:** Supervise children to ensure they do not play with the appliance. Old refrigerators can be dangerous if left unattended.
- **Cleaning:** Always unplug the refrigerator before cleaning or performing maintenance.

SETUP AND INSTALLATION

Unpacking

1. Remove all packaging materials, including the foam base and adhesive tape.
2. Inspect the refrigerator for any damage during transit. Report any damage to your retailer immediately.
3. Clean the interior and exterior surfaces with a soft cloth and mild detergent before use.

Placement

- Place the refrigerator on a flat, stable surface strong enough to support its weight when fully loaded.
- Avoid direct sunlight or heat sources (e.g., stove, heater) as this will affect cooling performance and energy consumption.
- Ensure there is at least 4 inches (10 cm) of space at the back and sides for proper air circulation.

Leveling

The refrigerator must be level for proper operation. Adjust the leveling feet at the bottom front of the unit by turning them clockwise to raise or counter-clockwise to lower.



Image: A diagram illustrating the dimensions of the Galanz 7.6 cu. ft. Mini Refrigerator, showing its height (58.35"), depth (24.53"), and width (21.73").

Initial Power-On

After placement and leveling, wait at least 2-4 hours before plugging the refrigerator into a power outlet. This allows the refrigerant to settle, preventing potential damage to the cooling system.

OPERATING YOUR REFRIGERATOR

Temperature Control

The temperature control dial is located inside the refrigerator compartment. Turn the dial to adjust the cooling intensity. Higher numbers indicate colder temperatures. Start with a medium setting (e.g., 3 or 4) and adjust as needed based on ambient temperature and food load.

Food Storage Guidelines

- **Refrigerator Compartment:** Ideal for fresh foods, beverages, and dairy products. Store fruits and vegetables in the crisper drawer to maintain freshness.
- **Freezer Compartment:** Suitable for frozen foods. Ensure packages are sealed to prevent freezer burn.
- Do not overload the refrigerator, as this can impede air circulation and cooling efficiency.



Image: The interior view of the Galanz 7.6 cu. ft. Mini Refrigerator, showing its spacious main compartment with adjustable glass shelves and door bins, and a separate top freezer compartment.



Image: The interior of the Galanz 7.6 cu. ft. Mini Refrigerator, demonstrating its capacity with various food items and beverages stored on shelves and in door bins.

MAINTENANCE AND CLEANING

Defrosting

This refrigerator features manual defrost. Frost buildup in the freezer compartment should be removed regularly to

maintain efficiency. To defrost:

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from both compartments and store them in a cooler.
3. Leave the doors open to allow frost to melt naturally. Place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly before plugging it back in and returning food.

Cleaning

- Clean the interior regularly with a solution of mild detergent and warm water. Avoid abrasive cleaners or harsh chemicals.
- Wipe down the exterior with a soft, damp cloth.
- Clean the door gaskets periodically to ensure a tight seal.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate	Not plugged in; circuit breaker tripped; power outage.	Check power cord connection; reset circuit breaker; check household power.
Temperature is too warm	Temperature control set too high; door opened too frequently; warm food placed inside; poor ventilation.	Adjust temperature control to a colder setting; minimize door openings; allow hot food to cool before storing; ensure adequate clearance around unit.
Unusual noises	Refrigerator not level; objects vibrating against the unit; normal operating sounds.	Level the refrigerator; ensure nothing is touching the back or sides; gurgling/hissing sounds are normal refrigerant flow.
Water on floor	Drain pan overflowing; door not sealing properly.	Check and empty drain pan; inspect door gasket for proper seal.

SPECIFICATIONS

Feature	Detail
Brand	Galanz
Item Weight	99.2 pounds

Feature	Detail
Product Dimensions (D x W x H)	24.53 x 21.73 x 58.35 inches
Capacity	1.6 Cubic Feet (Freezer), 6 Cubic Feet (Refrigerator)
Installation Type	Freestanding
Form Factor	Compact
Color	Red
Defrost System	Manual
Shelf Type	Wire
Number of Shelves	4
Number of Doors	1
Certification	Energy Star
First Available Date	August 21, 2018

WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Galanz website. Warranty terms and conditions may vary.

If you require technical assistance, parts, or have questions not covered in this manual, please contact Galanz customer support. Contact details are typically found on the product packaging, the official Galanz website, or your purchase receipt.

You can visit the Galanz Store for more information:[Galanz Official Store](#)

© 2023 Galanz. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question