

Amazon Echo Wall Clock

Amazon Echo Wall Clock User Manual

Model: Echo Wall Clock

Brand: Amazon

INTRODUCTION

The Amazon Echo Wall Clock is a companion device designed to work seamlessly with your compatible Amazon Echo device. It provides an easy-to-read analog time display and a digital 60-LED display for visualizing timers and alarms set through Alexa.

SETUP

1. Unboxing and Initial Setup

Upon opening the package, you will find the Echo Wall Clock, four AA batteries, and mounting hardware. Before mounting, ensure batteries are installed.

echo wall clock

An Echo companion to see timers at a glance



Image: The Amazon Echo Wall Clock displayed alongside a compatible Echo speaker.

2. Battery Installation

The Echo Wall Clock requires four AA batteries for operation. These are typically included in the box. To install, open the battery compartment on the back of the clock and insert the batteries, ensuring correct polarity.



Image: The rear view of the Echo Wall Clock, highlighting the battery compartment where four AA batteries are inserted.

3. Pairing with a Compatible Echo Device

The Echo Wall Clock connects to your Echo device via Bluetooth. Ensure your Echo device is powered on and within 30 feet of the clock. To initiate pairing, simply say: **"Alexa, set up my Echo Wall Clock."** Follow the voice prompts from your Echo device. The status light on the clock face will pulse orange during pairing and turn blue once successfully paired.

Your browser does not support the video tag.

Video: A quick guide demonstrating the unboxing and initial setup process for the Echo Wall Clock, including battery installation and pairing with an Echo device.

4. Mounting

Use the included mounting hardware to hang the clock on a wall. Choose a location within Bluetooth range of your paired Echo device.

Caution: Do not manually adjust the clock hands. This can damage the internal mechanism and prevent proper synchronization.

OPERATING THE ECHO WALL CLOCK

1. Time Display


The Echo Wall Clock features a classic analog display with hour and minute hands, providing a clear view of the current time.



Image: A detailed view of the Echo Wall Clock's face, showing the analog hands and minute markers.

2. Timer Visualization

The clock's outer edge features a 60-LED digital display. When you set a timer using your Echo device, the LEDs will illuminate and count down the remaining time, offering a visual representation of your timers at a glance.

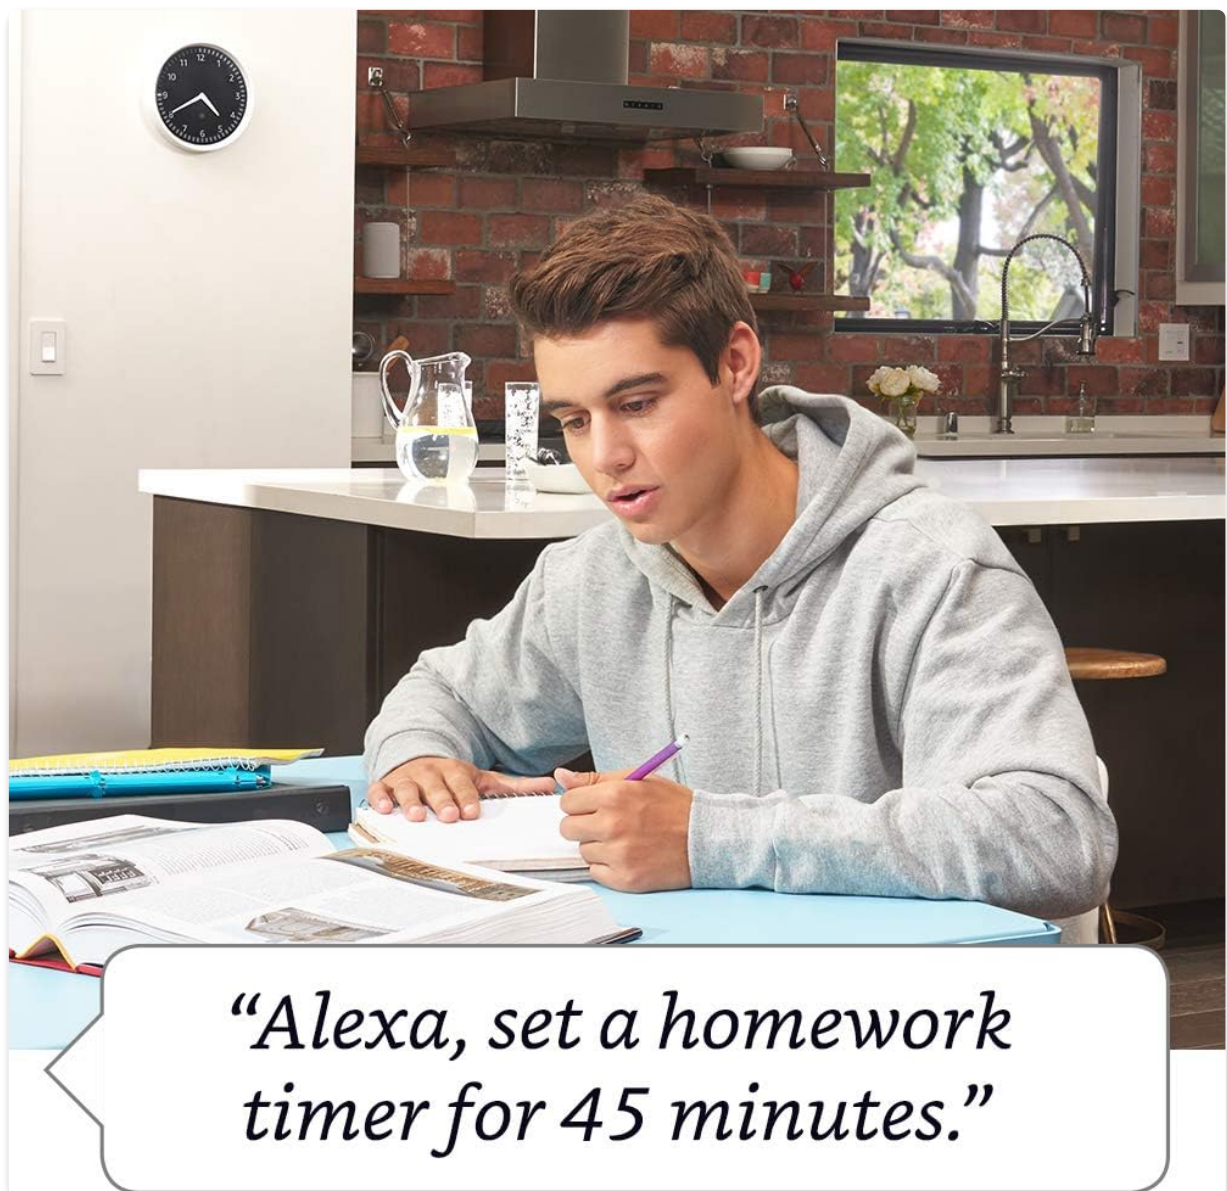

“Alexa, set a homework timer for 45 minutes.”

Image: A user interacting with an Echo device to set a homework timer, with the Echo Wall Clock visibly displaying the countdown in the background.

3. Setting Timers and Alarms

All timers and alarms are set through your paired Echo device using voice commands. For example, say: **"Alexa, set a 12-minute timer."** The clock will then visually count down the timer.



Image: A kitchen scene where a user is setting a pasta timer via voice command, and the Echo Wall Clock is showing the timer's progress.

4. Multiple Timers

The Echo Wall Clock can display multiple timers simultaneously. Each active timer will be represented by a segment of the LED ring, allowing you to track several events at once.

Your browser does not support the video tag.

Video: A demonstration of the Echo Wall Clock's timer functionality, showing how multiple timers are displayed and how the LEDs count down.

5. Alarm Notifications

When an alarm or timer concludes, the sound will come from your paired Echo device, and the LEDs on the Echo Wall Clock will flash to provide a visual alert.

MAINTENANCE

1. Battery Replacement

The Echo Wall Clock is powered by four AA batteries. When the batteries are low, the clock's performance may be affected. Replace all four batteries with new ones to ensure optimal functionality.

2. Cleaning

To clean your Echo Wall Clock, gently wipe the surface with a soft, dry, lint-free cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

3. Important Note

To prevent damage, never attempt to manually move or adjust the clock hands. All time adjustments and synchronizations are handled automatically via your paired Echo device.

TROUBLESHOOTING

- **Clock Not Pairing:** Ensure your Echo device is powered on and within Bluetooth range (approximately 30 feet). Try restarting both your Echo device and the Echo Wall Clock (by removing and reinserting batteries). Then, re-initiate the pairing process with the voice command: "Alexa, set up my Echo Wall Clock."
- **Incorrect Time Display:** The clock automatically syncs its time with your paired Echo device. If the time is incorrect, verify that the clock is successfully paired and within range. If issues persist, try re-pairing the device.
- **Short Battery Life:** Frequent use of the LED timer display can consume battery power more quickly. Consider using high-quality alkaline batteries. If battery life remains unusually short, ensure there are no constant disconnections/reconnections, which can drain power.
- **Hands Not Moving Correctly:** As a reminder, avoid physically manipulating the clock hands. If the hands are not moving or are stuck, try restarting the clock by removing and reinserting the batteries. If the problem continues after re-pairing, the device may be faulty.
- **No Sound for Alarms/Timers:** The Echo Wall Clock does not have its own speaker. All audio alerts for timers and alarms will come from your paired Echo device. Ensure your Echo device's volume is audible.

SPECIFICATIONS

Product Name	Amazon Echo Wall Clock
Model Number	B07FQDMKFT
Brand	Amazon
Dimensions	10-inch diameter
Power Source	4 x AA batteries (included)
Connectivity	Bluetooth
Display Type	Analog clock with 60 LED digital timer display
Compatibility	Requires a compatible Amazon Echo device (e.g., Echo, Echo Dot, Echo Show, Echo Plus, Echo Spot, Echo Input, Echo Studio, Echo Flex)

WARRANTY INFORMATION

For specific warranty details regarding your Amazon Echo Wall Clock, please refer to the official product page on Amazon.com or the warranty documentation included with your purchase. Warranty terms and conditions may vary.

SUPPORT

Should you require further assistance, have questions, or need to report an issue with your Amazon Echo Wall Clock, please visit the official Amazon support website or contact Amazon customer service directly. You can typically find contact information and extensive FAQs on the Amazon support portal.