

ensky PT-133

ENSKY PT-133 Paper Theater: Spirited Away, Thoughts of Kaonashi

Instruction Manual

INTRODUCTION

The ENSKY PT-133 Paper Theater is a paper craft kit designed to create a three-dimensional scene from the animated film 'Spirited Away', specifically depicting 'Thoughts of Kaonashi'. This kit utilizes multiple layers of laser-cut paper to achieve an impressive depth effect. Please read these instructions carefully before beginning assembly to ensure a successful and enjoyable crafting experience.

SAFETY INFORMATION

- This product contains small parts and is not suitable for children under 3 years old due to choking hazards.
- Assembly requires the use of sharp tools such as a craft cutter or scissors. Adult supervision is recommended for younger users.
- Use adhesive in a well-ventilated area. Avoid contact with skin and eyes. In case of contact, rinse thoroughly with water and seek medical attention if irritation persists.
- Keep all packaging materials away from children to prevent suffocation.

PACKAGE CONTENTS

The ENSKY PT-133 Paper Theater kit includes:

- Multiple sheets of laser-cut paper components.
- Instruction sheet (Japanese text, visual guide provided in this manual).

Note: Adhesive, craft cutter/scissors, and tweezers are **not** included and must be purchased separately.

SETUP

Required Tools

4. **Repeat:** Continue this process, adding each subsequent layer from back to front. Pay close attention to the alignment to maintain the intended depth and perspective of the scene.
5. **Assemble Frame:** Once all internal layers are assembled, construct the outer frame of the Paper Theater. This frame typically holds the layered scene together and provides a finished look.
6. **Final Touches:** Allow the adhesive to dry completely before handling or displaying the finished product.



A front-facing view of the fully assembled Paper Theater, showcasing the intricate layered design and the 'Spirited Away' scene with Kaonashi.



A side view of the completed Paper Theater, illustrating the multi-layered construction that creates a three-dimensional effect for the 'Spirited Away' scene.

MAINTENANCE

To ensure the longevity and appearance of your Paper Theater:

- **Dusting:** Gently dust the assembled Paper Theater with a soft brush or a can of compressed air to remove accumulated dust. Avoid using wet cloths.
- **Display:** Display the Paper Theater in a stable location, away from direct sunlight, high humidity, or extreme temperatures, which can cause the paper to fade, warp, or degrade.
- **Handling:** Handle the finished product with care to avoid bending or damaging the delicate paper layers.

TROUBLESHOOTING

- **Pieces not detaching cleanly:** Use a fresh, sharp blade on your craft cutter. Apply gentle, even pressure. If a piece is stubborn, try cutting from the opposite side.
- **Adhesive showing:** Use a minimal amount of adhesive. If excess glue appears, try to gently wipe it away with a dry cotton swab before it dries completely. For dried glue, a very fine-tipped tool might carefully remove it, but proceed with caution.
- **Layers not aligning:** Double-check the numbering or visual cues for each layer. Ensure you are applying adhesive to the correct points and taking your time to align before pressing firmly.
- **Finished product appears warped:** This can happen if too much adhesive is used, or if the product is exposed to humidity. Ensure you use appropriate adhesive and store the finished product in a dry environment.

SPECIFICATIONS

Model Number	PT-133
Brand	ensky
Product Dimensions (H x W x D)	Approx. 100 x 80 x 42 mm (3.9 x 3.1 x 1.7 inches)
Material	Paper
Theme	Anime (Spirited Away)
Country of Origin	Japan
Age Range (Description)	Kid (with adult supervision for tools)

WARRANTY AND SUPPORT

Specific warranty information for the ENSKY PT-133 Paper Theater kit is typically provided by the retailer at the time of purchase or by the manufacturer. Please refer to your purchase documentation or visit the official ensky website for details regarding product warranty and customer support.

For assistance with missing parts or manufacturing defects, please contact the retailer where you purchased the product or the manufacturer directly, providing your proof of purchase and model number (PT-133).