

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY RM-YD063 Remote Control User Manual for Sony KDL Series TVs

ECONTROLLY RM-YD063

ECONTROLLY RM-YD063 Remote Control User Manual

For Sony KDL Series Televisions

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY RM-YD063 remote control, designed for use with compatible Sony KDL series televisions. This remote offers direct functionality without requiring programming, making it ready for use once batteries are installed.

2. SETUP: BATTERY INSTALLATION

The RM-YD063 remote control operates on two AAA batteries. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover open.
3. Insert two AAA batteries, ensuring correct polarity (+ and - terminals) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use.





Image: Back view of the remote control with the battery compartment open for AAA battery installation.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the buttons on your ECONTROLLY RM-YD063 remote control.







Image: Front view of the RM-YD063 remote control with all buttons visible.

- **Power (Green button):** Turns the television on or off.
- **Input:** Selects the input source (e.g., HDMI 1, AV).
- **Numeric Keypad (0-9):** Used for direct channel selection.
- **VOL +/-:** Adjusts the television's volume level up or down.
- **CH +/-:** Changes television channels sequentially up or down.
- **Muting:** Toggles the television's audio mute function.
- **Home:** Accesses the television's main menu or smart features.
- **Menu:** Opens the television's settings or options menu.
- **Guide:** Displays the electronic program guide (EPG).
- **Return:** Navigates back to the previous screen or menu.
- **Display:** Shows on-screen information about the current program or input.
- **Options:** Accesses context-sensitive options relevant to the current screen.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate through menus and confirm selections.
- **Netflix, Internet Video, Qriocity:** Dedicated buttons for quick access to streaming services.
- **Play, Pause, Stop, Prev, Next, TrackID:** Media playback control buttons.
- **Wide:** Adjusts the screen aspect ratio.
- **Scene:** Selects various scene modes for picture and sound.
- **Subtitle/CC:** Toggles subtitles or closed captions on or off.

4. COMPATIBILITY

The ECONTROLLY RM-YD063 remote control is compatible with the following Sony KDL series TV models:

- KDL-40EX520
- KDL-40EX521
- KDL-40EX523
- KDL-40EX620
- KDL-40EX621
- KDL-46EX520
- KDL-46EX521
- KDL-46EX523
- KDL-46EX620
- KDL-46EX621
- KDL-32EX520
- KDL-32EX521
- KDL-32EX523

5. SPECIFICATIONS

- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounce
- **Batteries Required:** 2 x AAA (not included)
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 4 (Note: This remote is designed for a single TV)
- **Special Feature:** Ergonomic design

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check battery polarity to ensure they are inserted correctly.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no physical obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV's sensor.
- **Some buttons not working:**
 - Clean the remote's surface and buttons. Dust or debris might interfere with button presses.
 - Verify that the remote control is compatible with your specific TV model by checking the compatibility list in this manual.

7. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, high humidity, or direct sunlight.
- Do not drop the remote or subject it to strong impacts.
- Remove batteries if the remote will not be used for an extended period to prevent potential leakage and damage.

8. WARRANTY AND SUPPORT

Specific warranty and customer support information for the ECONTROLLY RM-YD063 remote control is not provided within this manual. For details regarding warranty coverage, returns, or technical assistance, please refer to the product packaging or contact the seller directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07FQLZY6N>

More documents and user manuals: <https://manuals.plus/>