

[Manuals.plus](#) /

› [Revlon](#) /

› Revlon 1875W Smooth Brilliance AC Motor Hair Dryer Instruction Manual

Revlon RVDR5251

Revlon 1875W Smooth Brilliance AC Motor Hair Dryer

Model: RVDR5251

Instruction Manual

PRODUCT OVERVIEW

The Revlon 1875W Smooth Brilliance AC Motor Hair Dryer is engineered for efficient and effective hair drying, providing a smooth and shiny finish. It features Tourmaline IONIC TECHNOLOGY to reduce frizz and static, and a Ceramic coating for even heat distribution. The high-powered AC motor is designed for durability and long-lasting performance.



Figure 1: Revlon 1875W Smooth Brilliance AC Motor Hair Dryer.

Key Features:

- **High-Powered AC Motor:** Professional quality motor designed to last up to 3X longer than DC motor dryers.
- **Tourmaline IONIC TECHNOLOGY:** Helps reduce frizz and static for shiny, healthy-looking hair.
- **Ceramic Coating:** Provides even heat distribution to minimize heat damage.
- **Multiple Heat/Speed Settings:** Features 3 heat settings (Cool, Warm, Hot) and 2 speed settings (Low, High) for versatile styling.
- **Cold Shot Button:** Releases cool air to set your style for long-lasting results.
- **Attachments:** Includes a smoothing concentrator for precise styling.
- **Soft-Feel Grip:** Designed for comfortable and controlled handling.
- **Hanging Ring:** For convenient storage.

SAFETY INFORMATION

For your safety, please read and understand all instructions before using this appliance. Keep this manual for future reference. Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

Important: Refer to the full product manual (PDF) for comprehensive Do's & Don'ts and detailed safety guidelines. A link to the official user manual is provided in the support section of this document.

SETUP

Before first use, ensure all packaging materials are removed. Inspect the hair dryer for any visible damage. This appliance is designed for household use only.

Attaching the Concentrator:

The smoothing concentrator attachment can be easily attached to the front nozzle of the hair dryer. Align the attachment with the nozzle and push firmly until it clicks into place. To remove, gently pull it off.



Figure 2: Key components of the hair dryer, including the smoothing concentrator.

OPERATING INSTRUCTIONS

1. **Plug In:** Plug the hair dryer into a standard electrical outlet.
2. **Select Settings:** Choose the appropriate heat and speed settings using the rocker switches on the handle.
 - **Heat Settings:** Cool, Warm, Hot
 - **Speed Settings:** Low, High
3. **Positioning:** Hold the hair dryer at a safe distance from your hair and scalp (approximately 6-8 inches) to prevent heat damage.
4. **Drying & Styling:** Turn on the hair dryer and direct the airflow towards your hair. Use a brush or your fingers to style as you dry.
5. **Cold Shot:** Once your hair is almost dry or styled, press and hold the Cold Shot button (often a distinct color like

pink or blue) to release a burst of cool air. This helps to set your style and add shine.

6. **Power Off & Unplug:** When finished, turn off the hair dryer using the power switch and unplug it from the outlet.



Tourmaline Ionic Technology®

is your secret weapon for a healthy-looking finish. Less frizz for shiny, smooth hair.



©2020 Helen of Troy. All rights reserved.

Figure 3: The hair dryer's controls, including heat/speed switches and the cold shot button.

MAINTENANCE

Cleaning the Air Filter:

Regular cleaning of the air filter is essential for optimal performance and longevity of your hair dryer. A clogged filter can lead to overheating and reduced airflow.

1. **Ensure Off & Unplugged:** Always ensure the hair dryer is turned off and unplugged from the power outlet before cleaning.
2. **Remove End Cap:** The rear end cap, which houses the air filter, is removable. Gently twist or pull the cap to detach it from the main body of the dryer.
3. **Clean Filter:** Use a soft brush or a vacuum cleaner with a brush attachment to remove any accumulated lint, dust, or

hair from the filter screen.

4. **Reattach Cap:** Once clean, align the end cap and twist or push it back into place until it is securely fastened.



Figure 4: The removable rear filter for easy cleaning, crucial for maintaining airflow and performance.

General Cleaning:

Wipe the exterior of the hair dryer with a soft, damp cloth. Do not use abrasive cleaners or immerse the appliance in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hair dryer does not turn on.	No power, tripped circuit breaker, or internal fault.	Check power outlet. Reset circuit breaker if necessary. If problem persists, contact customer support.
Reduced airflow or overheating.	Clogged air filter.	Clean the rear air filter as described in the Maintenance section.
Unusual noise or smell.	Internal issue or foreign object.	Immediately unplug the dryer. Do not use. Contact customer support.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Revlon customer support.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	RVDR5251
Wattage	1875 watts
Motor Type	AC Motor
Technology	Tourmaline IONIC TECHNOLOGY, Ceramic Coating
Heat Settings	3 (Cool, Warm, Hot)
Speed Settings	2 (Low, High)
Color	Black
Product Dimensions	3.63 x 10.63 x 8.38 inches
Item Weight	1.1 Pounds
Power Source	Corded Electric
UPC	761318152514, 761318452515

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Revlon website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Official User Manual (PDF): [Download PDF](#)

Manufacturer: Helen of Troy

© 2024 Revlon. All rights reserved.
For more information, visit [the REVLON Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question