

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Geko](#) /

› [Geko G01310 Iron Padlock 32mm Instruction Manual](#)

Geko G01310

Geko G01310 Iron Padlock 32mm Instruction Manual

Model: G01310

INTRODUCTION

This manual provides instructions for the safe and effective use of your Geko G01310 Iron Padlock. Please read thoroughly before use to ensure proper operation and maintenance.

SAFETY INFORMATION

- Keep keys in a secure location to prevent unauthorized access.
- Do not force the lock mechanism if it feels stiff; refer to the maintenance section.
- Keep the padlock and keys out of reach of children.
- Ensure the padlock's shackle is fully engaged and locked before relying on its security.

PRODUCT OVERVIEW

The Geko G01310 is a durable iron padlock, characterized by solid performance and made from high-quality materials. It is designed for general security applications and features a robust iron body and a steel shackle, operated by a key mechanism.

Components

- Padlock Body:** The main iron structure of the lock.
- Shackle:** The U-shaped bar that secures the item.
- Keyway:** The slot where the key is inserted.
- Keys:** Used to operate the lock mechanism.



An image showing the Geko G01310 iron padlock from the front, with a single key inserted into the key ring. The padlock body is black, and the shackle is silver. The Geko logo is visible on the front.



A close-up view of the key inserted into the key ring of the Geko G01310 iron padlock, highlighting the key's design and the Geko logo on the padlock body.

SETUP

- Inspect the Padlock:** Before first use, carefully inspect the padlock for any visible damage or manufacturing defects.
- Identify Keys:** Your padlock comes with multiple keys. It is recommended to keep one key in a safe, accessible location for regular use and store spare keys separately in a secure place.

OPERATING INSTRUCTIONS

Locking the Padlock

- Open the Shackle:** Insert the key into the keyway and turn it clockwise to release the shackle. Pull the shackle upwards to open the lock.
- Position the Shackle:** Place the open shackle around the items or fixture you wish to secure.
- Close the Shackle:** Push the shackle down firmly into the padlock body until it clicks into place, indicating it is secured.

4. **Remove the Key:** Turn the key counter-clockwise and remove it from the keyway. The padlock is now locked.

Unlocking the Padlock

1. **Insert the Key:** Insert the correct key into the keyway.
2. **Turn the Key:** Turn the key clockwise. The shackle will spring open or can be pulled open.
3. **Remove the Padlock:** Once the shackle is open, remove the padlock from the secured items.
4. **Remove the Key:** Turn the key counter-clockwise and remove it.



An angled view of the Geko G01310 iron padlock, showing its black body, silver shackle, and three keys resting beside it. The padlock appears in a locked position.



A close-up image focusing on the three keys provided with the Geko G01310 iron padlock, showing their design and metallic finish.

MAINTENANCE

To ensure the longevity and smooth operation of your Geko G01310 padlock, follow these maintenance guidelines:

- **Lubrication:** Periodically (e.g., every 6-12 months, or more often in harsh environments) apply a small amount of graphite-based lubricant or a specialized lock lubricant into the keyway and around the shackle mechanism. This helps prevent sticking, corrosion, and wear. Avoid oil-based lubricants as they can attract dirt and grime.
- **Cleaning:** Wipe the padlock body with a dry, clean cloth to remove dirt, dust, and grime. Do not use harsh chemical cleaners, as they may damage the finish or internal components.
- **Storage:** When the padlock is not in use, store it in a dry environment to prevent moisture accumulation and potential rust formation.

TROUBLESHOOTING

Key is difficult to insert or turn

Solution: Apply a small amount of lock lubricant into the keyway. Ensure the key is fully inserted before attempting to turn it. Check the keyway for any foreign debris and carefully remove if present.

Shackle is stiff or stuck

Solution: Lubricate the shackle mechanism where it enters the padlock body. Ensure the key is turned fully to release the shackle. Gently wiggle the shackle while turning the key.

Padlock appears rusted

Solution: For light surface rust, gently clean with a fine wire brush or steel wool and apply a rust-inhibiting spray. For severe rust that affects functionality, consider replacing the padlock. Regular maintenance can significantly prevent rust formation.

SPECIFICATIONS

Feature	Detail
Brand	Geko
Model Number	G01310
Material	Iron
Color	Multicolor (primarily black body)
Number of Parts	1
Package Dimensions	35 x 15 x 8 cm
Item Weight	960 g
Manufacturer	Firma Handlowa GEKO

WARRANTY AND SUPPORT

For specific warranty information or technical support regarding your Geko G01310 Iron Padlock, please refer to the retailer where the product was purchased. It is advisable to retain your purchase receipt as proof of purchase for any warranty claims. You may also contact Geko customer service directly for further assistance.