

[manuals.plus](#) /

 
› [Bosch](#) /

› [Bosch Multitalent 8 Food Processor \(MC812S814\) Instruction Manual](#)

Bosch MC812S814

Bosch Multitalent 8 Food Processor (MC812S814) Instruction Manual

Model: MC812S814 | Power: 1250W



1. INTRODUCTION

Thank you for choosing the Bosch Multitalent 8 Food Processor. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions carefully before first use and keep them for future reference.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the motor unit in water or other liquids. Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- **Blades and Sharp Edges:** Blades and cutting discs are extremely sharp. Handle them with extreme care to avoid injury. Never touch the blades with your bare hands, especially when the appliance is plugged in.
- **Children and Vulnerable Persons:** This appliance should not be used by children. Keep the appliance and its cord out of reach of children. Persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, should be supervised or instructed on safe use.
- **Proper Use:** Never operate the appliance without ingredients in the bowl or blender. Do not overload the appliance. Allow the motor to cool down if it becomes hot during prolonged use.
- **Damage:** Do not use the appliance if the power cord, plug, or any other part is damaged. Contact authorized service personnel for repairs.
- **Attachments:** Only use original Bosch accessories and attachments.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Bosch Multitalent 8 Food Processor.



Image 1: The Bosch Multitalent 8 Food Processor base unit with the 3.9L processing bowl, lid, and pusher assembled. The control dial is visible on the front.



Image 2: The food processor in operation, demonstrating its chopping function with various vegetables inside the processing bowl. A prepared tart is visible in the background.



Image 3: The Bosch Multitalent 8 Food Processor with the 1.5L Tritan blender attachment in use, blending fruits for a smoothie. Other food items are in the background.



Image 4: A close-up view of the Smart Tool Detection mechanism, showing the red coupling on the base unit and the corresponding part on the processing bowl's lid, which ensures correct speed settings.

Key Components:

- **Motor Unit:** The main base with the 1250W motor and control dial.
- **Processing Bowl (3.9L):** Large capacity bowl for various food preparation tasks.
- **Lid with Filler Opening and Pusher:** For safely adding ingredients during operation.
- **Universal Blade:** For chopping, mixing, and pureeing.
- **Dough Tool:** For kneading dough.
- **Shredding/Slicing Discs:** Various discs for grating, slicing, and shredding.
- **Tritan Blender (1.5L):** Durable blender attachment for smoothies, soups, and crushing ice.
- **Accessory Holder:** For convenient storage of smaller accessories.

4. SETUP

Follow these steps to prepare your food processor for use.

1. **Unpack:** Carefully remove all parts from the packaging. Retain packaging for potential future transport or storage.
2. **Clean:** Before first use, clean all removable parts (bowl, lid, tools, blender) with warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Place the Motor Unit:** Place the motor unit on a clean, stable, and dry surface.
4. **Assemble Processing Bowl:** Place the processing bowl onto the motor unit. Turn it clockwise until it locks into place.
5. **Insert Tool:** Place the desired tool (e.g., universal blade, dough tool, or disc with its carrier) onto the drive shaft inside the bowl.
6. **Attach Lid:** Place the lid onto the processing bowl and turn it clockwise until it locks. Ensure the safety interlock engages. The appliance will not operate if the lid is not correctly secured.
7. **Assemble Blender (if using):** For blender use, remove the processing bowl. Place the blender jug onto the motor unit and turn it clockwise to lock. Ensure the lid is securely fastened.

5. OPERATING INSTRUCTIONS

Operating your Bosch Multitalent 8 is straightforward thanks to its intuitive controls and Smart Tool Detection.

5.1. Power Connection and Control Dial

- Plug the appliance into a suitable power outlet.
- The control dial on the front of the motor unit allows you to select speed settings.
- **Smart Tool Detection:** The appliance automatically detects the attached accessory and adjusts the available speed range for optimal performance.
- **Stepless Speed Selection:** Turn the dial to the right to gradually increase the speed from minimum (min) to maximum (max).
- **Pulse Function (PULSE):** For short bursts of maximum power, turn the dial to the 'PULSE' setting and hold it. Release to stop. This is ideal for chopping hard ingredients or for quick mixing.
- To switch off the appliance, turn the dial to '0/off'.

5.2. Using the Processing Bowl

1. Ensure the bowl, desired tool, and lid are correctly assembled and locked.
2. Add ingredients to the bowl. For solid ingredients, use the filler opening in the lid and the pusher to guide them. Never use your fingers or other utensils to push food into the opening while the appliance is running.
3. Select the desired speed using the control dial.
4. After processing, turn the dial to '0/off' and unplug the appliance.
5. Carefully unlock and remove the lid, then the tool, and finally the bowl.

5.3. Using the Tritan Blender

1. Ensure the blender jug is securely attached to the motor unit and its lid is closed.
2. Add liquids or soft ingredients to the blender jug. Do not exceed the maximum fill level indicated.
3. Select the desired speed or use the 'PULSE' function for crushing ice or quick blending.
4. After blending, turn the dial to '0/off' and unplug the appliance.
5. Carefully unlock and remove the blender jug.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your food processor.

- **Always Unplug:** Before cleaning, always unplug the appliance from the power outlet.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not use abrasive cleaners. Never immerse the motor unit in water.
- **Dishwasher-Safe Parts:** The processing bowl, lid, pusher, universal blade, dough tool, shredding/slicing discs, and Tritan blender jug are generally dishwasher-safe. Place them in the upper rack of the dishwasher.
- **Hand Washing:** For hand washing, use warm soapy water and a soft brush for hard-to-reach areas. Handle sharp blades with extreme caution.
- **Drying:** Ensure all parts are thoroughly dry before reassembling or storing.
- **Storage:** Store the cleaned and dried appliance and its accessories in a safe, dry place.

7. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in; bowl/lid not correctly locked; safety interlock not engaged.	Check power connection. Ensure bowl and lid are securely locked into place.
Motor stops during operation.	Overload protection activated; appliance overheated.	Unplug, remove some ingredients, and let the appliance cool down for at least 30 minutes before restarting.
Poor processing results.	Incorrect speed selected; too many ingredients; ingredients too large.	Adjust speed. Reduce quantity of ingredients. Cut larger ingredients into smaller pieces.
Loud noise during operation.	Appliance not stable; foreign object in bowl/blender.	Ensure appliance is on a flat, stable surface. Check for any obstructions and remove them.

If the problem persists after attempting these solutions, please contact Bosch customer service.

8. SPECIFICATIONS

- **Brand:** Bosch
- **Model Number:** MC812S814
- **Color:** Silver
- **Product Dimensions:** 43 x 25 x 30 cm (approx. 16.9 x 9.8 x 11.8 inches)
- **Item Weight:** 6.2 kg (approx. 13.7 lbs)
- **Capacity (Processing Bowl):** 3.9 Liters
- **Capacity (Blender):** 1.5 Liters
- **Wattage:** 1250 Watts
- **Voltage:** 220 Volts
- **Material:** Plastic
- **Number of Speeds:** 2 (Stepless + Pulse)
- **Sound Level:** 80 Decibels
- **Special Features:** Dishwasher-safe parts, Smart Tool Detection, Plastic mixing bowl
- **Recommended Uses:** Fine grinding, chopping, kneading, grinding, grating

9. WARRANTY AND SUPPORT

Your Bosch Multitalent 8 Food Processor comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, spare parts, or service inquiries, please visit the official Bosch website or contact your local Bosch customer service center. You can usually find contact information on the Bosch website or in the documentation provided with your appliance.

When contacting support, please have your model number (MC812S814) and purchase date ready.

© 2026 Bosch. All rights reserved.