

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Andis](#) /

> Andis 24440 Select Cut 5-Speed Adjustable Blade Cord/Cordless Clipper Kit User Manual

## Andis 24440 Select Cut

# Andis 24440 Select Cut 5-Speed Adjustable Blade Cord/Cordless Clipper Kit User Manual

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions before using this appliance. To reduce the risk of electric shock, burns, fire, or injury to persons:

- Do not use this appliance near water, such as in a bathtub, washbowl, or shower.
- Keep out of reach of children.
- Dispose of the battery according to local regulations. Do not incinerate or expose to high temperatures.
- Always unplug the appliance from the power outlet immediately after use and before cleaning.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.

## PRODUCT OVERVIEW

---

The Andis Select Cut Clipper is a versatile tool designed for various hair cutting and trimming needs. It features a cord/cordless design, a digital LCD display, and a powerful lithium-ion battery.

### Included Components:

- Adjustable Blade Clipper
- Attachment Combs: 1/8" (3mm), 1/4" (6mm), 3/8" (10mm), 1/2" (13mm)
- Stainless Steel Scissors
- Styling Comb
- Charging Adaptor and Cord
- Storage Case
- Blade Brush and Oil
- Barber Cape



Image: Andis Select Cut Clipper with its complete 10-piece kit, including various attachment combs, scissors, styling comb, charging adapter, storage case, blade brush, oil, and barber cape.

## SETUP

### 1. Charging the Clipper

Before first use, fully charge the clipper. Connect the charging adaptor to the clipper and plug it into a suitable electrical outlet. The digital LCD display will indicate battery level during charging. A full charge provides over 4 hours of run time.





Image: The Andis Select Cut Clipper shown connected to its charging cable, illustrating the charging process.

## 2. Attaching Guide Combs

Select the desired attachment comb (1/8", 1/4", 3/8", or 1/2") for your preferred cutting length. Align the comb with the clipper blade and snap it securely into place. Ensure the comb is firmly attached before operation.

### 3. Adjusting the Blade

The clipper features a 4-position adjustable blade, allowing for fine-tuning of cutting lengths from 1mm to 1.9mm. Use the blade adjustment lever to select the desired length. A locking switch keeps the blade in place during use.

## OPERATING INSTRUCTIONS

---

### 1. Powering On/Off

Press the power button to turn the clipper on. Press it again to turn the clipper off.

### 2. Adjusting Speed Settings

The clipper offers intelligent 5-speed control. Use the '+' and '-' buttons to cycle through the speed settings. The digital LCD display will show the current speed level. Higher speeds are suitable for thicker hair, while lower speeds are ideal for fine hair or sensitive areas.

### 3. Corded and Cordless Operation

The clipper can be used cordlessly once charged, providing flexibility. For continuous operation or if the battery is low, connect the charging cord for corded use.

### 4. Cutting Techniques

For best results, ensure hair is clean and dry. Guide the clipper against the direction of hair growth. Use the provided attachment combs for uniform length. The adjustable blade is useful for blending and achieving precise lines around necklines, ears, and sideburns.

## MAINTENANCE

---

### 1. Blade Cleaning and Oiling

After each use, turn off and unplug the clipper. Use the provided blade brush to remove any loose hair from the blades. Apply a few drops of the included blade oil to the teeth of the blades. This helps maintain blade sharpness and prevents rust. Run the clipper for a few seconds to distribute the oil.

### 2. General Cleaning

Wipe the clipper body with a clean, dry cloth. Do not immerse the clipper in water or use harsh chemicals for cleaning.

### 3. Storage

Store the clipper and its accessories in the provided storage case in a cool, dry place, away from moisture and direct sunlight.

## TROUBLESHOOTING

---

- **Clipper not turning on:** Ensure the clipper is charged. If using corded, check the power connection.
- **Poor cutting performance:** Clean and oil the blades. Ensure attachment combs are correctly seated. The blade may need replacement if it is dull or damaged.
- **Excessive noise or vibration:** Clean and oil the blades. If the issue persists, contact customer support.
- **Battery not holding charge:** Ensure the charging cable and adapter are functioning correctly. If the

battery life has significantly decreased over time, it may be reaching the end of its lifespan.

## SPECIFICATIONS

---

Feature	Detail
Model Name	Andis Select Cut® 5-Speed Adjustable Blade Cordless Clipper Kit
Power Source	Battery Powered (Lithium-ion)
Run Time	4+ hours on a single charge
Blade Material	Titanium Ceramic
Adjustable Blade Lengths	1mm to 1.9mm
Speed Settings	5-speed control
Item Weight	1.6 Pounds
Item Dimensions	10 x 6 x 3 inches
Color	Black
UPC	040102244407

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the documentation included with your product or visit the official Andis website. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact Andis customer service directly.